



TX1

WORKSHOP MANUAL

Section 8B

Wiring Diagrams

At the time of going to print, the illustrations and text appearing in this workshop manual are representative of manufacture. Whilst retaining the basic features shown herein, the manufacturer reserves the right to make, at any time, and without necessarily updating this manual, any alterations considered convenient for improvement or for any other reason.

Whilst every effort is made to ensure the accuracy of the particulars contained herein, London Taxis International will not under any circumstances be held liable for any inaccuracies or the consequences thereof.

<u>Contents</u>	<u>Page</u>
Introduction	5
Location of harnesses (1)	6
Location of harnesses (2)	7
Fuse, relay & ECU locations (serial nos. 100016 – 102766)	8
Fuse, relay & ECU locations (serial no. 102767 onwards)	9
Locations of principal connectors	10
Locations of earth points	11

Circuit diagrams

Boot lamp	12	Illumination 107215 onwards	55
Central door locking (CDL) 100016-102766	13	Immobiliser/Alarm 100016-102766	56
Central door locking (CDL)102767-105629	14	Immobiliser/Alarm 102767-107214	57
Central door locking (CDL)105630 onwards	15	Immobiliser/Alarm 107215 onwards	58
Charging 100016-107214	16	Indicator/Hazard 100016-102766	59
Charging 107215 onwards	17	Indicator/Hazard 102767-107214	60
Cigarette lighter power point 100016-102766	18	Indicator/Hazard 107215 onwards	61
Cigarette lighter power point 102767-107214	19	Interior lighting front 100016-107214	62
Cigarette lighter power point 107215 onwards	20	Interior lighting front 107215 onwards	63
Climate 100016-102766	21	Interior lighting rear 100016-107214	64
Climate 10276-107214	22	Interior lighting rear 107215 onwards	65
Climate 107215	23	Mirror 100016-105629	66
Clock 100016-102766	24	Mirror 105630 onwards	67
Clock 102767-107214	25	Overdrive 100016-102766	68
Clock 107215 onwards	26	Overdrive 102767-107214	69
Communications 100016-107214	27	Overdrive 107215 onwards	70
Communications 107215 onwards	28	Power 100016-107214	71
Door locking 100016-102766	29	Power 107215 onwards	72
Door locking 102767 onwards	30	Radio 100016 onwards	73
Exterior lighting 100016-107214	31	Reading lamp	74
Exterior lighting 107215 onwards	32	Starting auto 100016-102766	75
Exterior lighting reverse lamp	33	Starting auto 102767-107214	76
Fog, front 100016-107214	34	Starting auto 107215 onwards	77
Fog, front 107215 onwards	35	Starting manual 100016-102766	78
Fog, rear 107215 onwards	36	Starting manual 102767 onwards	79
Fuel cut off 100016-102766	37	Stop lamp 100016 onwards	80
Fuel cut off 102767-107214	38	Taximeter 100016-105629	81
Fuel cut off 107215 onwards	39	Taximeter 105630 onwards	82
Gauges	40	Warning lamps 100016-102766	83
Glow 100016-102766	41	Warning lamps 102767-107214	84
Glow/EGR 102767-107214	42	Warning lamps 107215 onwards	85
Glow/EGR 107215 onwards	43	Wheelchair release 100016-102766	86
Headlamp	44	Wheelchair release 102767 onwards	87
Headlamp levelling 100016-107214	45	Windows, front 100016-105629	88
Headlamp levelling 107215 onwards	46	Windows, front 105630-107214	89
Heater, front 100016-102766	47	Windows, front 107215 onwards	90
Heater, front 102767 onwards	48	Windows, rear 100016-107214	91
Heater, rear	49	Windows, rear 107215 onwards	92
Heated rear screen 100016-107214	50	Wipe/Wash, front 100016-107214	93
Heated rear screen 107215 onwards	51	Wipe/Wash, front 107215 onwards	94
Horn	52	Wipe/Wash, rear 100016-102766	95
Horn 107215 onwards	53	Wipe/Wash, rear 102767 onwards	96
Illumination 100016-107214	54		

Introduction

Each wiring diagram in this manual covers an individual system on the vehicle. Each diagram is schematic, and wherever possible components are set out as on the vehicle - normally with the front of the vehicle to the top of the page. Where the wiring has been altered since TX1 introduction, both the earlier and later wiring diagrams are included (where applicable, the serial numbers shown at the bottom of the page identify which diagram should be used).

Each wire in the circuit is identified by its colour code (one or two letters) followed by a number. The first letter is the primary colour code of the wire, the second letter indicating the colour of any tracer marking on the wire.

The wiring colour codes and fuse layout and ratings are shown in the tables below. The wire numbers shown following the colour codes have no particular significance in service except to assist in the identification of a particular wire if it is necessary to seek assistance from the manufacturer.


The harnesses are shown on pages 6 and 7. The locations of the ECUs and relays are shown on pages 8 and 9. The locations of connectors and earthing points referred to in the wiring diagrams are shown on pages 10 and 11. The terms left, right, front, rear, LHS and RHS are relative to the driving position.

Fuse layout and ratings			
9 8 7 6 5 4 3 2 1	Air Con	Mirror / Audio / Intercom	Window Lift Rear
	20 _A	10 _A	25 _A
	Heated Rear Screen	Heater Rear	Window Lift Front
	20 _A	10 _A	25 _A
	Fuel Cut Off	Heater Front	Aux 2
	10 _A	15 _A	20 _A
	Motion Lock	Wash / Wipe Rear	Aux 1
	5 _A	10 _A	20 _A
	Reversing Light	Wash / Wipe Front	Cigar Power Point
	10 _A	15 _A	20 _A
4 3 2	Indicator	Stop Lamp	Immobiliser
	10 _A	10 _A	10 _A
	Side Tail	Fog Lamp	Horn
	10 _A	10 _A	10 _A
2 1	R/H Dip Main	Interior Light	Taxi Meter
	15 _A	10 _A	10 _A
1	L/H Dip Main	Hazards	CDL
	15 _A	10 _A	20 _A
	A	B	C

Wiring Colour Codes


Black	B
Blue	U
Brown	N
Green	G
Light Green	L
Orange	O
Pink	K
Purple	P
Red	R
Slate	S
White	W
Yellow	Y

LOCATIONS OF WIRING HARNESSES (1)

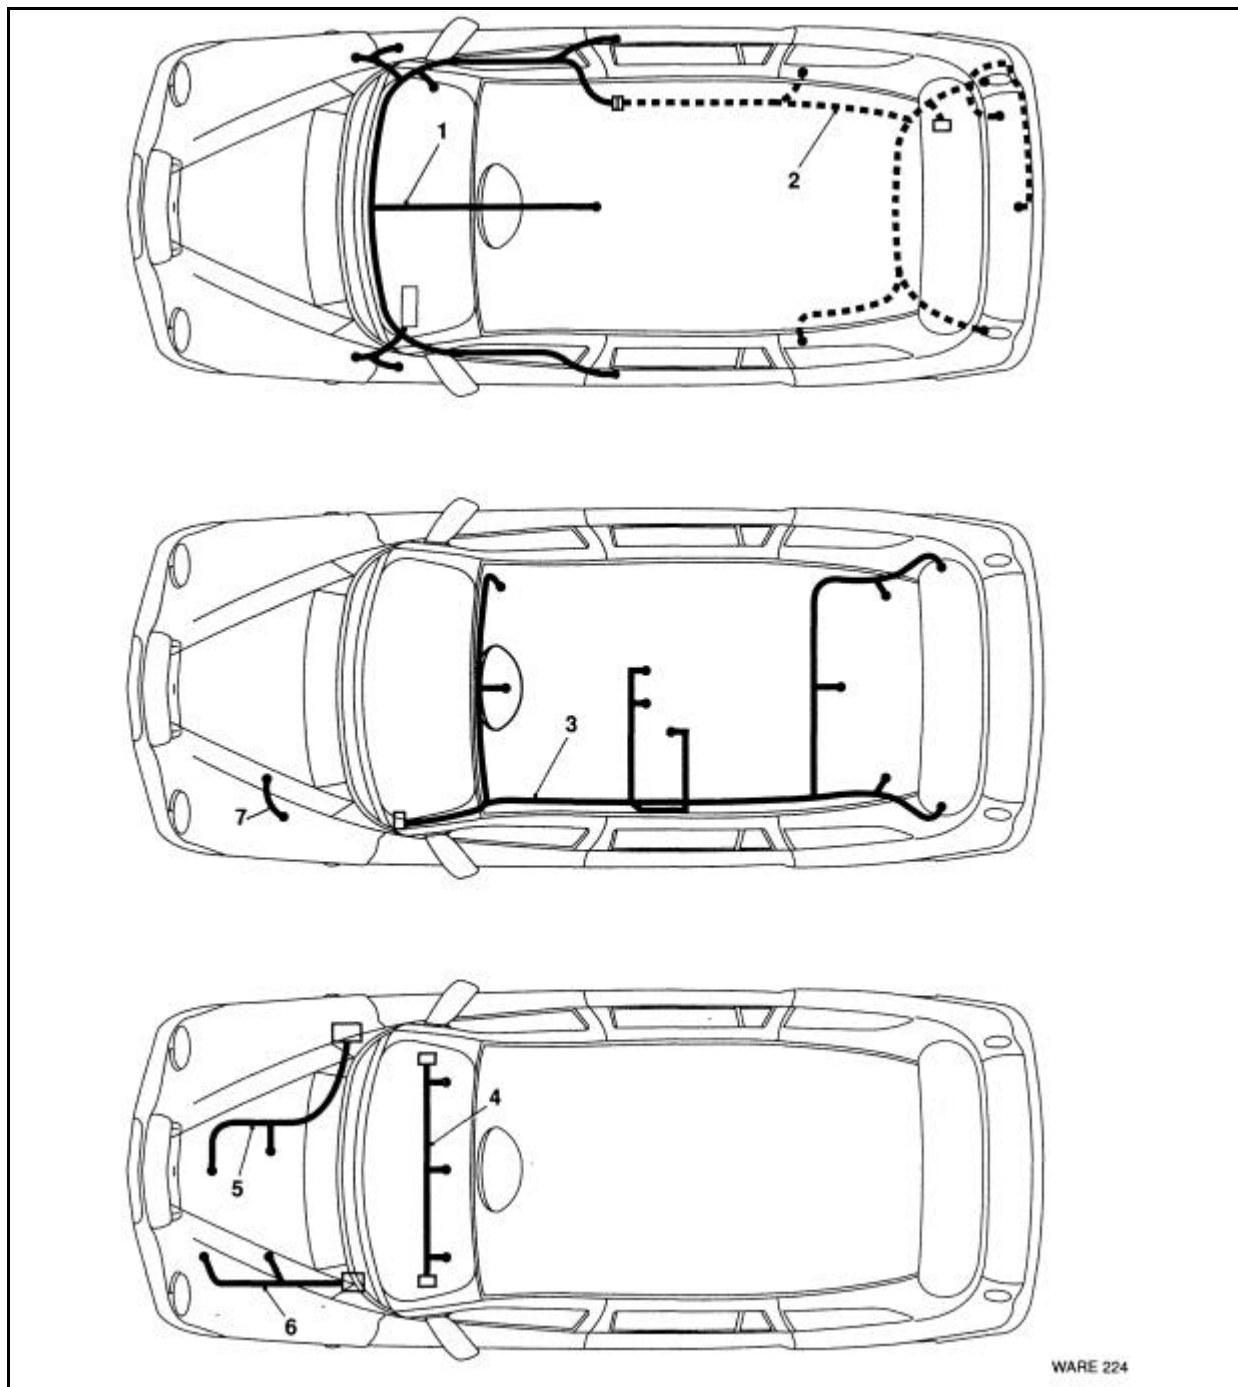

- | | |
|-------------------------|------------------------------|
| 1. Front harness | 4. Facia harness |
| 2. Rear (floor) harness | 5. Engine harness |
| 3. Roof harness | 6. Air-conditioning harness |
| | 7. Brake sensor harness link |


LOCATIONS OF WIRING HARNESSSES (2)

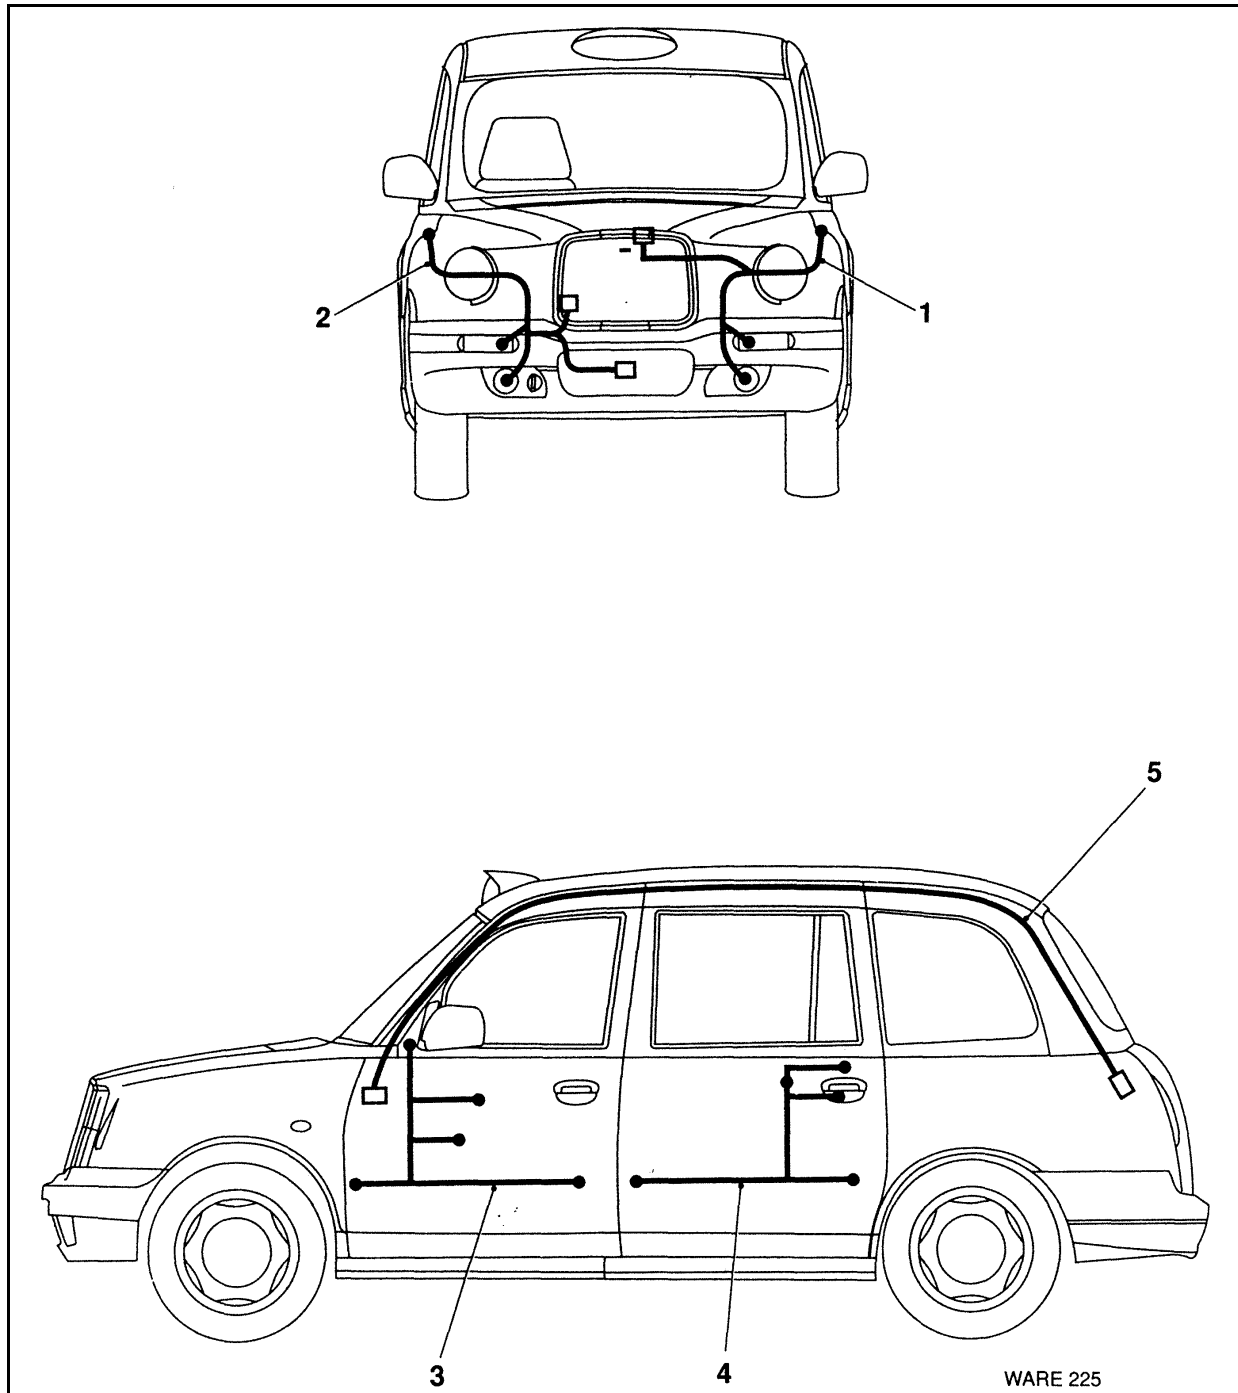

1. Under bonnet harness LH
2. Under bonnet harness RH
3. Front door RH (RHD)

4. Rear door LH (RHD)
5. Aerial extension lead


FUSE, RELAY & ECU LOCATIONS (FROM SERIAL NO. 100016-102766)

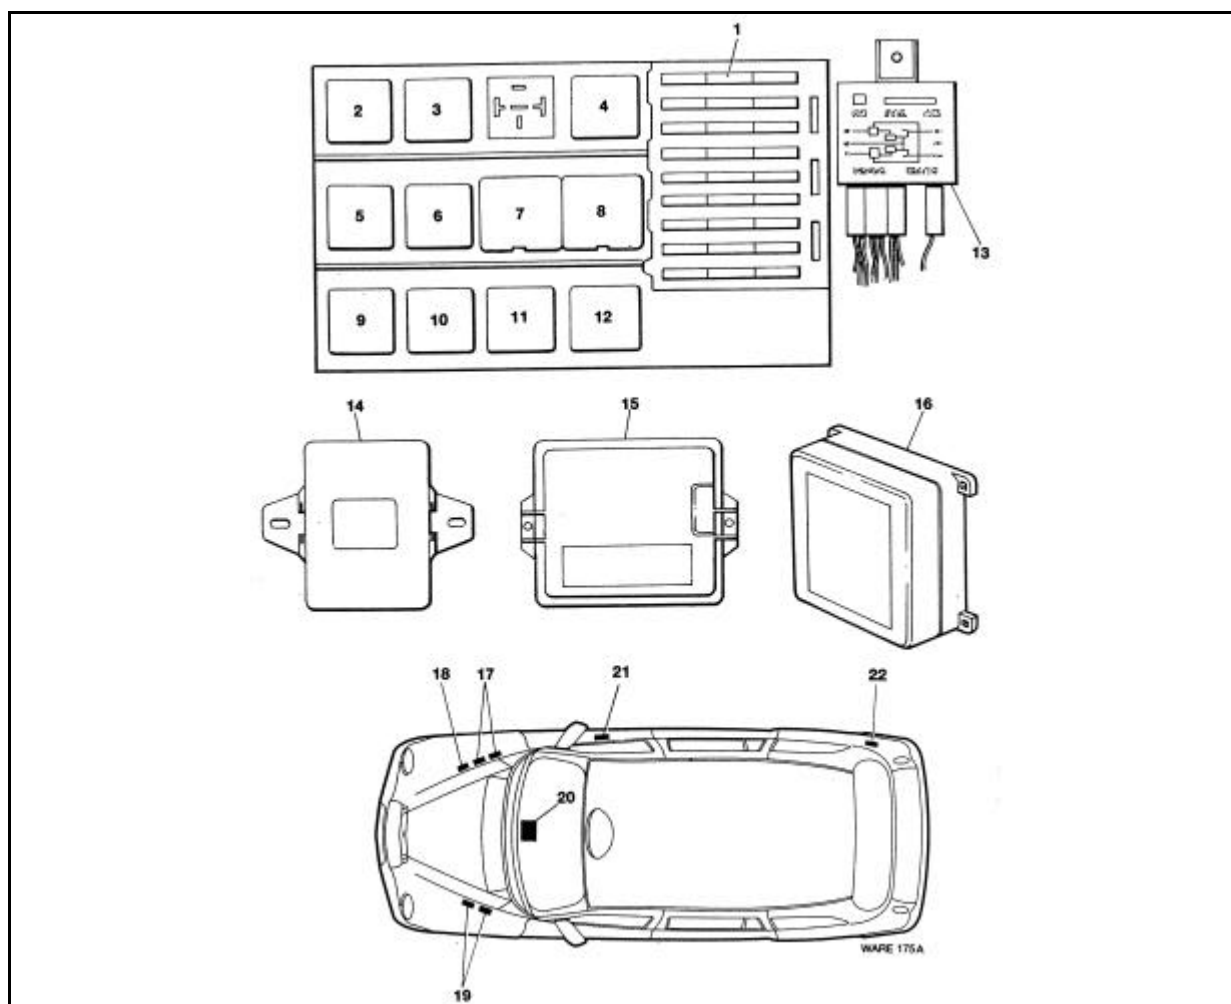

- | | |
|---|---------------------------------|
| 1. Fuse box or Fuse holder/connector blocks | 12. ECU heated rear screen |
| 2. Door locking relay | 13. ECU central locking |
| 3. Door locking relay | 14. ECU glow plug timer |
| 4. Accessory circuit control | 15. ECU motion door locking |
| 5. Front fog light relay | 16. ECU security system |
| 6. Rear fog light relay | 17. Glow plug heater relays |
| 7. ECU courtesy light delay (driver's) | 18. Automatic inhibitor relay |
| 8. ECU courtesy light delay (passenger's) | 19. Air conditioning relays |
| 9. ECU lights on warning | 20. Amplifier intercom |
| 10. ECU intermittent wipe (front) | 21. ECU window down |
| 11. ECU direction indicator and hazard | 22. ECU intermittent rear wiper |


NOTE: The illustration shows the layout used from the introduction of TX1. During the first year of production, the fuse box was replaced by three fuse holder/connector blocks. Fuse values and the relative positions of relays were not changed. The 5 Amp fuse at location 6A was adopted in late 1999.

FUSE, RELAY & ECU LOCATIONS (FROM SERIAL NO. 102767)

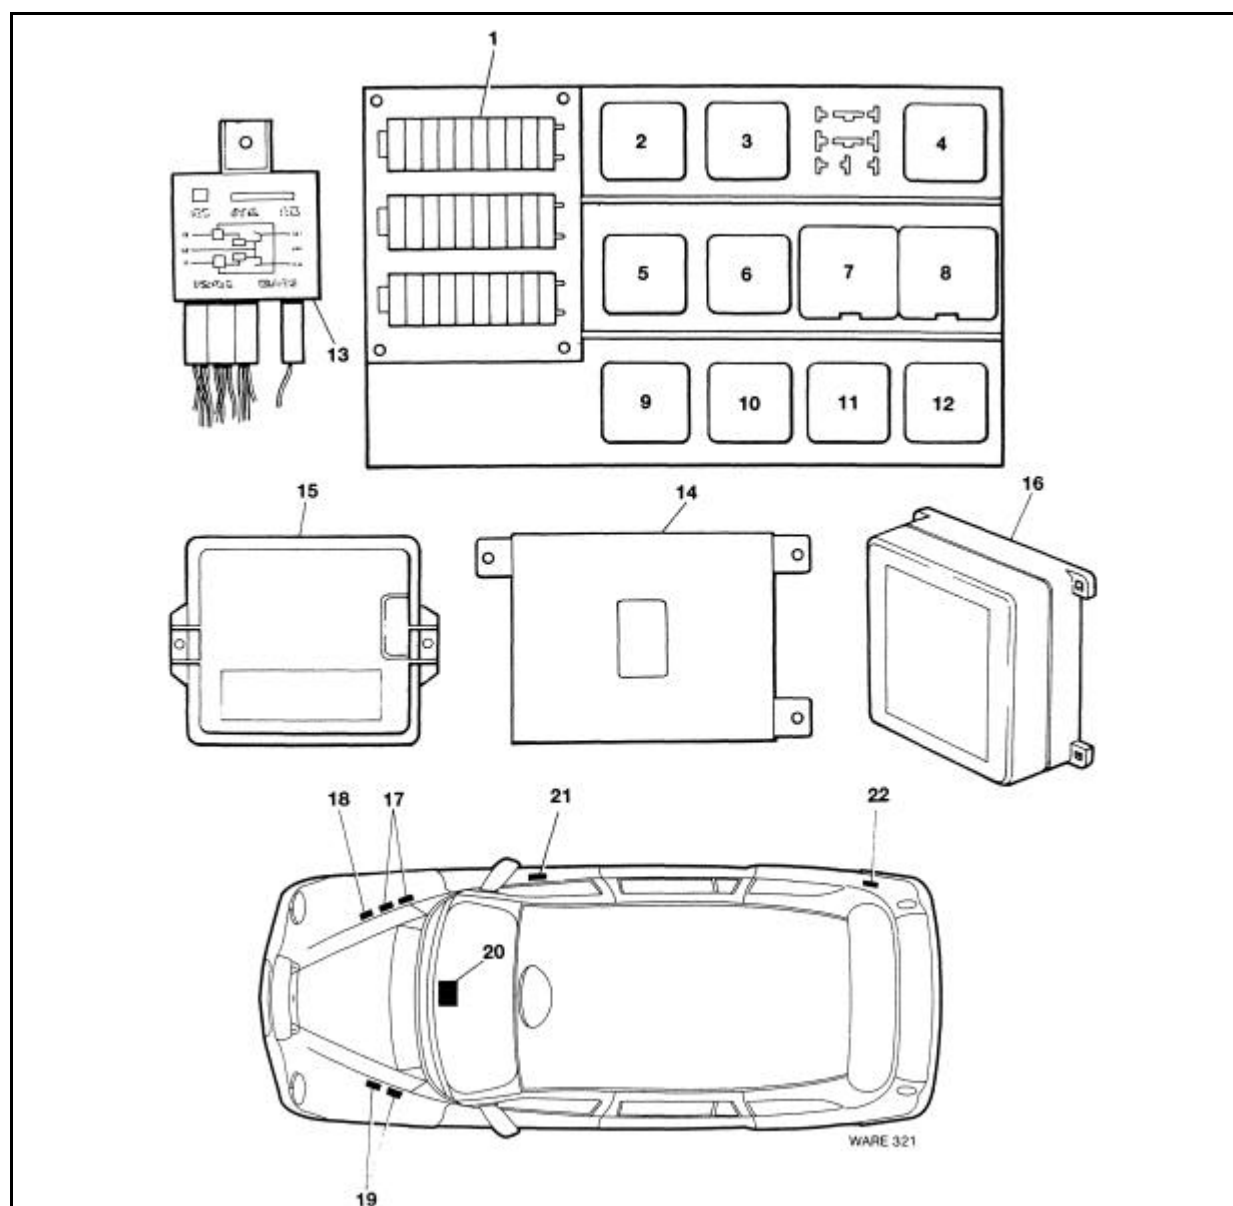

- | | |
|--|--|
| 1. Fuse holder/connector blocks | 12. ECU heated rear screen |
| 2. Door locking relay | 13. ECU central locking |
| 3. Door locking relay | 14. ECU glow plug timer & EGR controller |
| 4. Accessory circuit control | 15. ECU motion door locking |
| 5. Front fog light relay | 16. ECU security system |
| 6. Rear fog light relay (from 107215 rear fog light relay is a rear fog light ECU) | 17. Glow plug heater relays |
| 7. ECU courtesy light delay (driver's) | 18. Automatic inhibitor relay |
| 8. ECU courtesy light delay (passenger's) | 19. Air conditioning relays |
| 9. ECU lights on warning | 20. Amplifier intercom |
| 10. ECU intermittent wipe (front) | 21. ECU window down |
| 11. ECU direction indicator and hazard | 22. ECU intermittent rear wipe |

LOCATIONS OF PRINCIPLE CONNECTORS

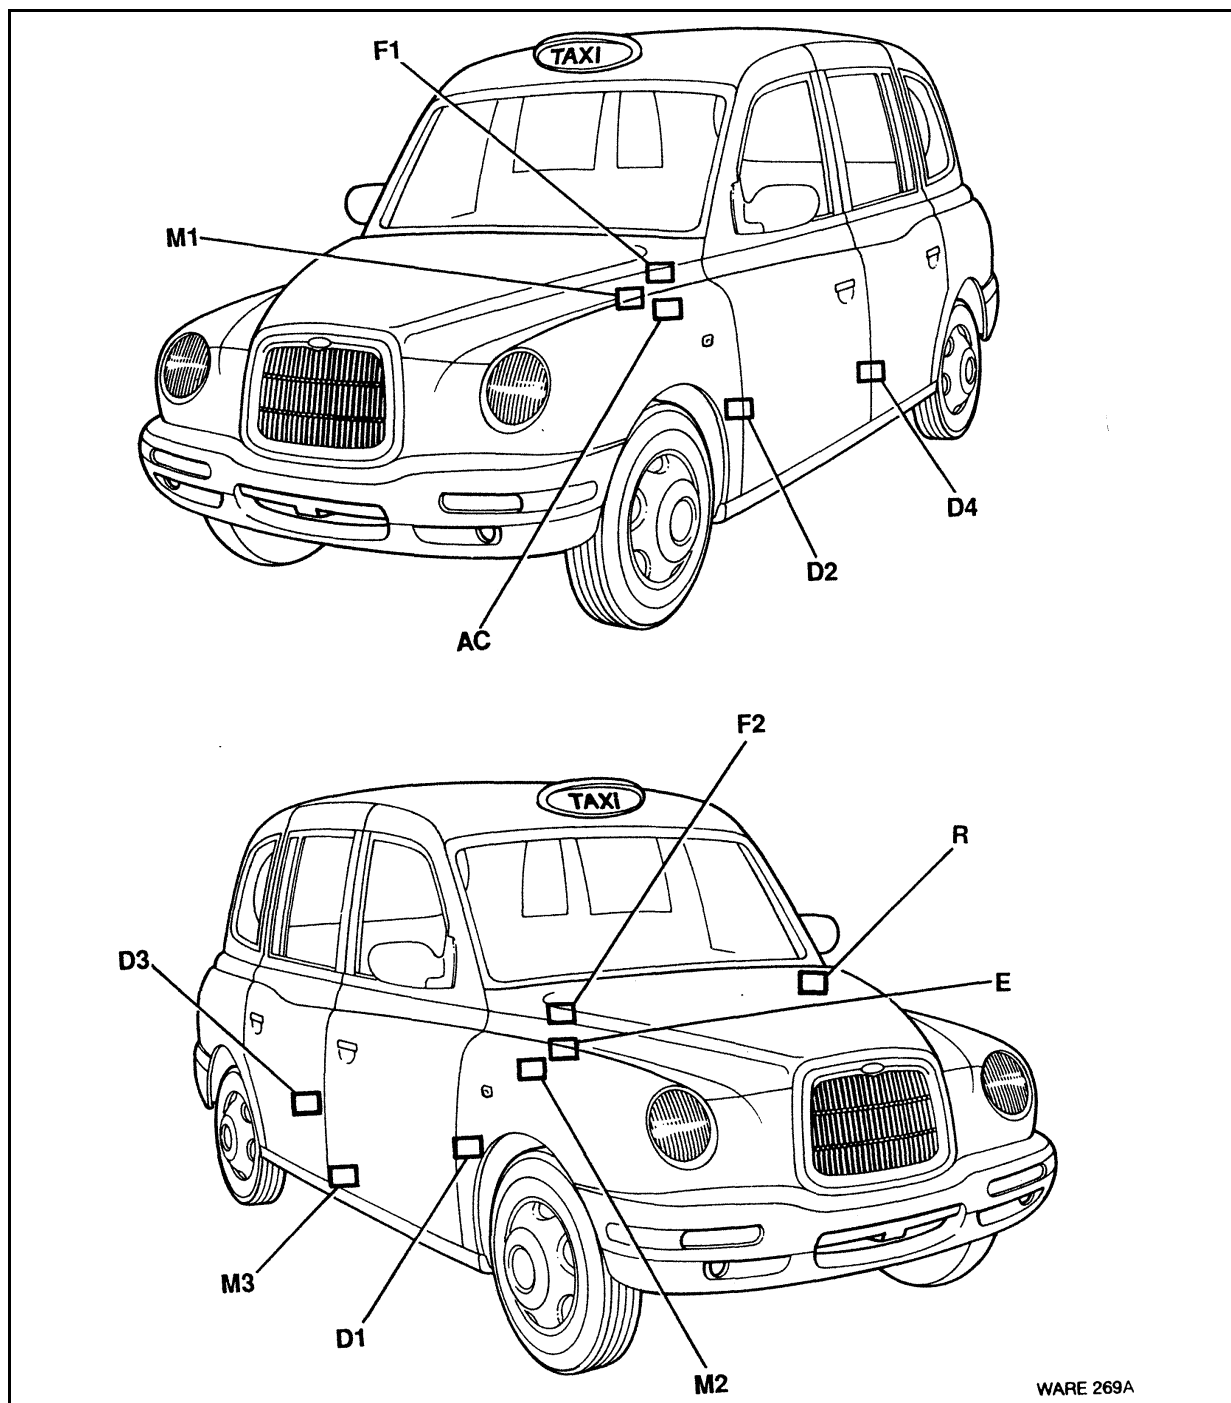


WARE 269A

AC LHS under bonnet
 D1 RHS front door-lower A post
 D2 LHS front door-lower A post
 D3 Lower right B-C post
 D4 Lower left B-C post
 E RHS valance-under bonnet


F1 LHS valance-under bonnet.
 F2 RHS valance-under bonnet.
 M1 LHS valance-under bonnet
 M2 RHS valance-under bonnet
 M3 Lower light B-C post
 R LHS in front of facia

LOCATIONS OF EARTHING POINTS

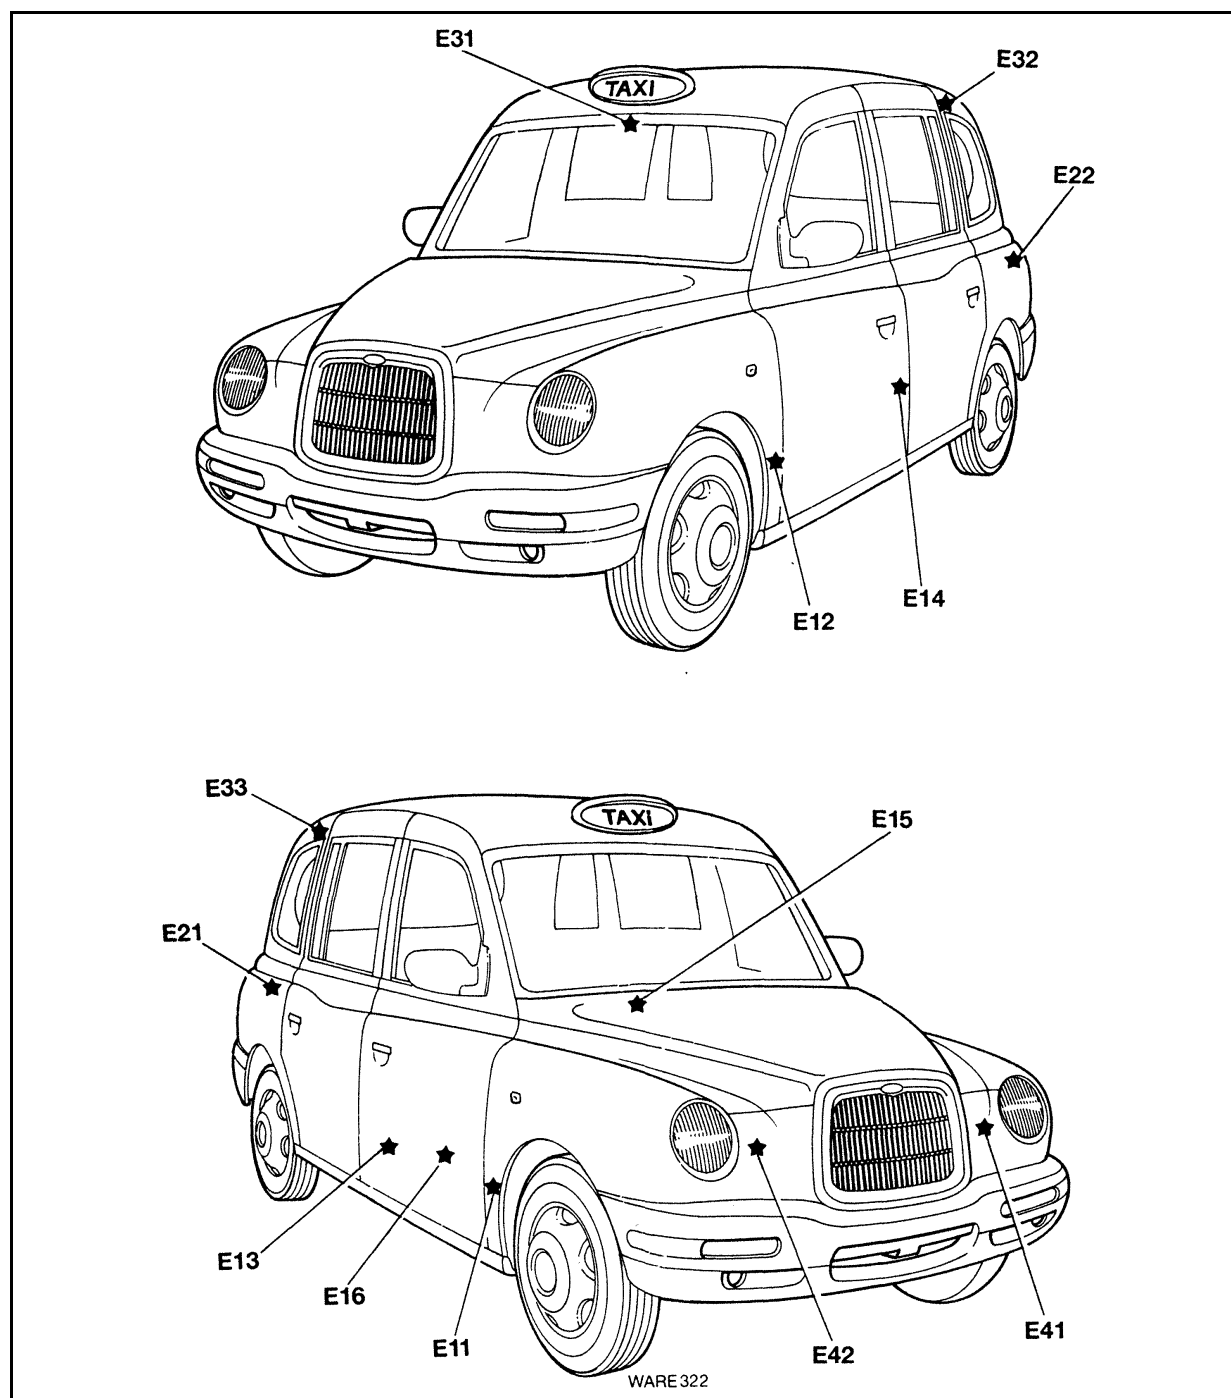


E11 RHS A post
 E12 LHS A post
 E13 Rear right of rear heater
 E14 Lower left B-C post
 E15 To RHS of front heater
 E16 On rear heater to LHS of hand brake
 E21 RHS rear lamp cluster

E22 LHS rear lamp cluster
 E31 Roof-front behind console & clock
 E32 Rear left in roof behind reading lamps
 E33 Rear right in roof behind reading lamps
 E41 Near LHS headlamp
 E42 Near RHS headlamp

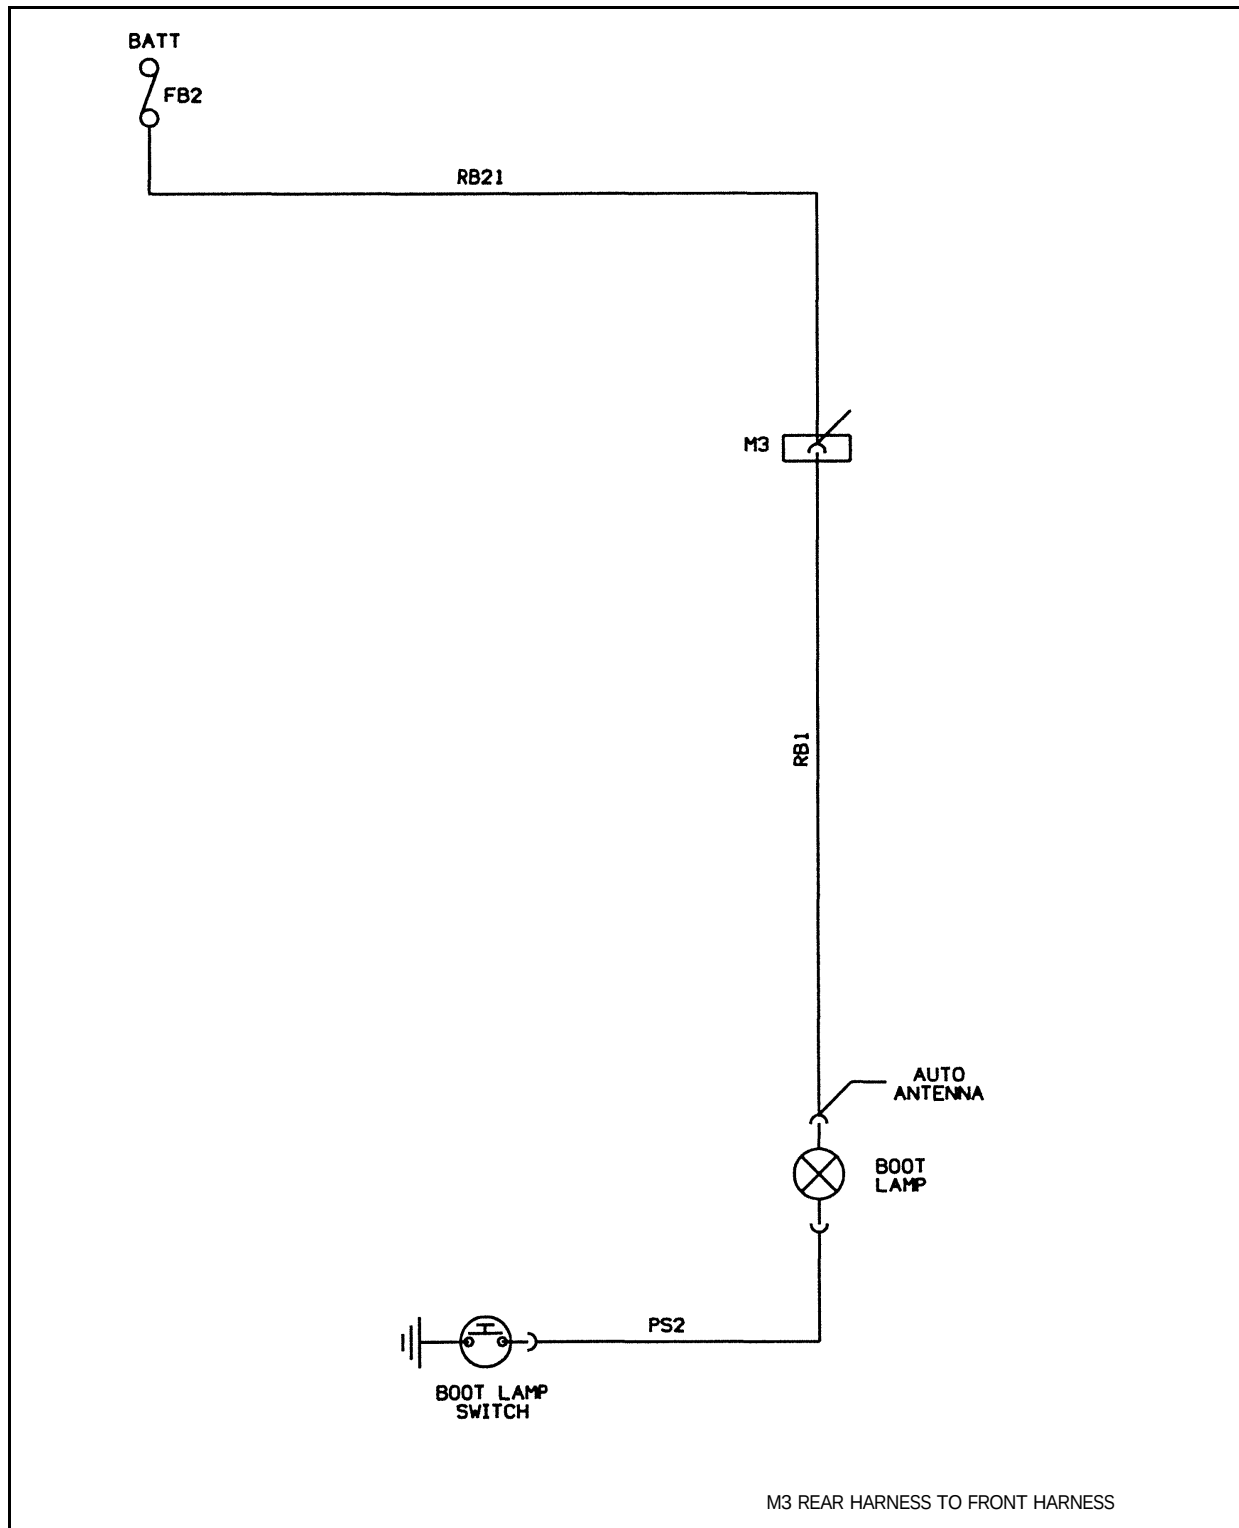BOOT LAMP

RHD Diesel – Issue 1


CENTRAL DOOR LOCKING (CDL)

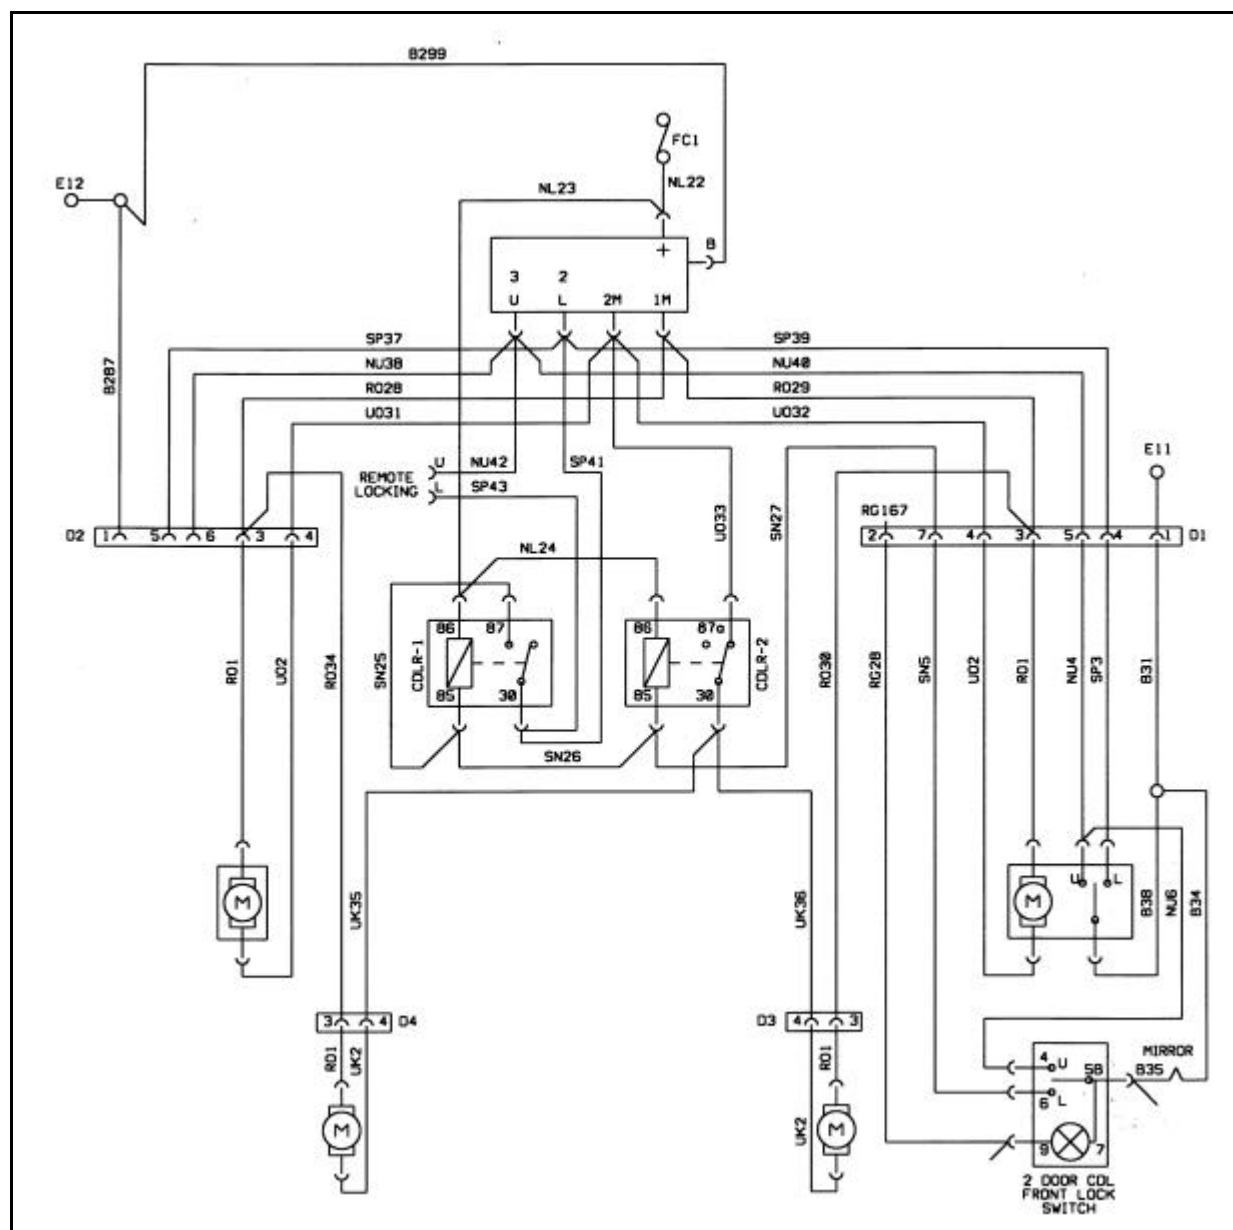

RHD Diesel Serial Nos: 100016-102766 – Issue 3

- D1 Drivers door harness to front harness
- D2 Luggage door harness to front harness
- D3 Passenger door right harness to front harness
- D4 Passenger door left harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post


CENTRAL DOOR LOCKING (CDL)

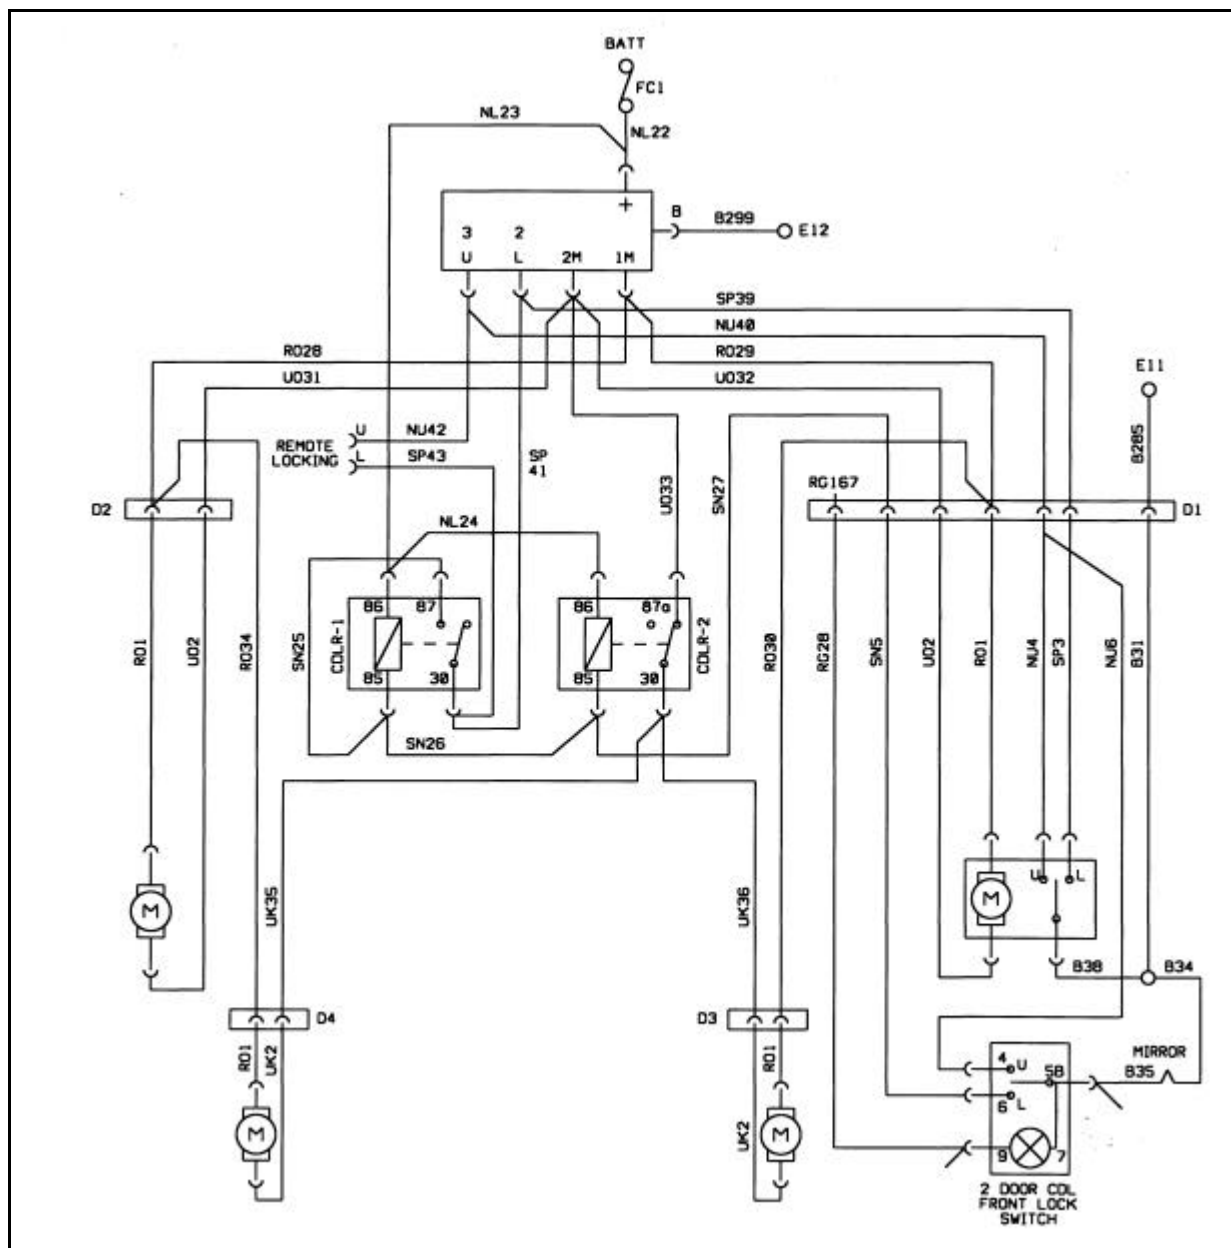

RHD Diesel Serial Nos: 102767-105629 – Issue 2


- D1 Drivers door harness to front harness
- D2 Luggage door harness to front harness
- D3 Passenger door right harness to front harness
- D4 Passenger door left harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post

- D1 Drivers door harness to front harness
- D2 Luggage door harness to front harness
- D3 Passenger door right harness to front harness
- D4 Passenger door left harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post

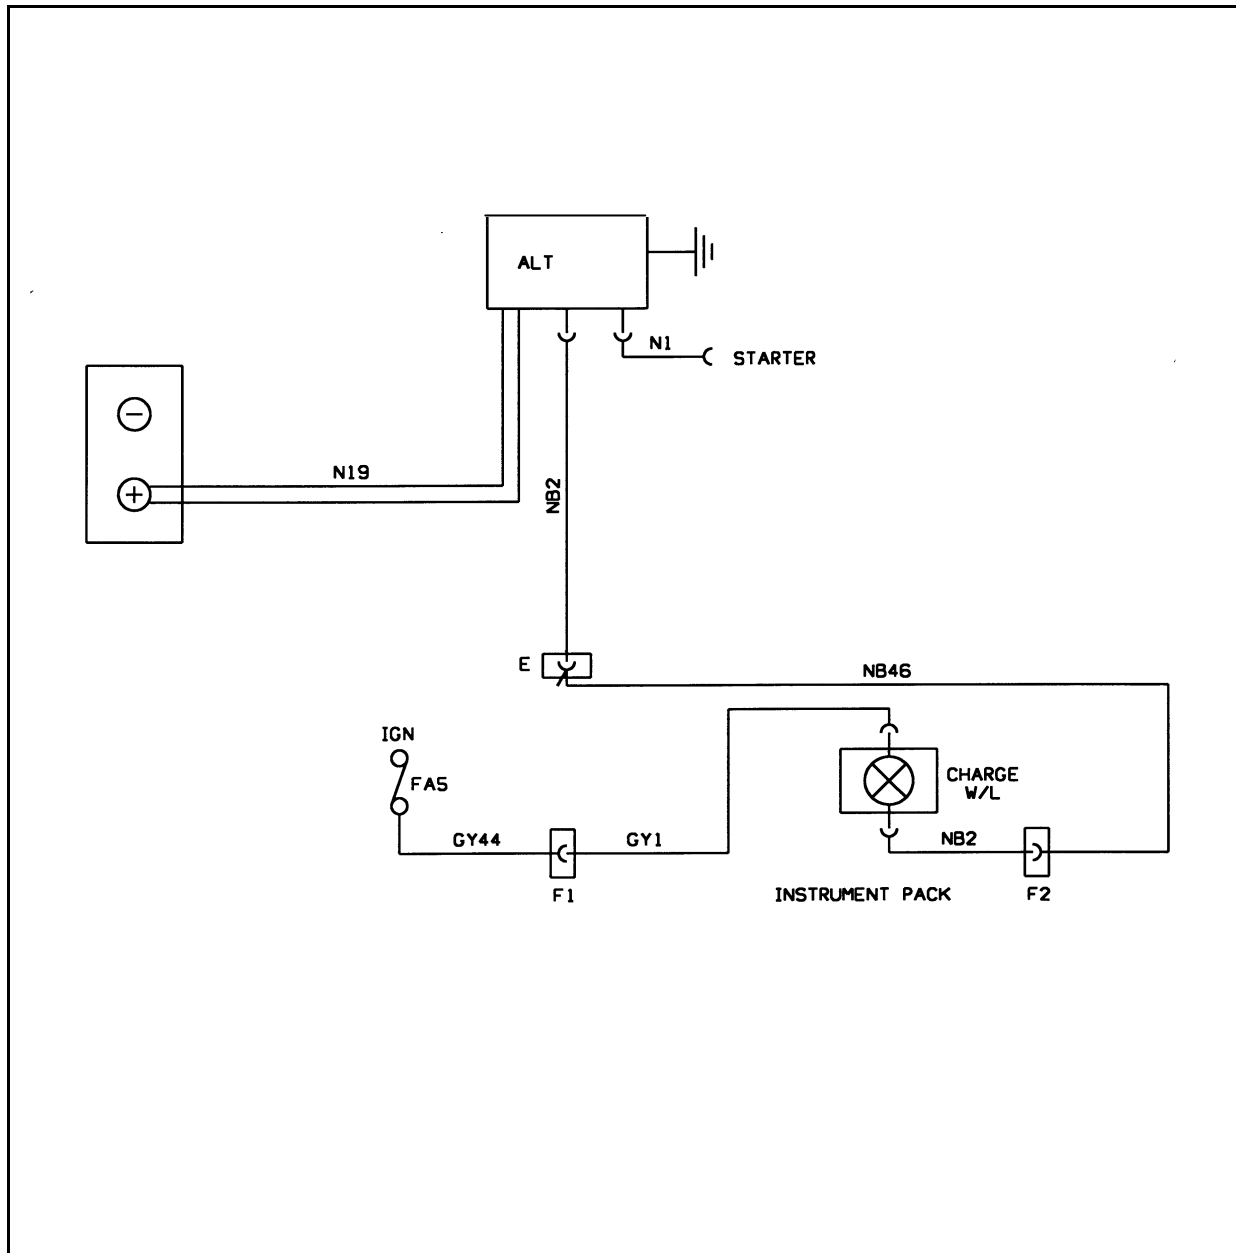CHARGING

RHD Diesel Serial Nos: 100016–107214 – Issue 1


- E Engine harness to front harness
- F1 Facia harness left to front harness
- F2 Facia harness right to front harness

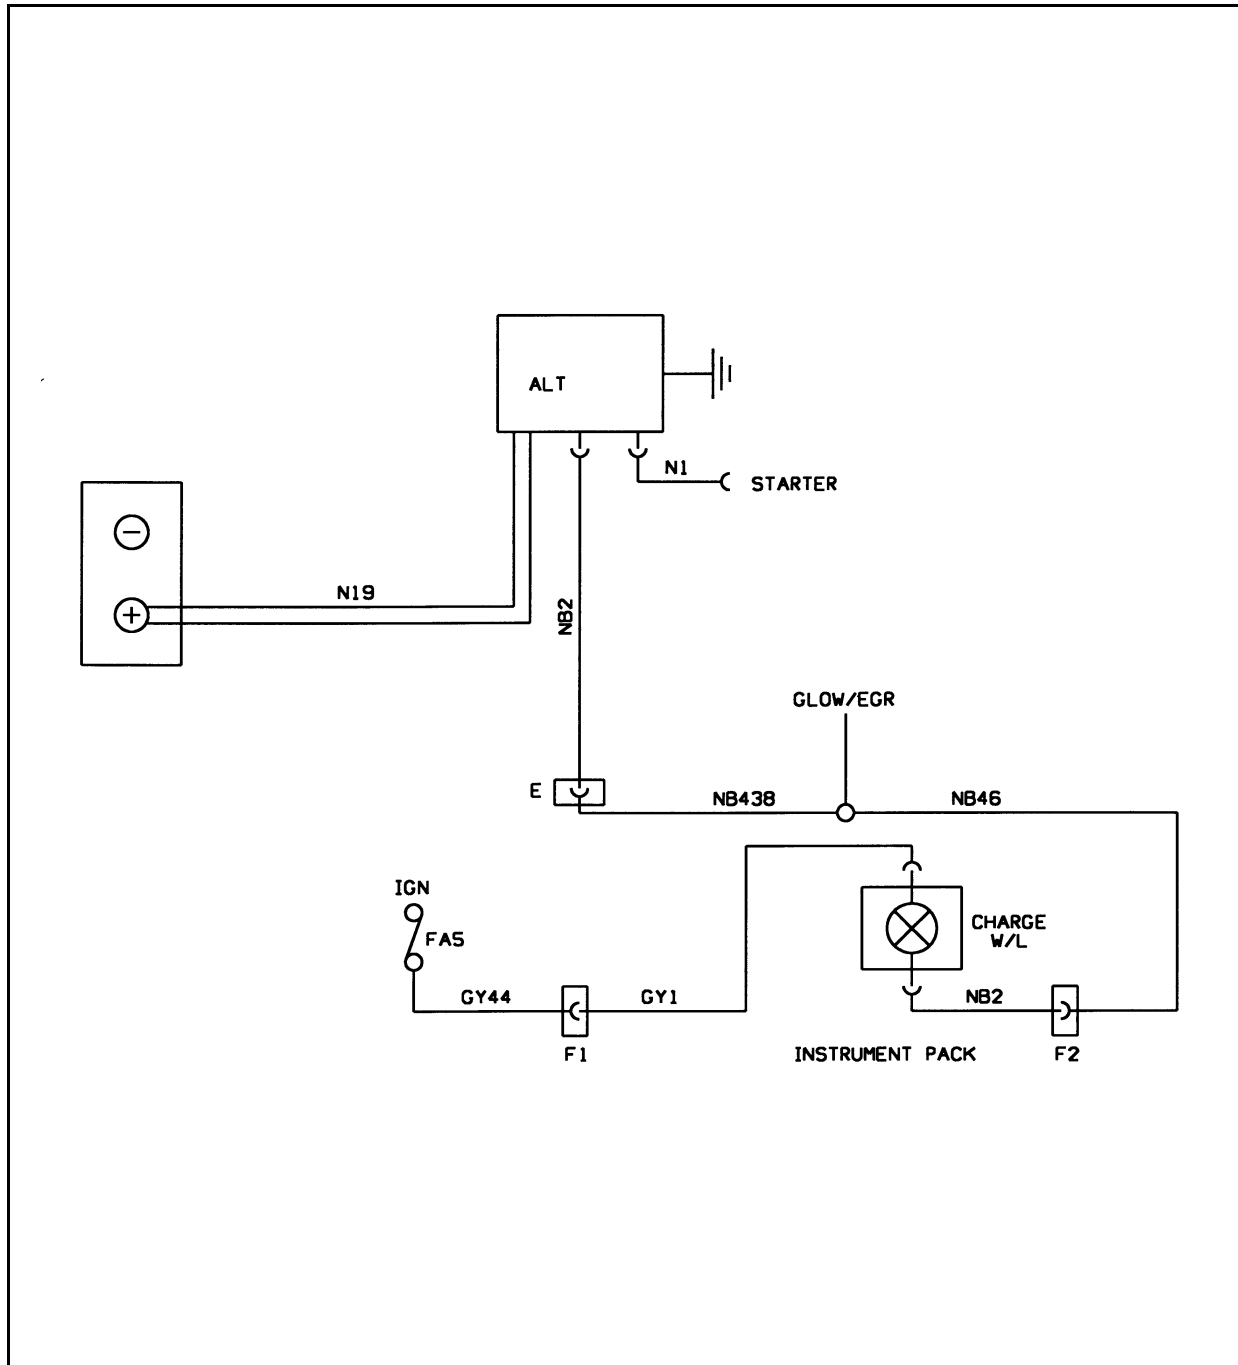CHARGING

RHD Diesel Serial Nos: 107215 onwards – Issue 1

- E Engine harness to front harness
- F1 Facia harness left to front harness
- F2 Facia harness right to front harness


CIGARETTE LIGHTER POWER POINT

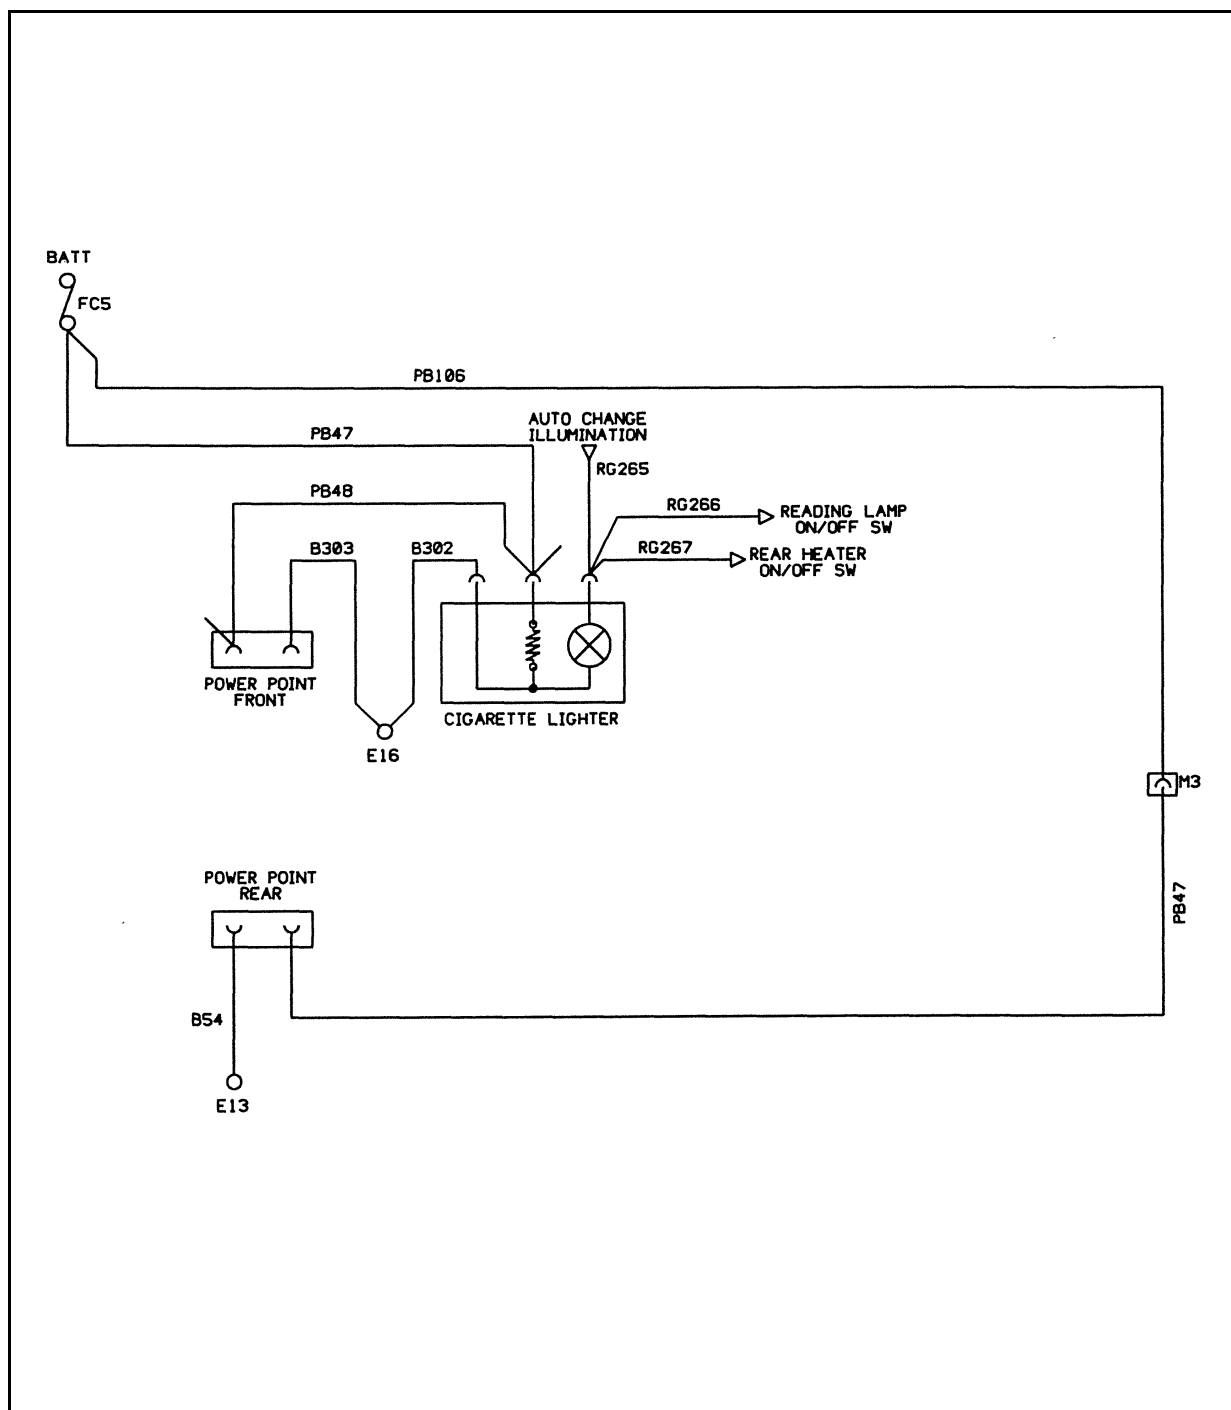

RHD Diesel Serial Nos: 100016-102766 – Issue 2

- M3 Rear harness to front harness
- E16 Earth point on left of handbrake
- E13 Earth point on right of rear heater


CIGARETTE LIGHTER POWER POINT

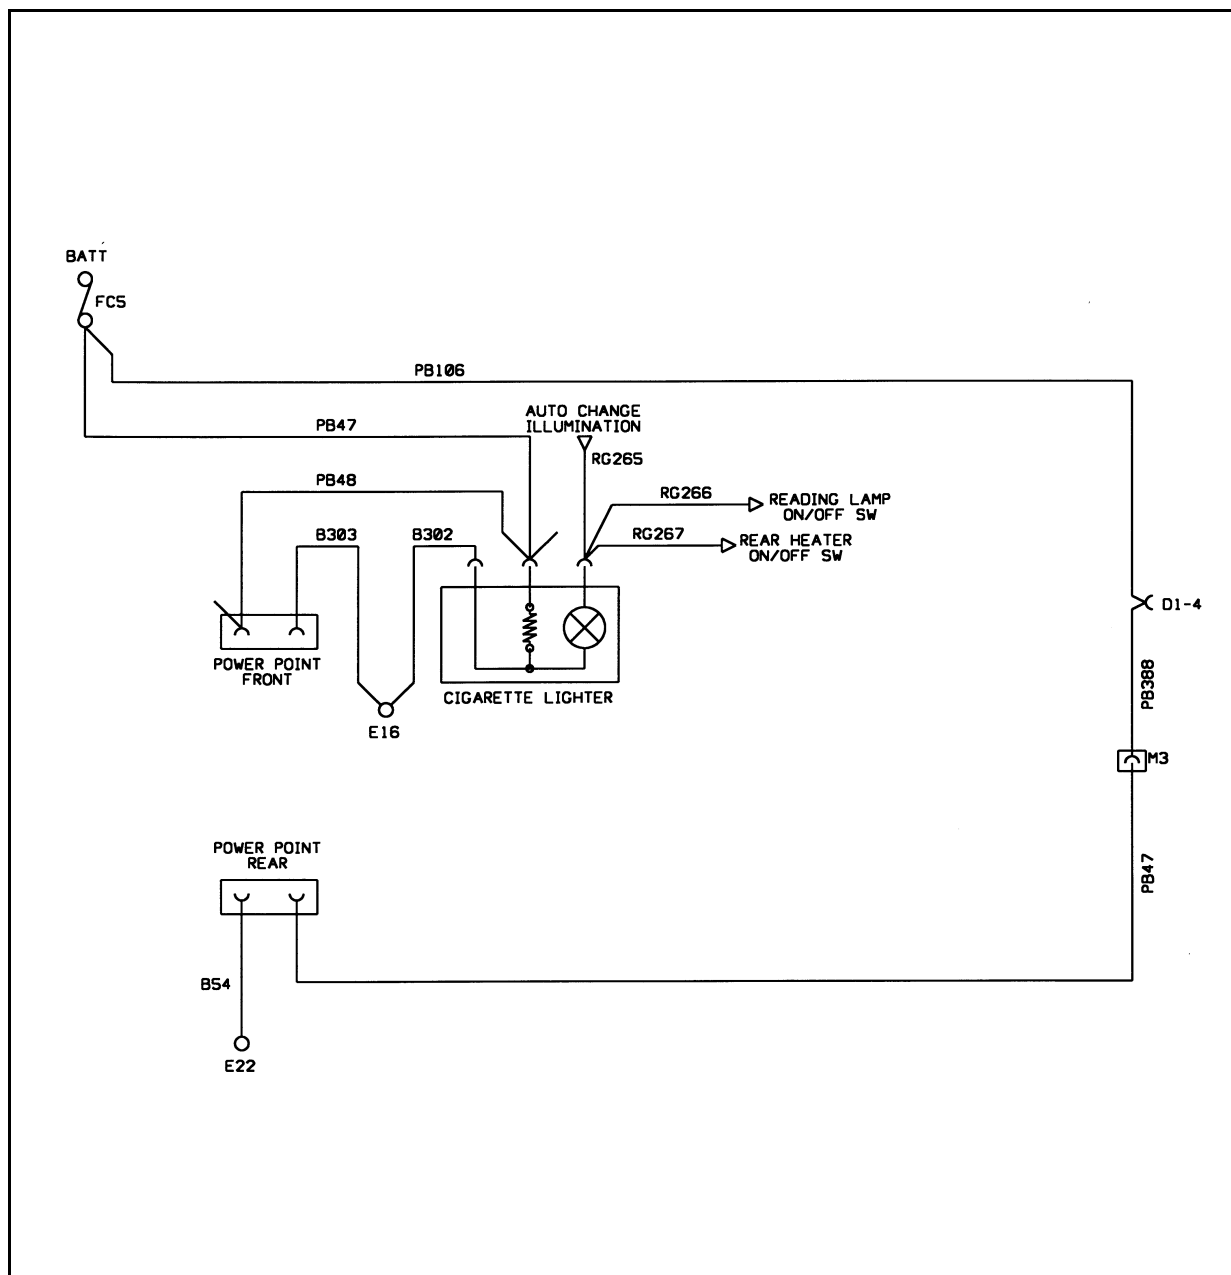

RHD Diesel Serial Nos: 102767-107214 – Issue 1

M3 Rear harness to front harness
 E16 Earth point on left of handbrake
 E22 Earth point rear left lamp cluster


CIGARETTE LIGHTER POWER POINT

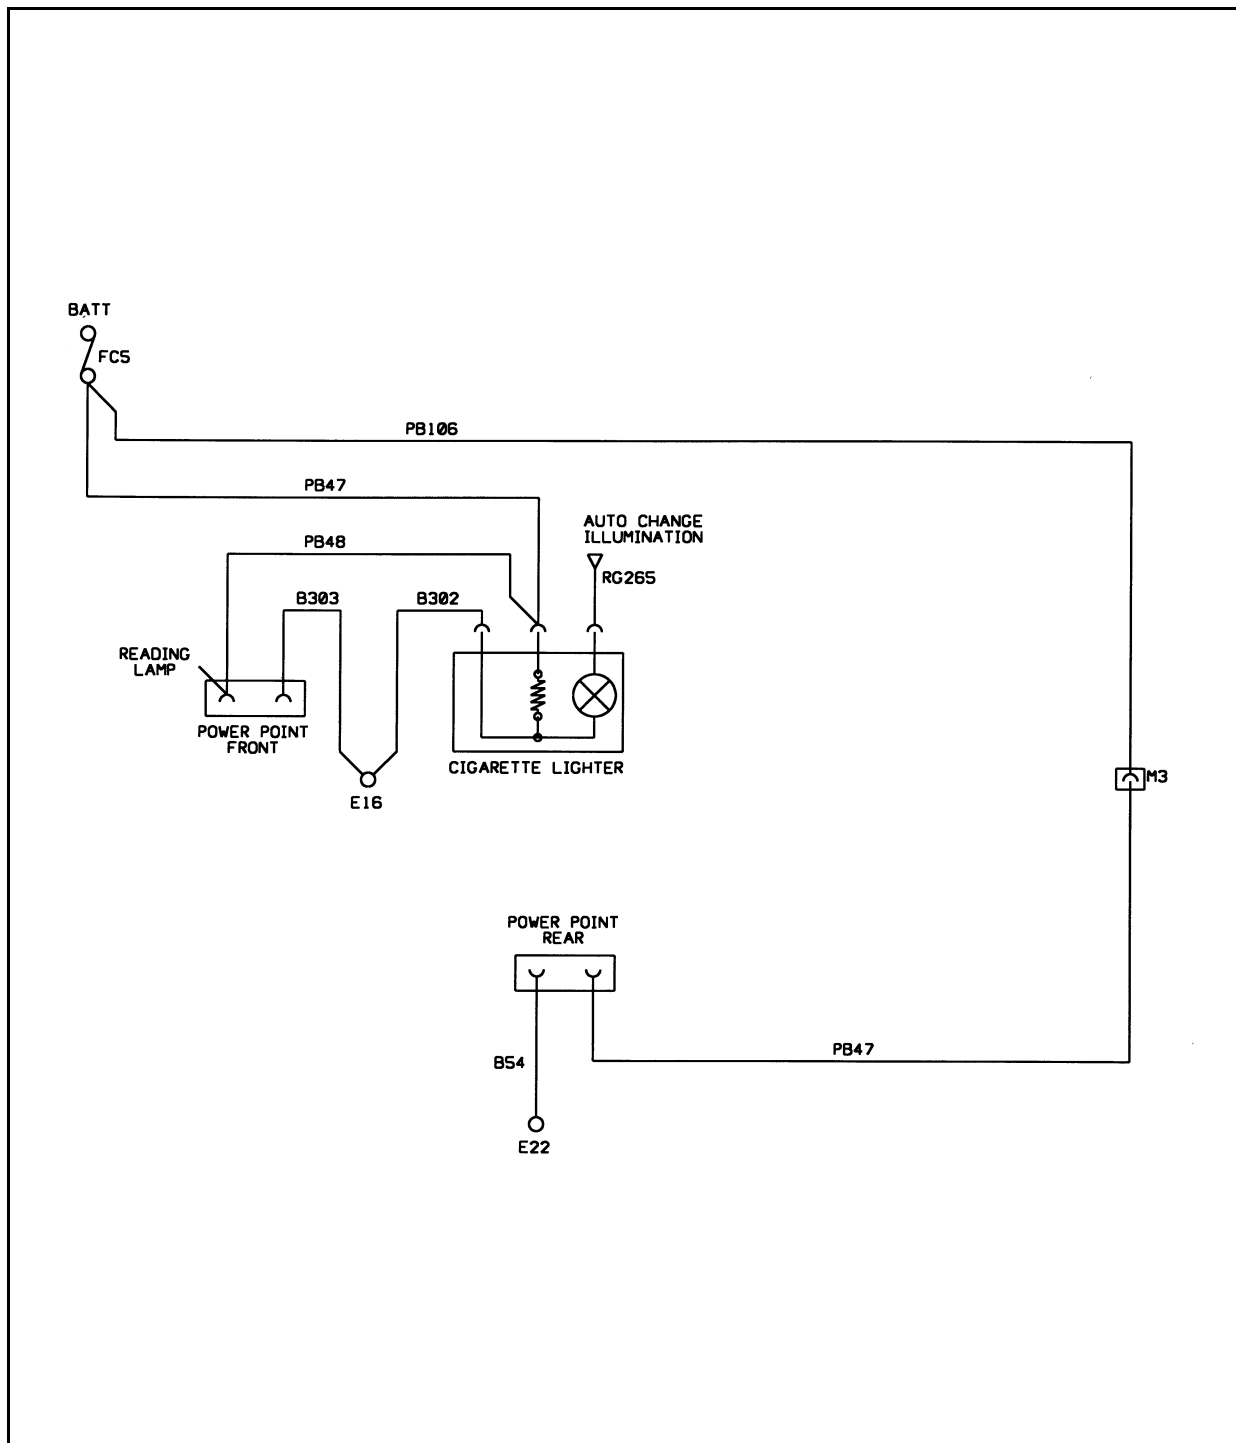

RHD Diesel Serial Nos: 107215 onwards – Issue 1

- M3 Rear harness to front harness
- E16 Earth point on left of handbrake
- E22 Earth point rear left lamp cluster


CLIMATE

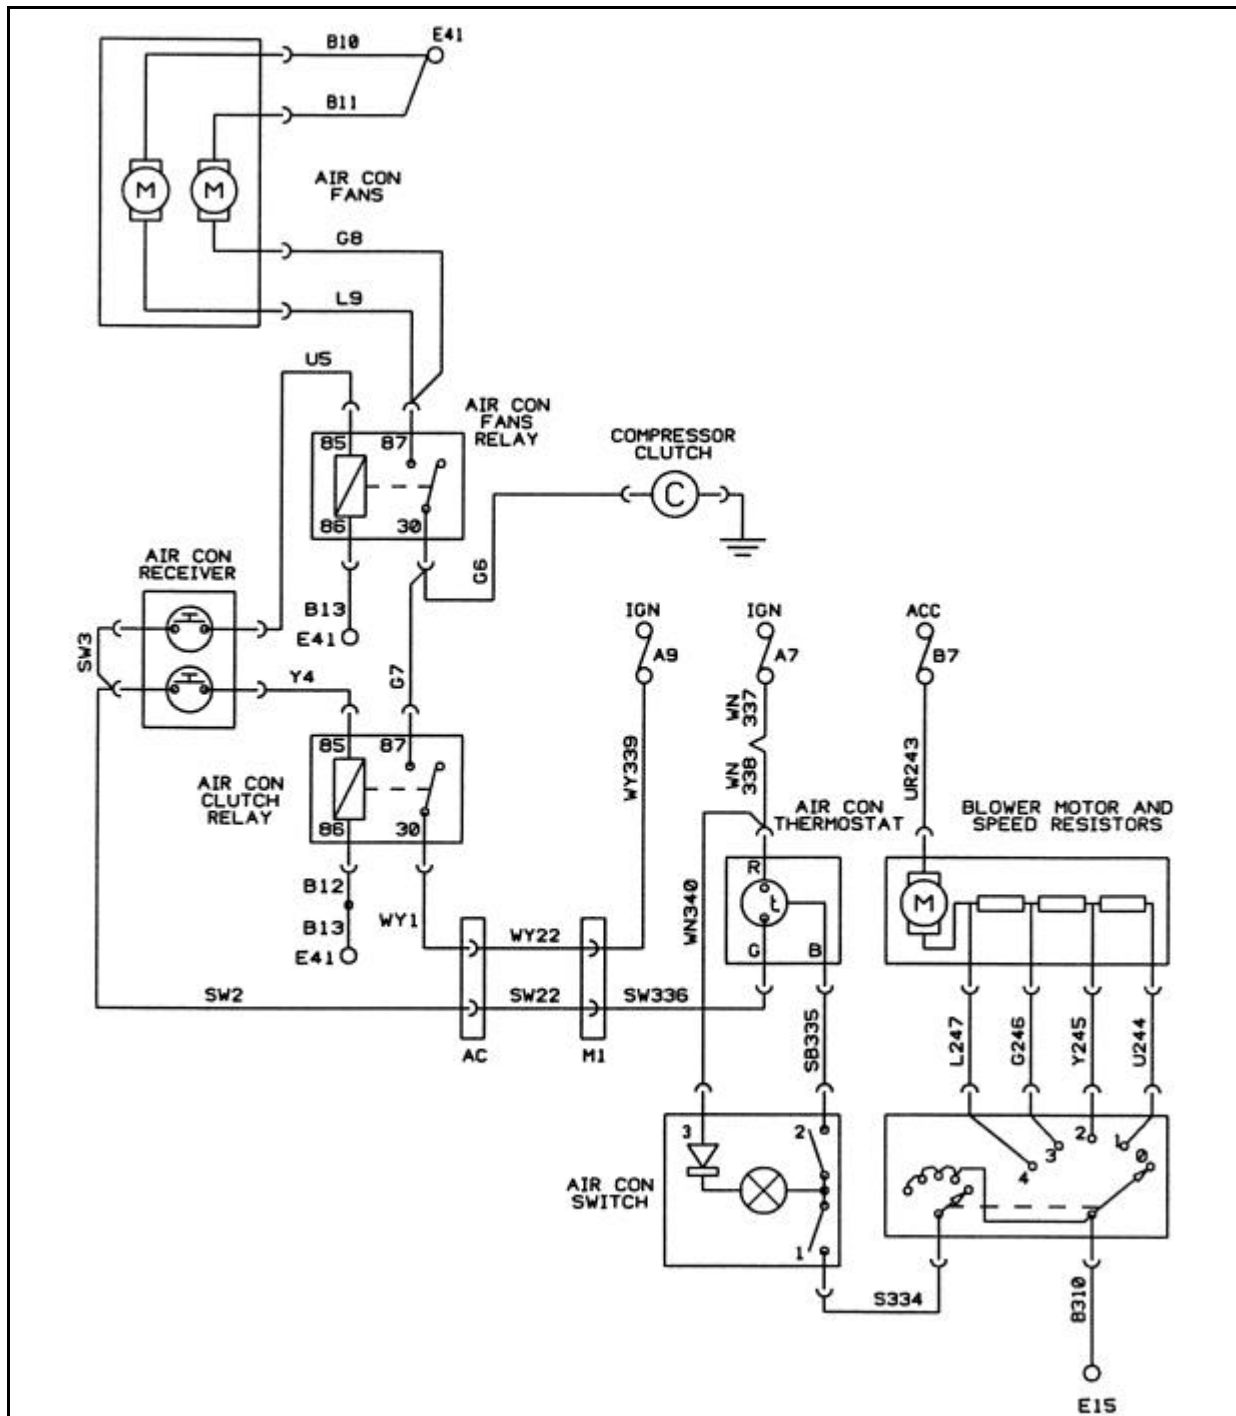

RHD Diesel Serial Nos: 100016-102766 – Issue 1

AC Air con link harness to under bonnet harness
 MI Under bonnet left harness to front harness
 E15 Earth point to right of front heater
 E41 Earth point left headlamp


CLIMATE

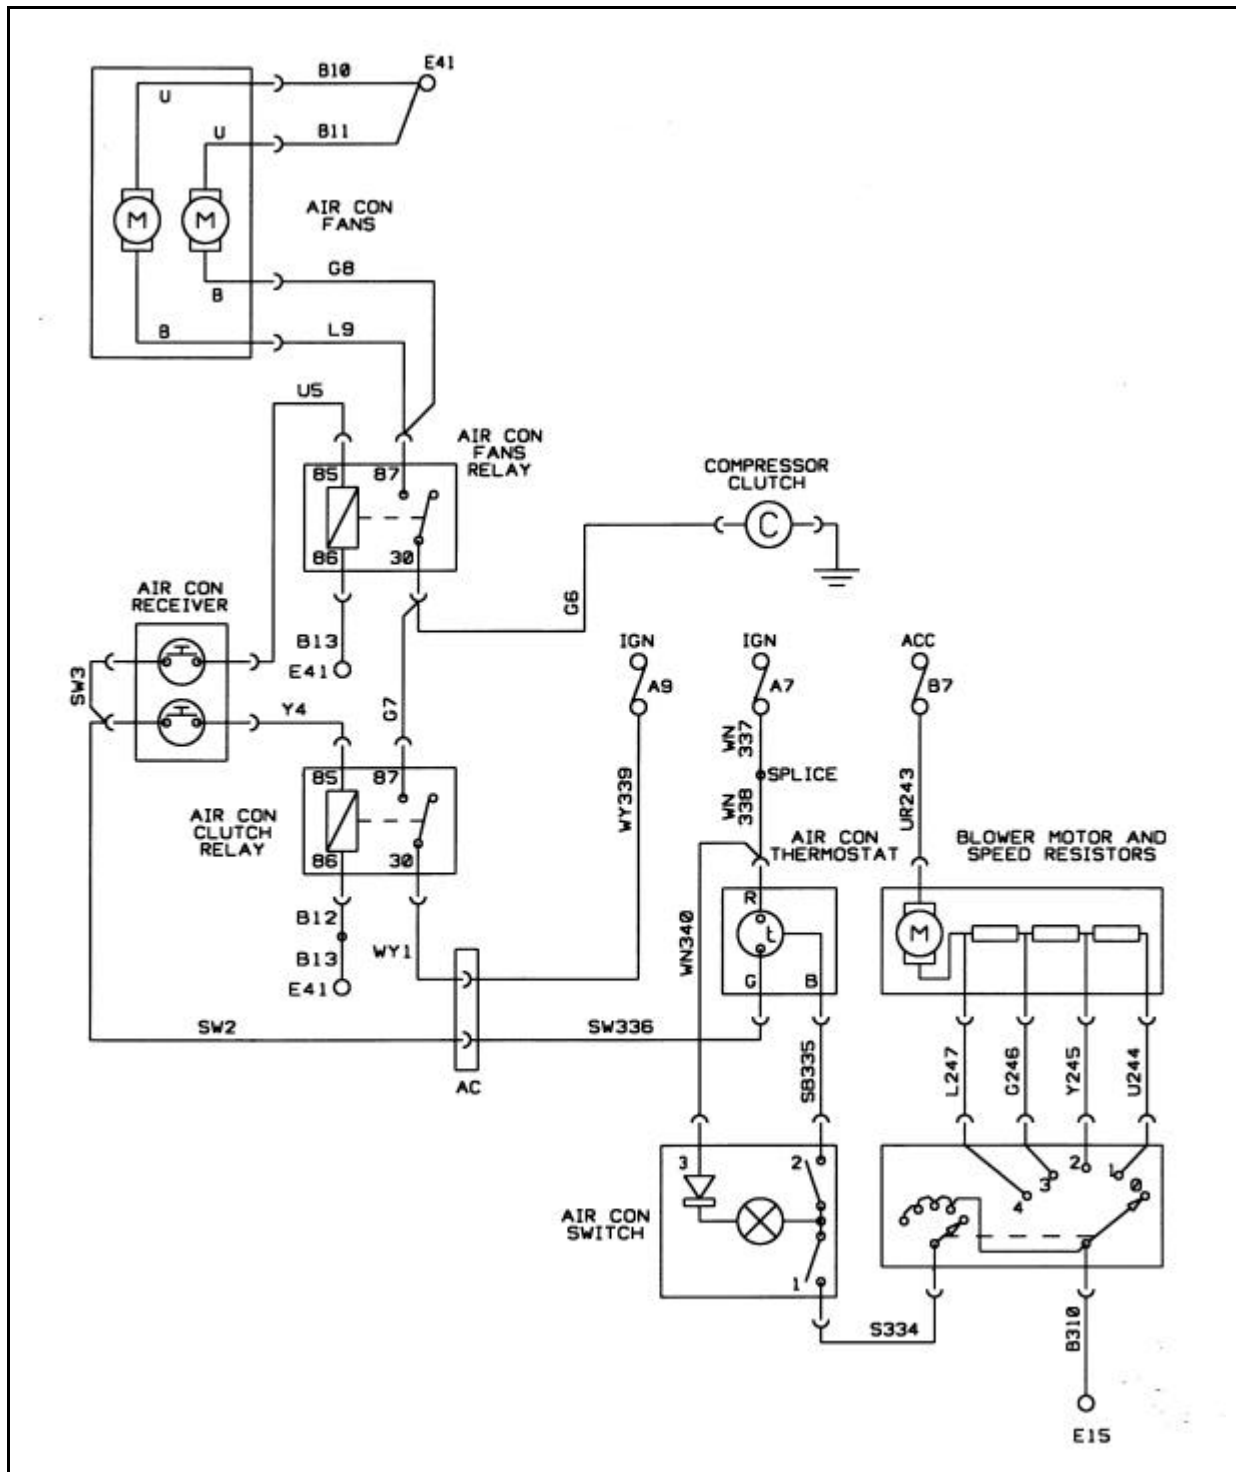

RHD Diesel Serial Nos: 10276-107214 – Issue 1


AC Air con link harness to under bonnet harness
 MI Under bonnet left harness to front harness
 E15 Earth point to right of front heater
 E41 Earth point left headlamp

CLIMATE

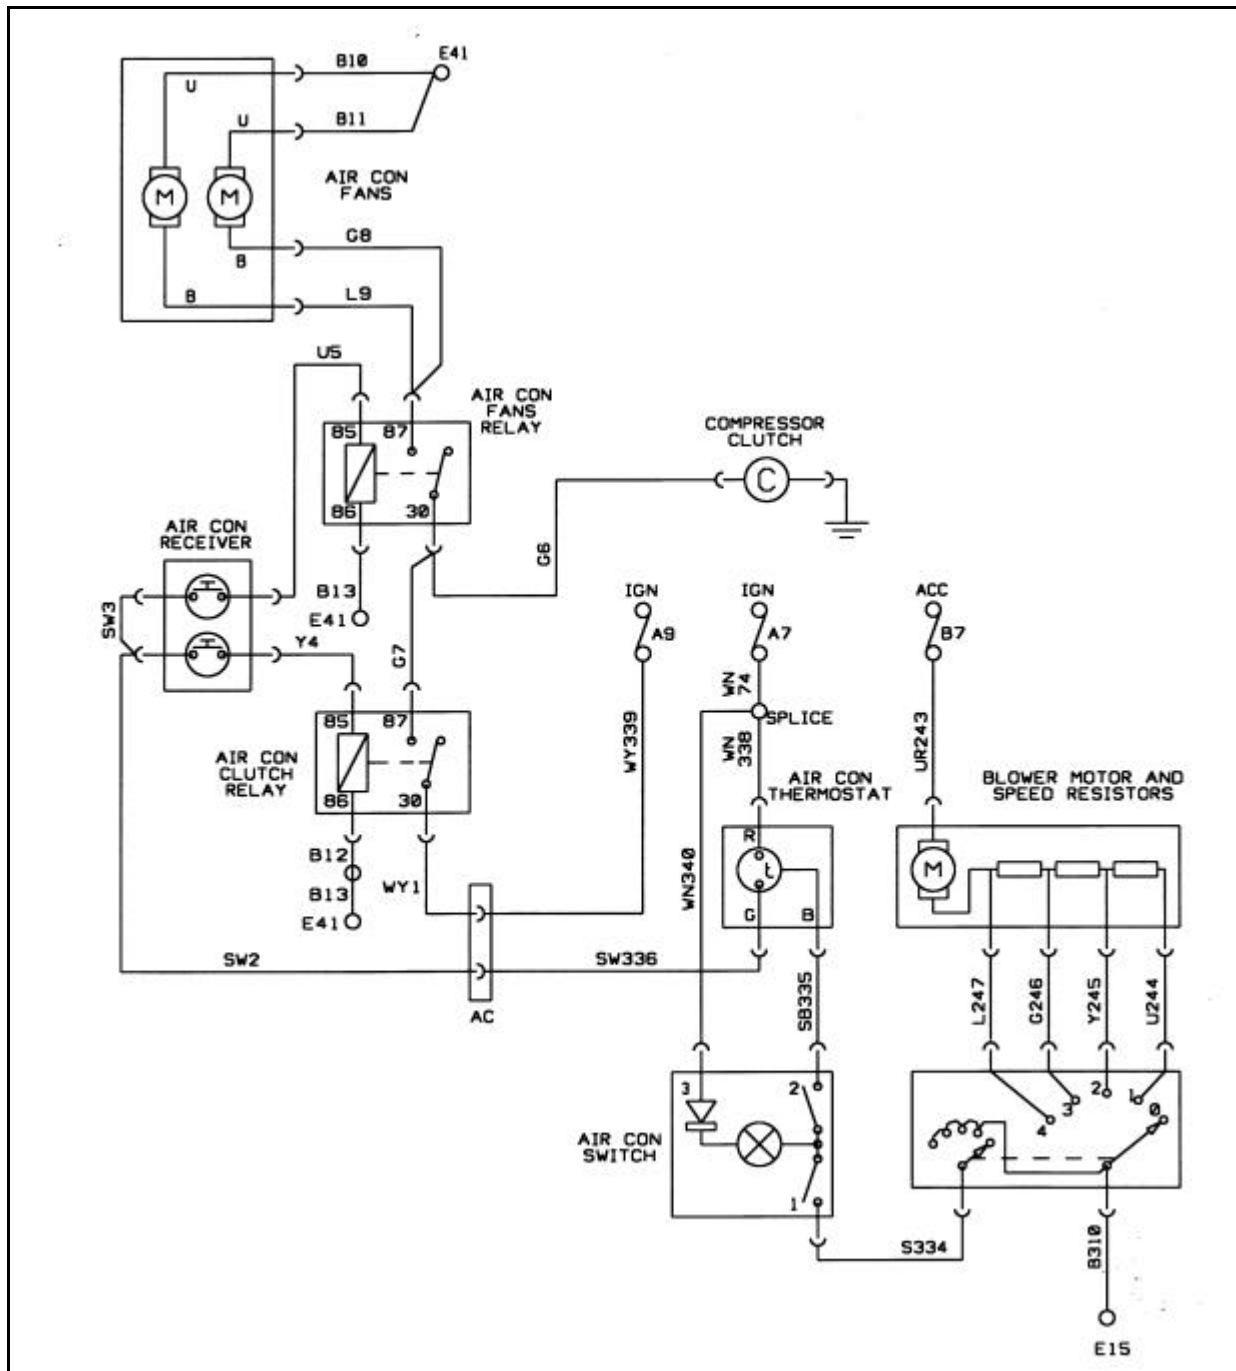


RHD Diesel Serial Nos: 107215 onwards – Issue 1

AC Air con link harness to under bonnet harness
 MI Under bonnet left harness to front harness
 E15 Earth point to right of front heater
 E41 Earth point left headlamp

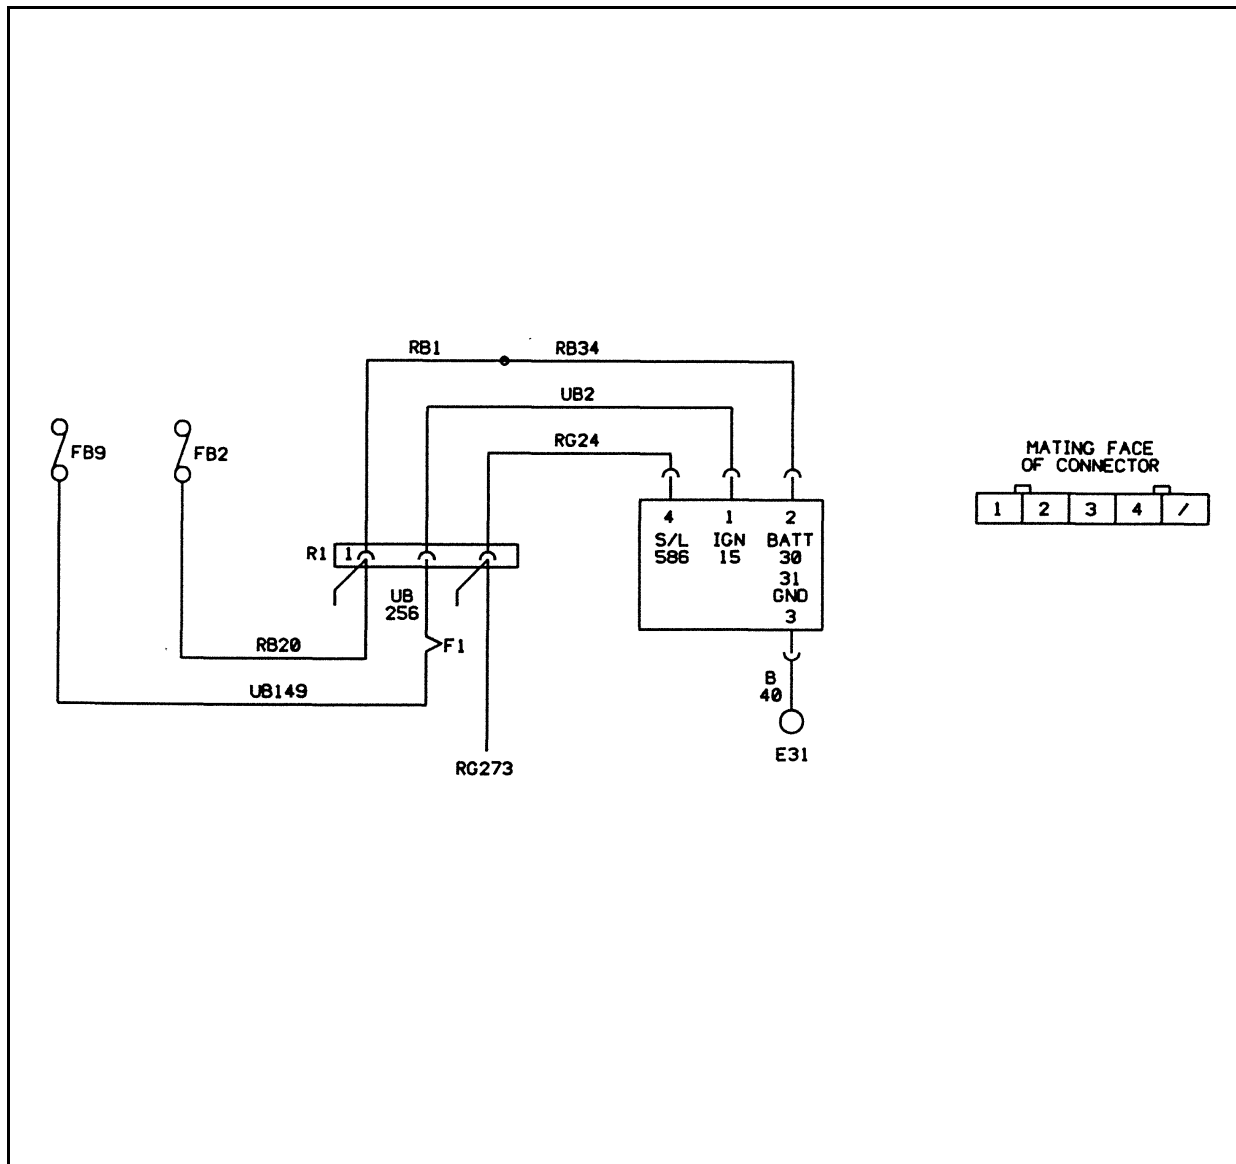CLOCK


RHD Diesel Serial Nos: 100016-102766 – Issue 1

- R1 Roof harness to front harness
- F1 Facia left harness to front harness
- E31 Earth point roof front behind console

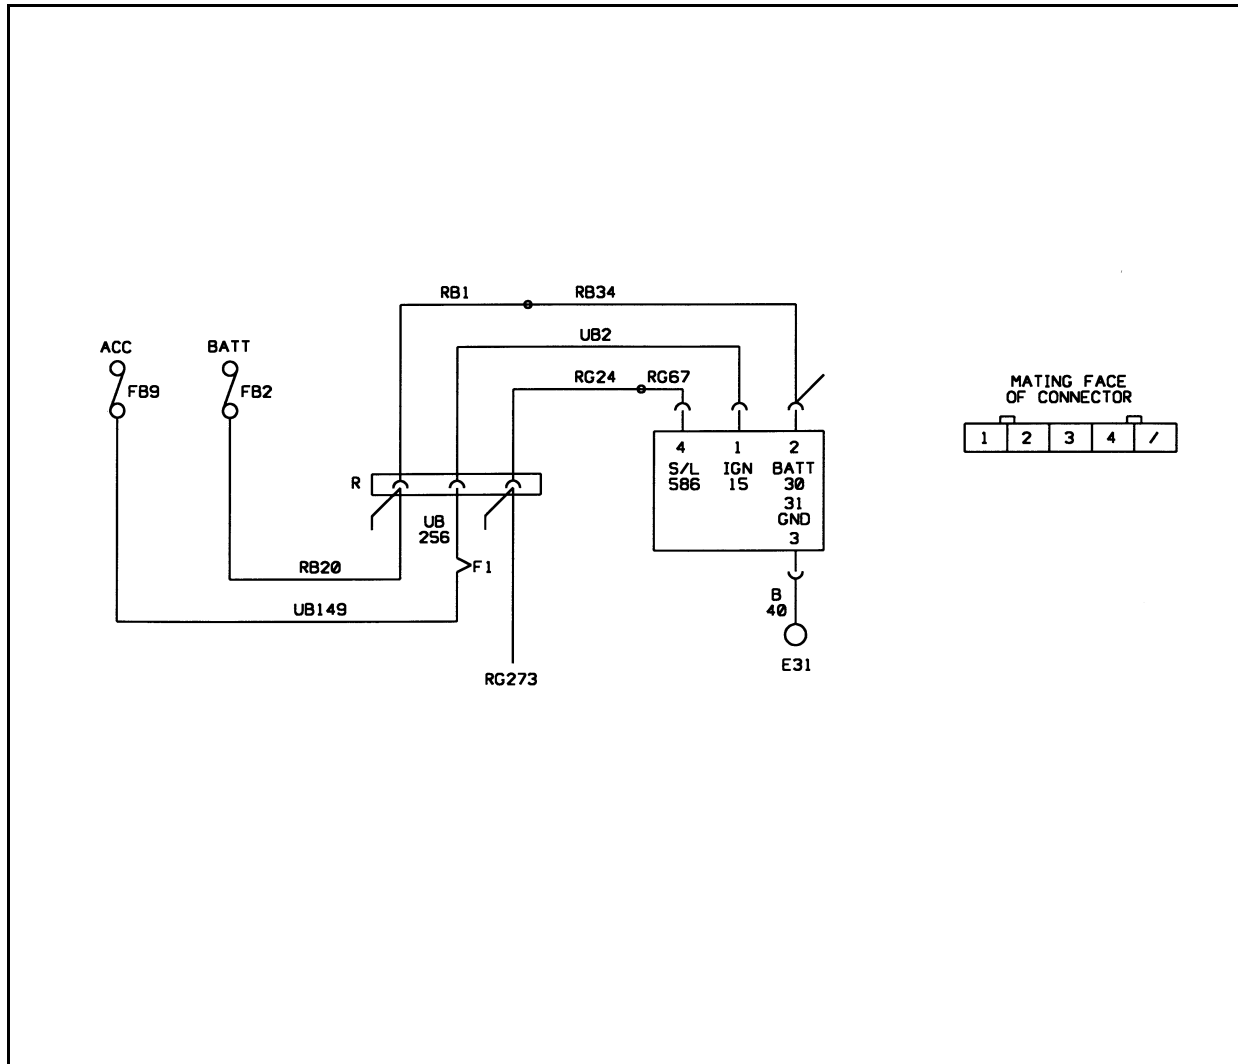CLOCK

RHD Diesel Serial Nos: 102767-107214 – Issue 1


- R Roof harness to front harness
- F1 Facia left harness to front harness
- E31 Earth point roof front behind console

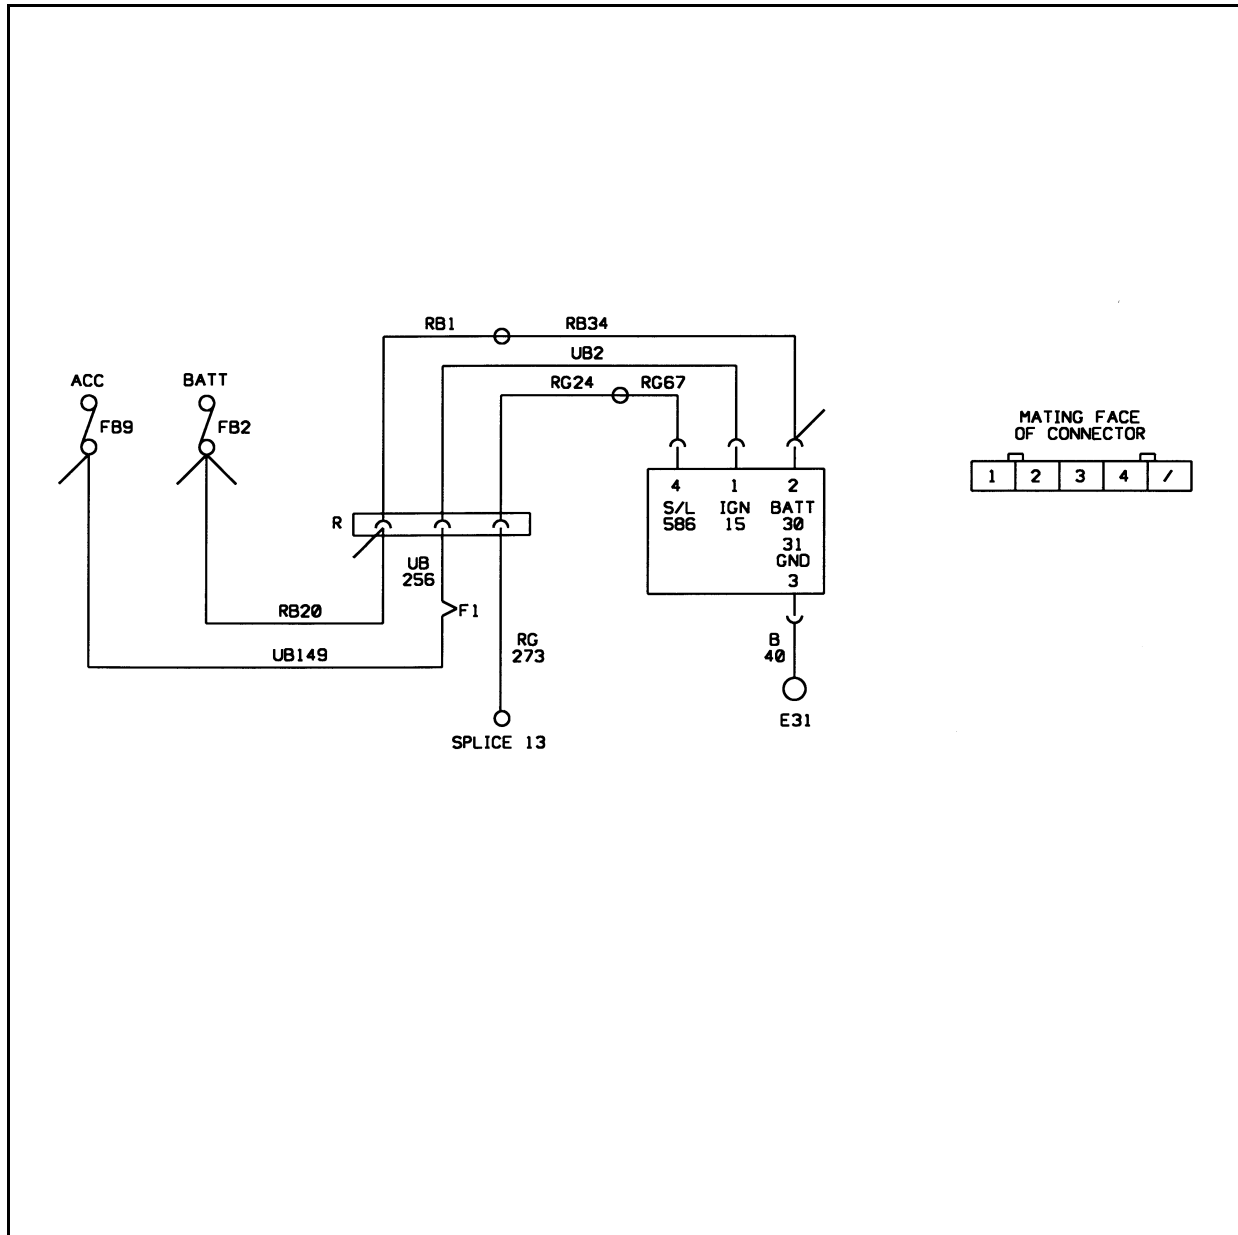CLOCK

RHD Diesel Serial Nos: 107215 onwards – Issue 1

- R Roof harness to front harness
 F1 Facia left harness to front harness
 E31 Earth point roof front behind console


COMMUNICATIONS

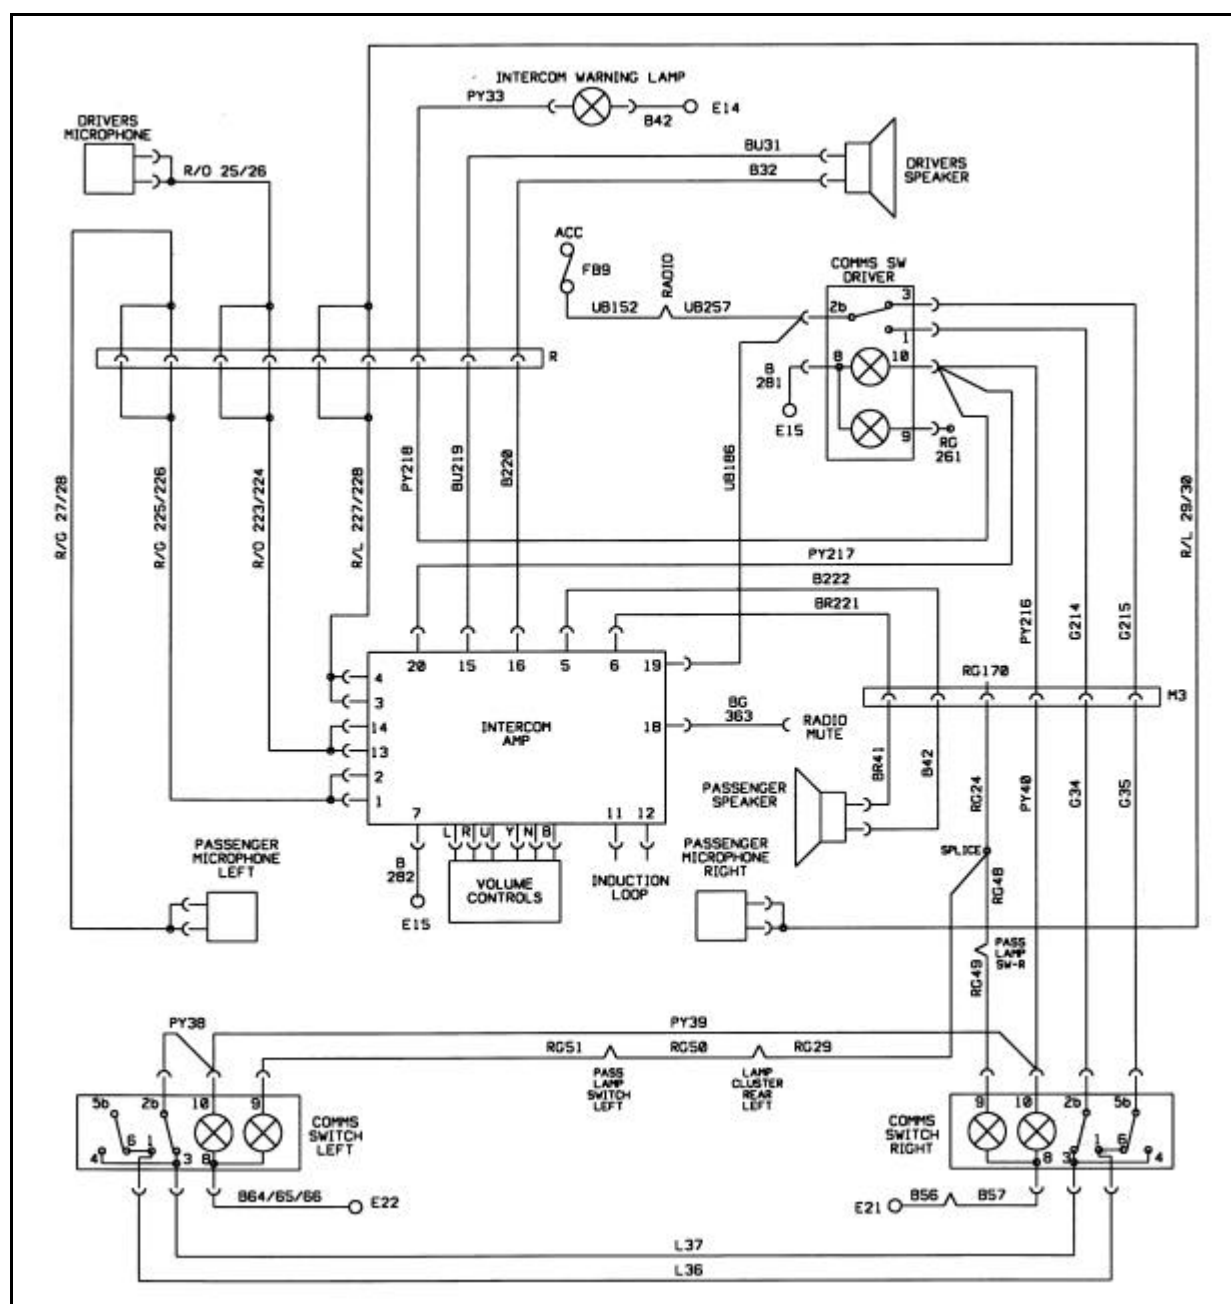

RHD Diesel Serial Nos: 100016-107214 – Issue 2

- R Roof harness to front harness
- M3 Rear harness to front harness
- E14 Earth point lower left B-C post
- E15 Earth point to right of front heater
- E21 Earth point rear right lamp cluster
- E22 Earth point rear left lamp cluster


COMMUNICATIONS

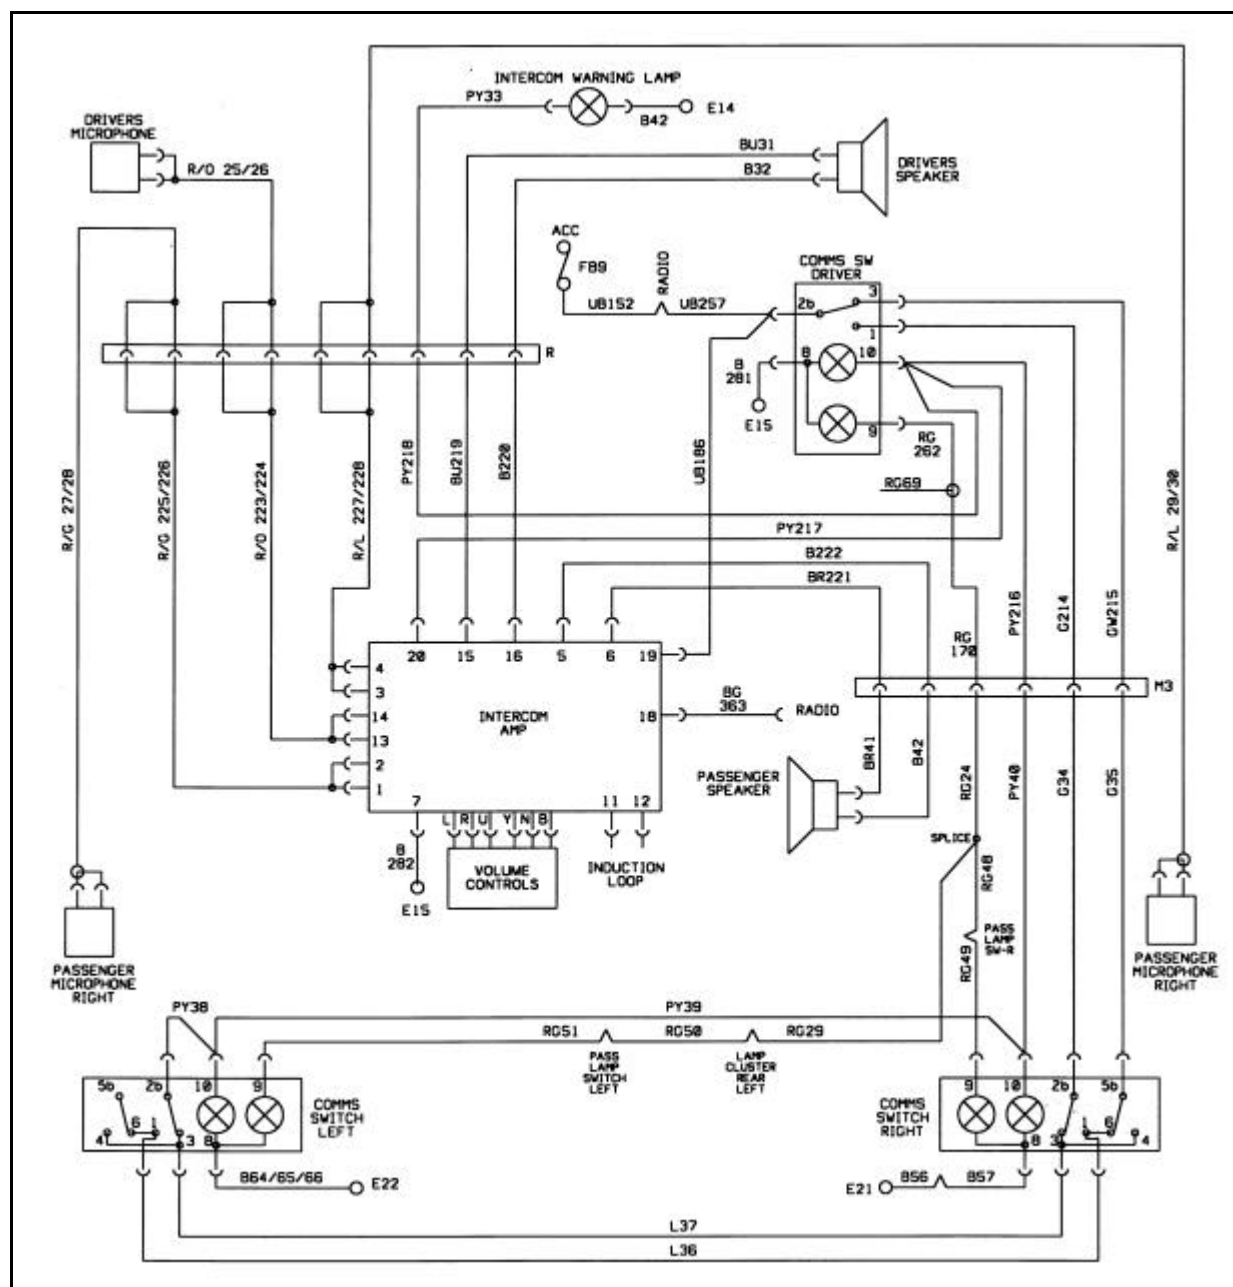

RHD Diesel Serial Nos: 107215 onwards – Issue 1

- R Roof harness to front harness
M3 Rear harness to front harness
E14 Earth point lower left B-C post
E15 Earth point to right of front heater
E21 Earth point rear right lamp cluster
E22 Earth point rear left lamp cluster


DOOR LOCKING

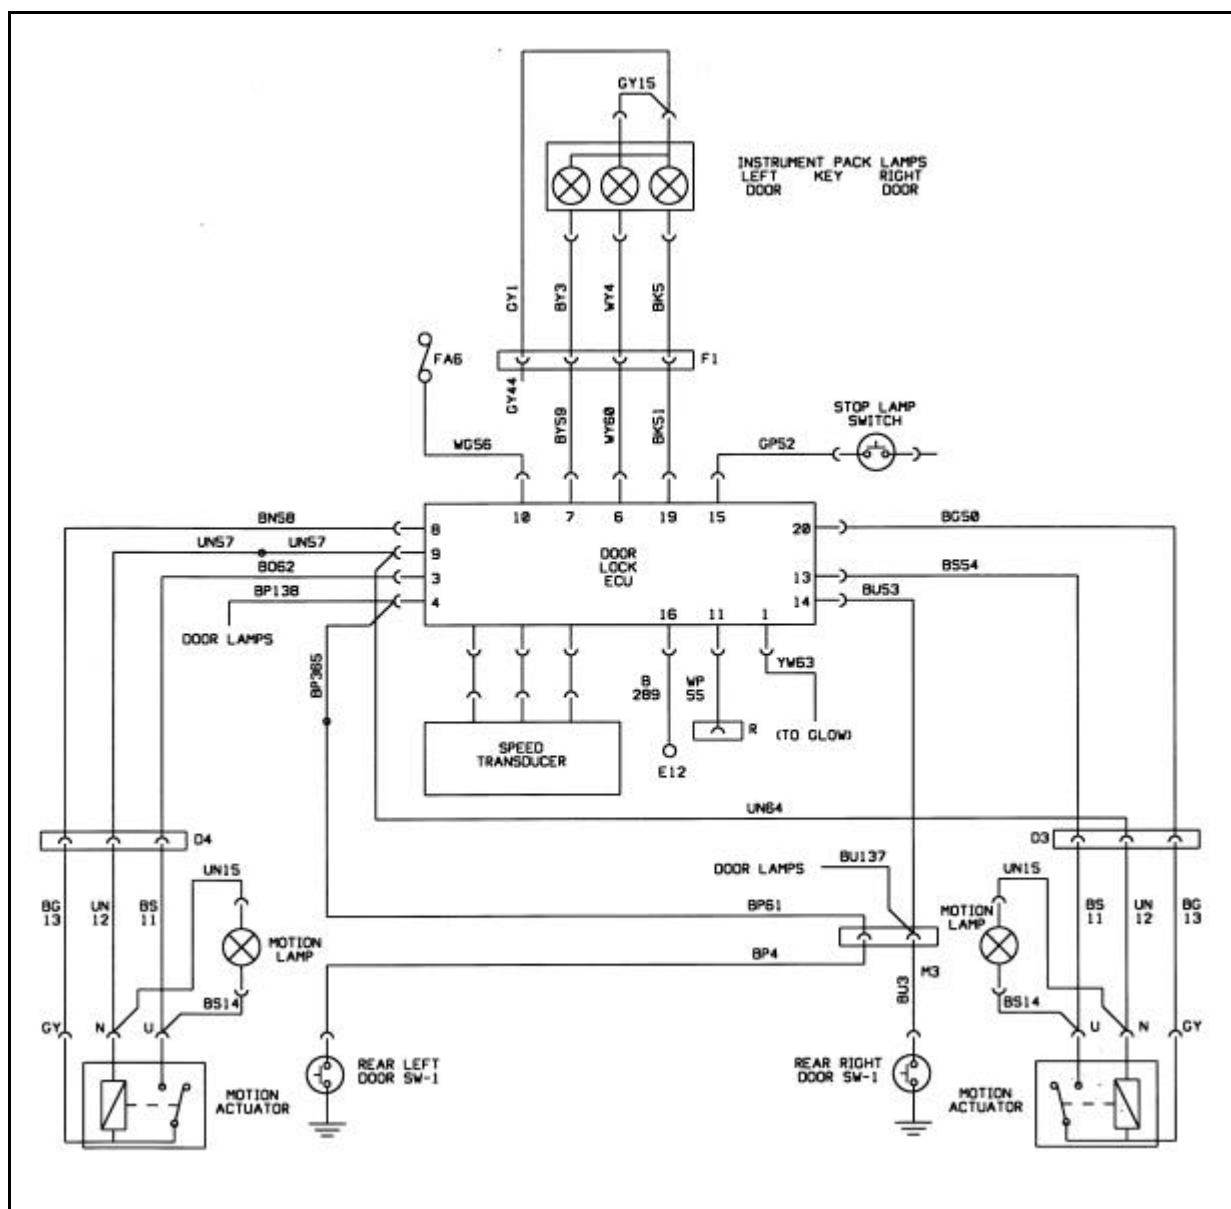

RHD Diesel Serial Nos: 100016-102766 – Issue 2

- F1 Facia left harness to front harness
- D3 Door rear right harness to front harness
- D4 Door rear left harness to front harness
- R Roof harness to front harness
- M3 Rear harness to front harness
- E12 Earth point front A post lower


DOOR LOCKING

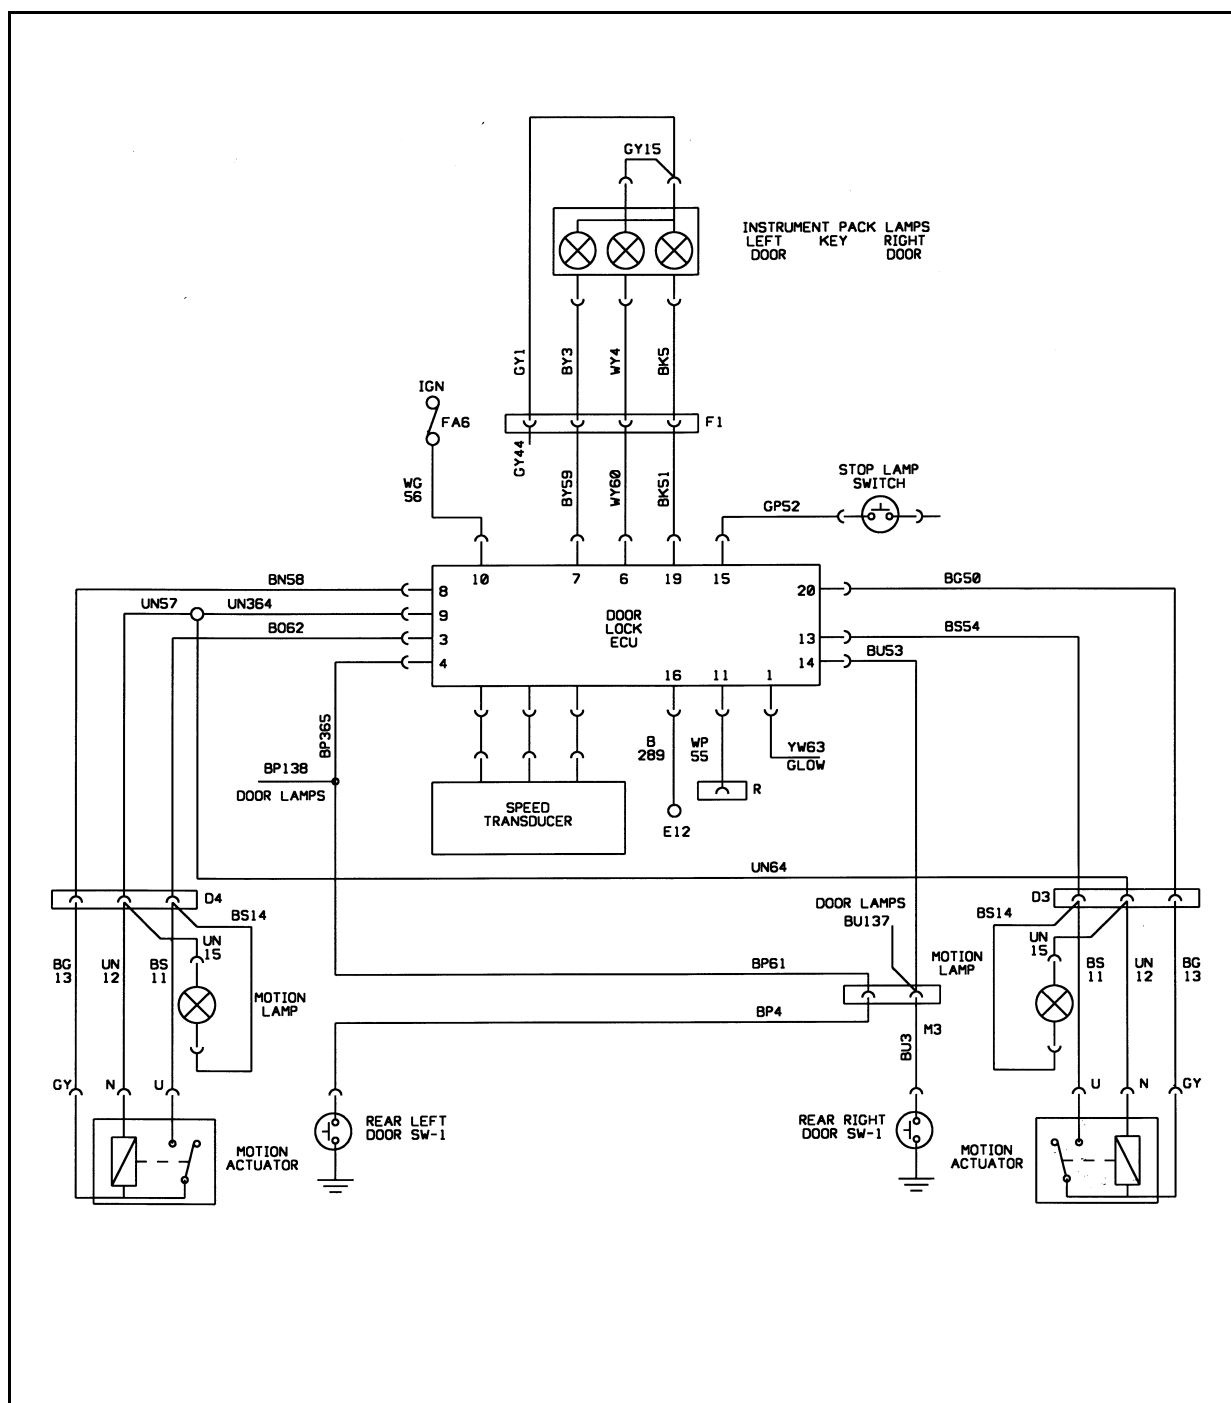

RHD Diesel Serial Nos: 102767 onwards - Issue 2


- F1 Facia left harness to front harness
- D3 Door rear right harness to front harness
- D4 Door rear left harness to front harness
- R Roof harness to front harness
- M3 Rear harness to front harness
- E12 Earth point front A post lower

EXTERIOR LIGHTING

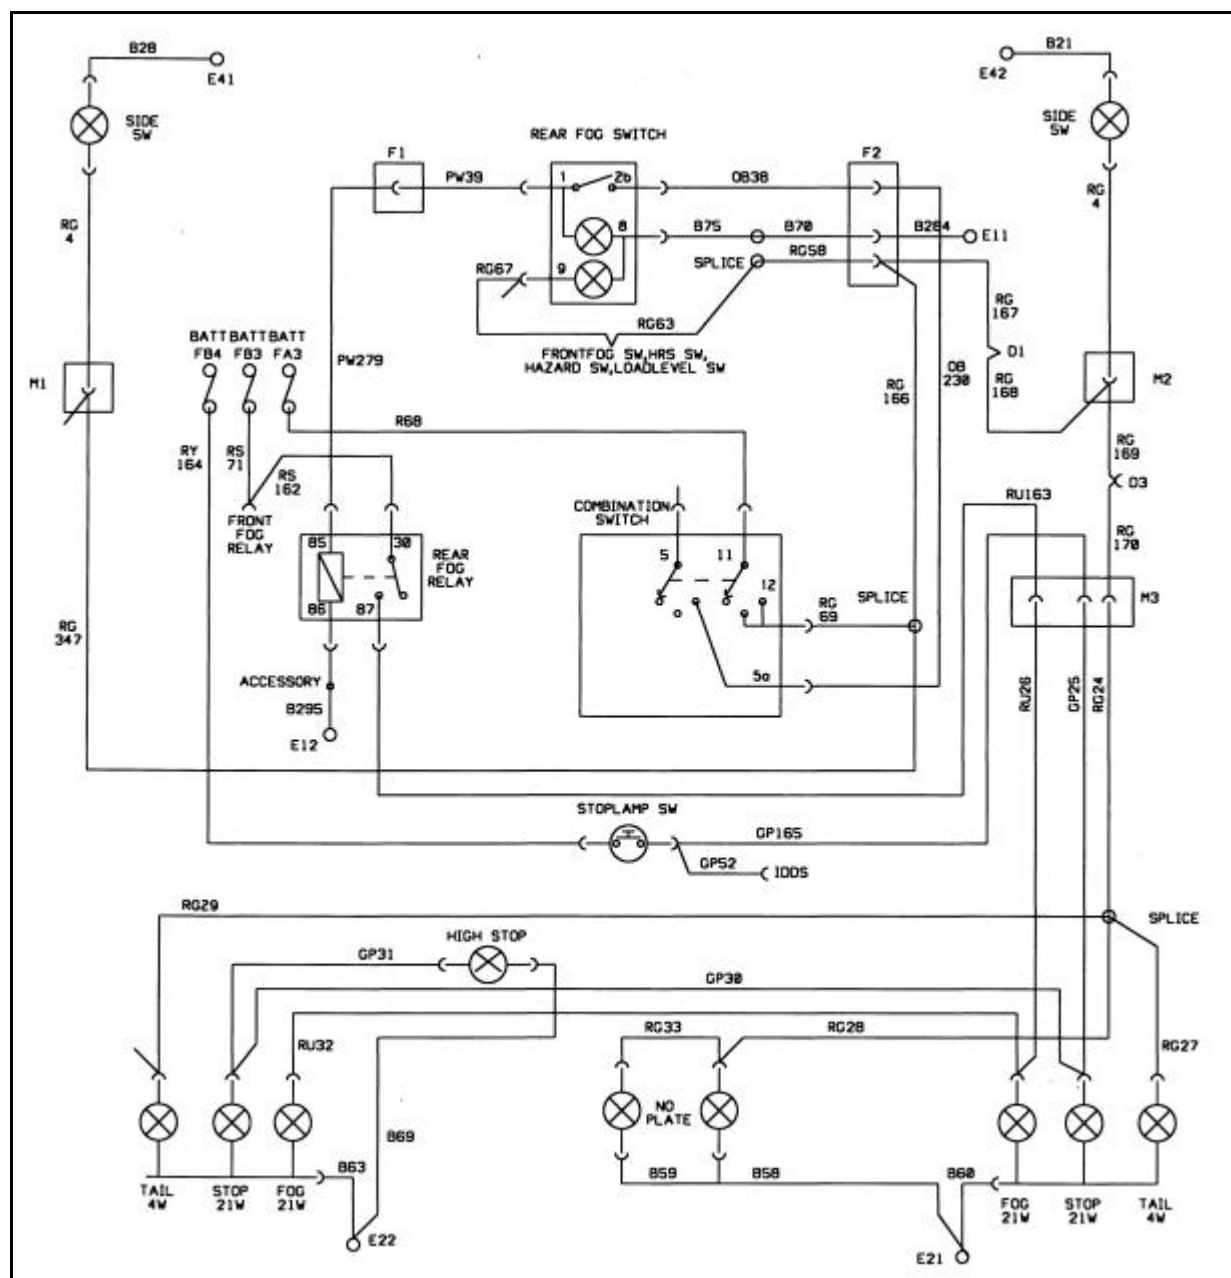

RHD Diesel Serial Nos: 100016-107214 – Issue 2


- M1 Under bonnet left harness to front harness
- M2 Under bonnet right harness to front harness
- F1 Facia left harness to front harness
- F2 Facia right harness to front harness
- M3 Rear harness to front harness
- E12 Earth point front A post lower
- E21 Earth point rear right lamp cluster
- E22 Earth point rear left lamp cluster
- E41 Earth point left headlamp
- E42 Earth point right headlamp

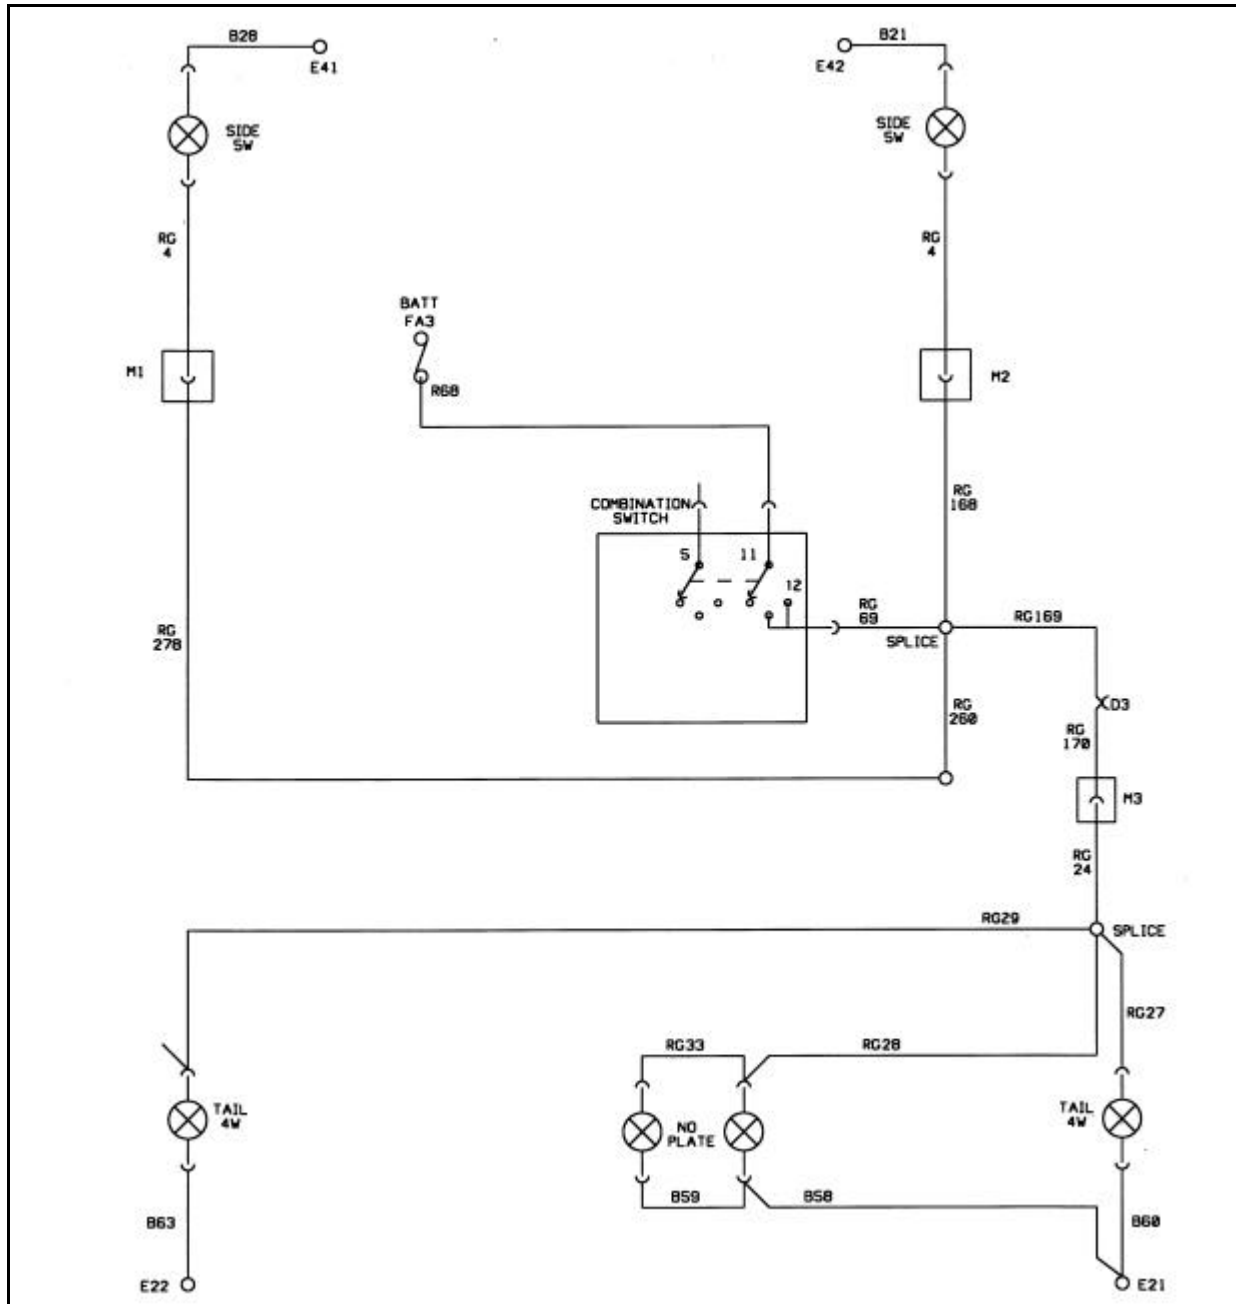EXTERIOR LIGHTING

RHD Diesel Serial Nos: 107215 onwards – Issue 1


- M1 Under bonnet left harness to front harness
- M2 Under bonnet right harness to front harness
- M3 Rear harness to front harness
- E21 Earth point rear right lamp cluster
- E22 Earth point rear left lamp cluster
- E41 Earth point left headlamp
- E42 Earth point right headlamp

EXTERIOR LIGHTING REVERSE LAMP

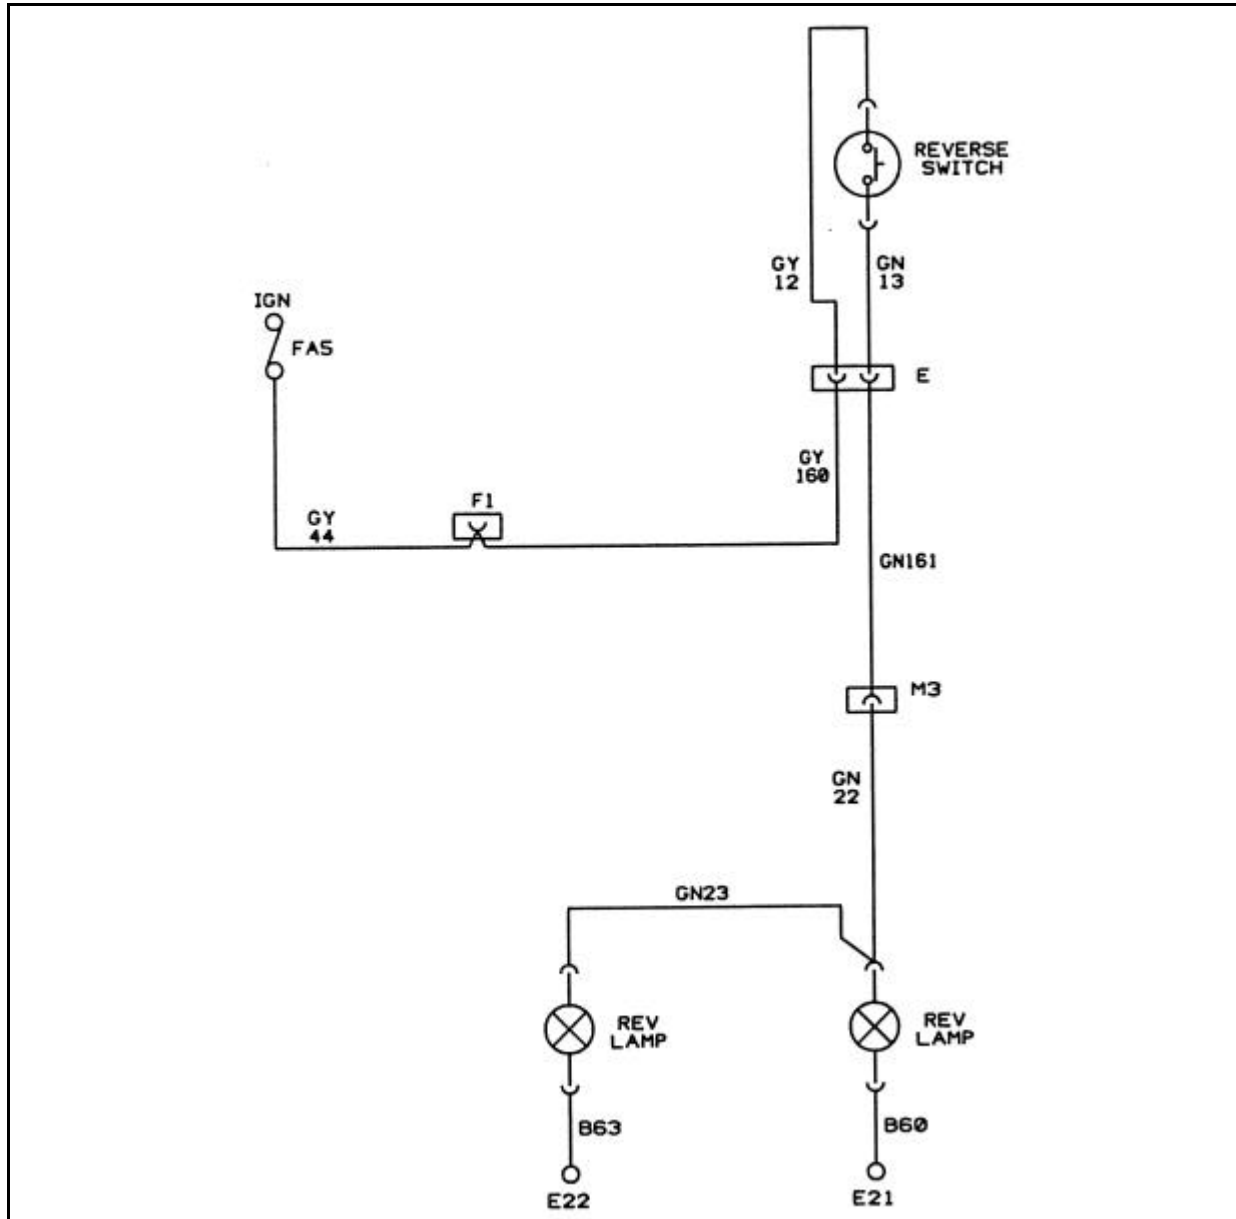


RHD Diesel – Issue 1

- E Engine harness to front harness
- F1 Facia left harness to front harness
- M3 Rear harness to front harness
- E21 Earth point on rear right lamp cluster
- E22 Earth point on rear left lamp cluster

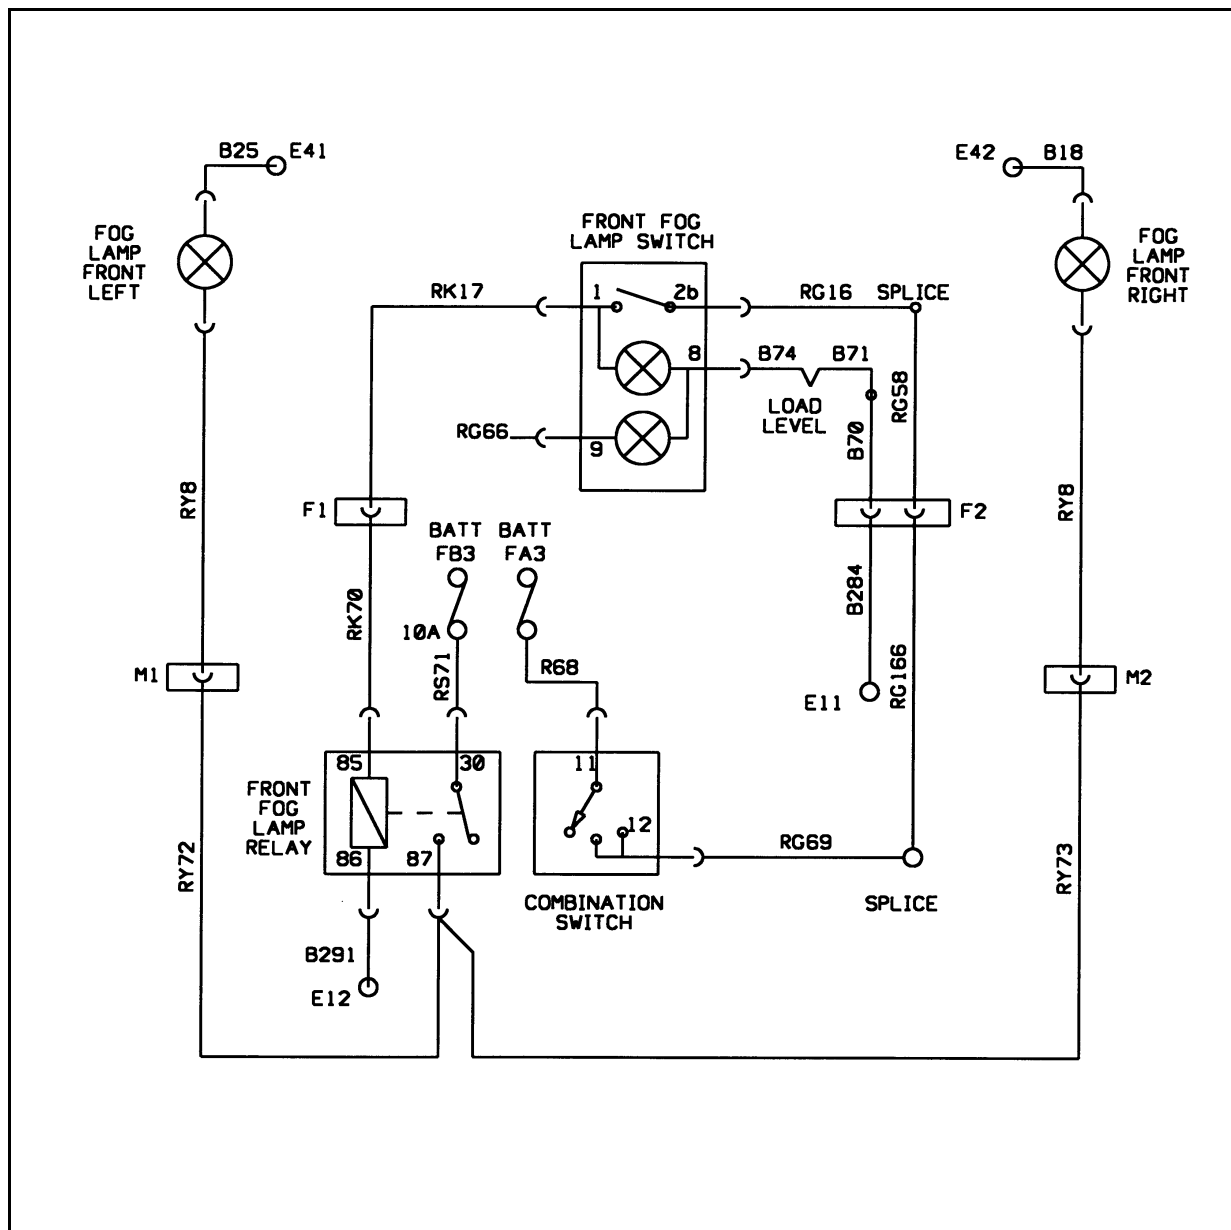FOG, FRONT


RHD Diesel Serial Nos: 100016-107214 – Issue 3

- F1 Facia left harness to front harness
- F2 Facia right harness to front harness
- M2 Under bonnet right harness to front harness
- M1 Under bonnet left harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post
- E41 Earth point left headlamp
- E42 Earth point right headlamp

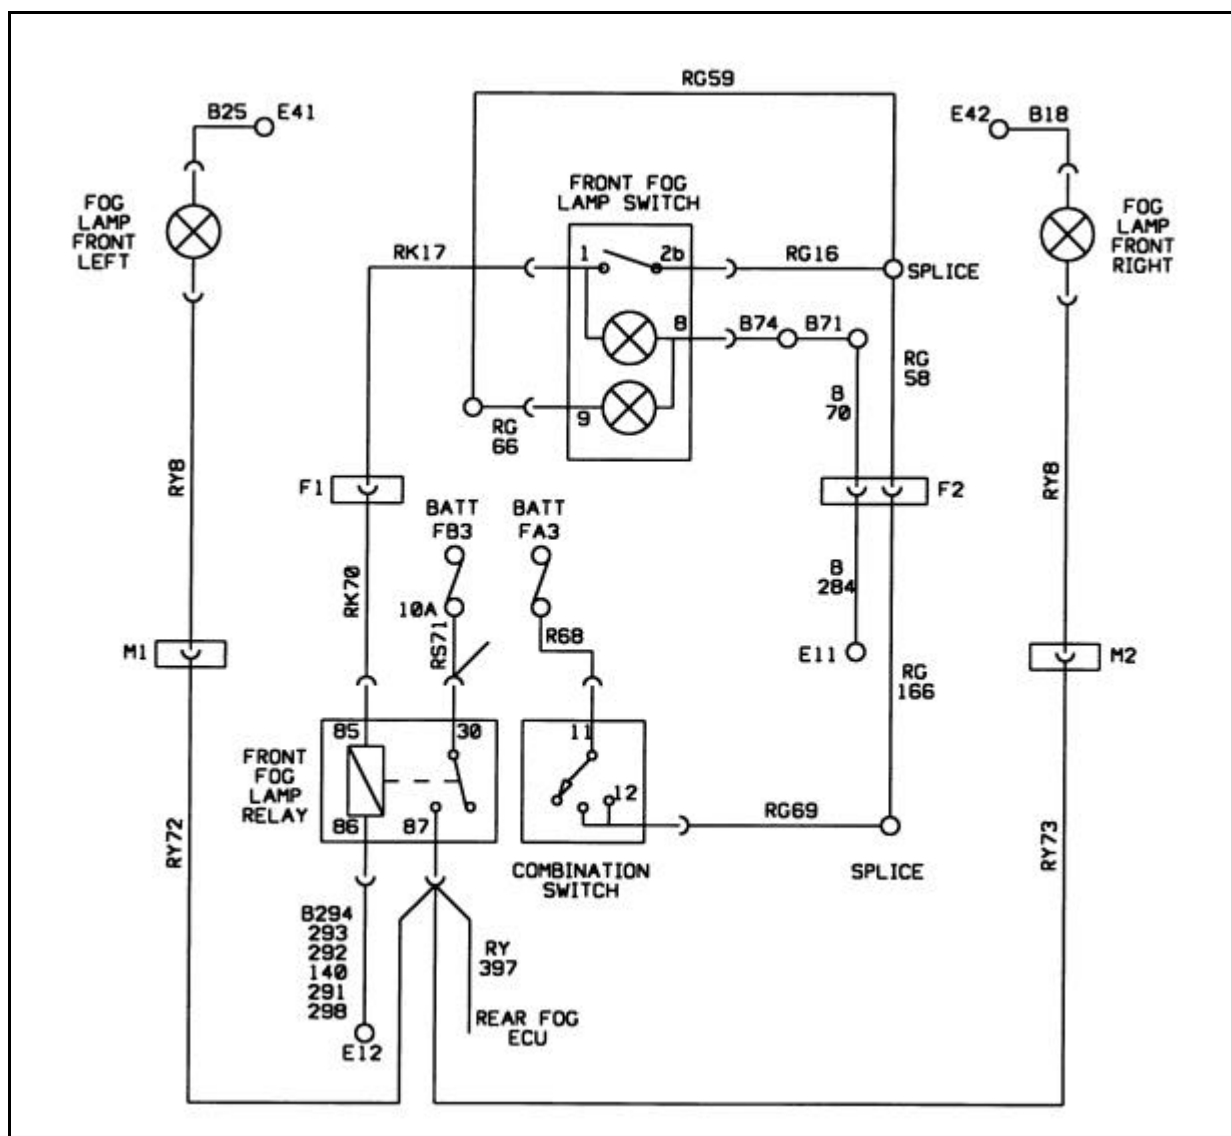FOG, FRONT


RHD Diesel Serial Nos: 107215 onwards – Issue 1

- F1 Facia left harness to front harness
- F2 Facia right harness to front harness
- M2 Under bonnet right harness to front harness
- M1 Under bonnet left harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post
- E41 Earth point left headlamp
- E42 Earth point right headlamp

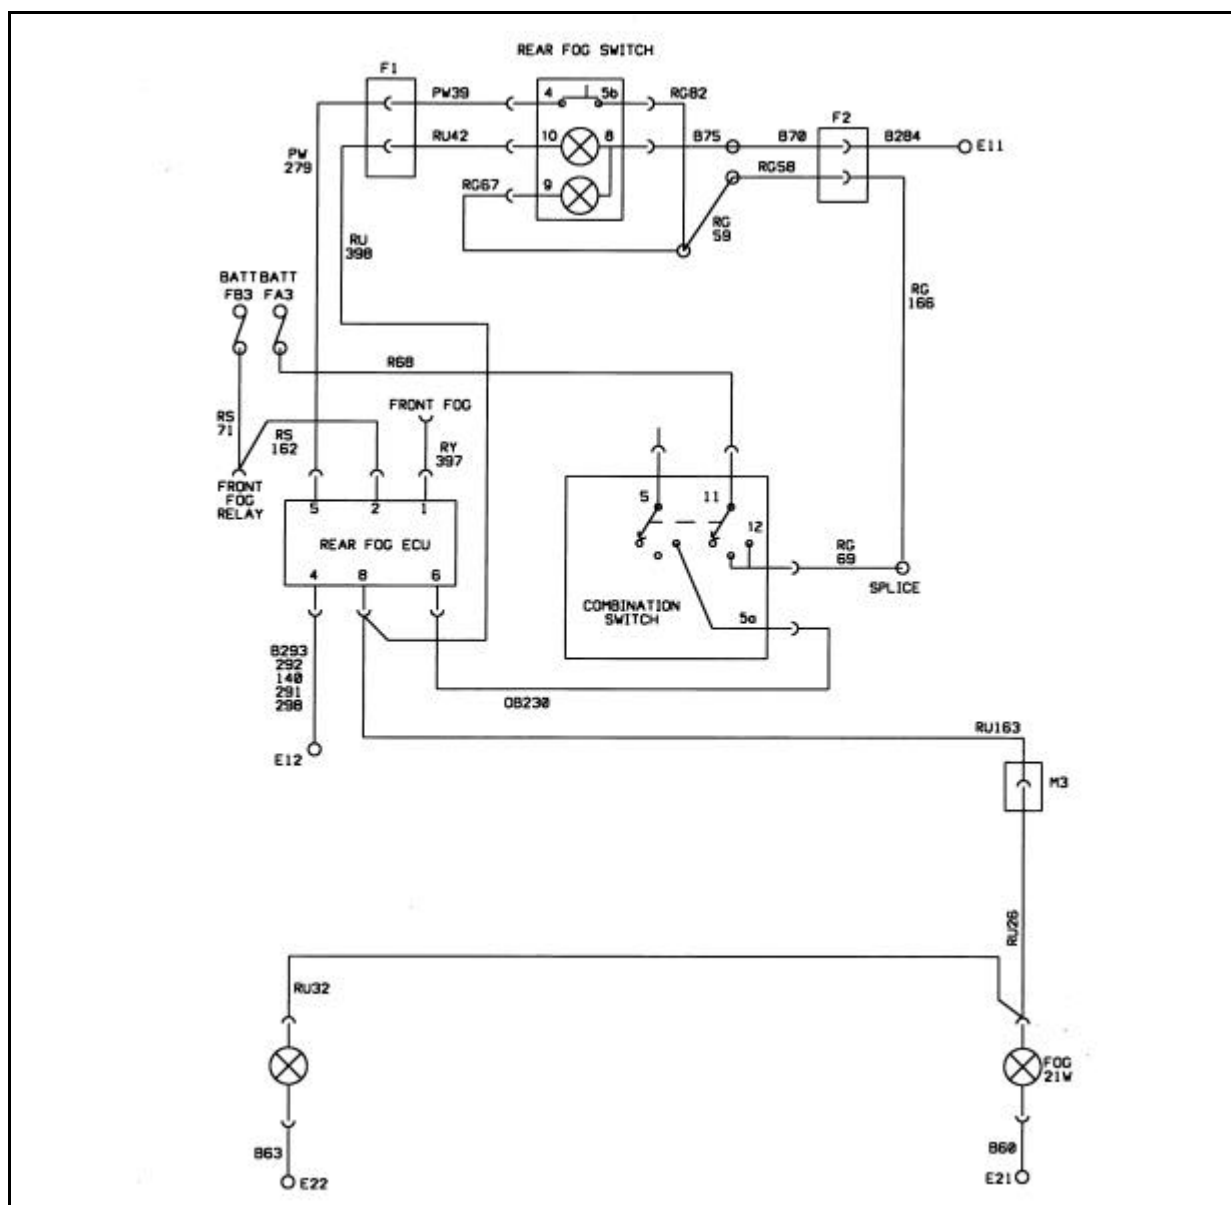FOG, REAR

RHD Diesel Serial Nos: 107215 onwards – Issue 1


- M1 Under bonnet left harness to front harness
- M2 Under bonnet right harness to front harness
- F1 Facia left harness to front harness
- F2 Facia right harness to front harness
- M3 Rear harness to front harness
- E12 Earth point lower left A post
- E21 Earth point rear right lamp cluster
- E22 Earth point rear left lamp cluster
- E41 Earth point left headlamp
- E42 Earth point right headlamp

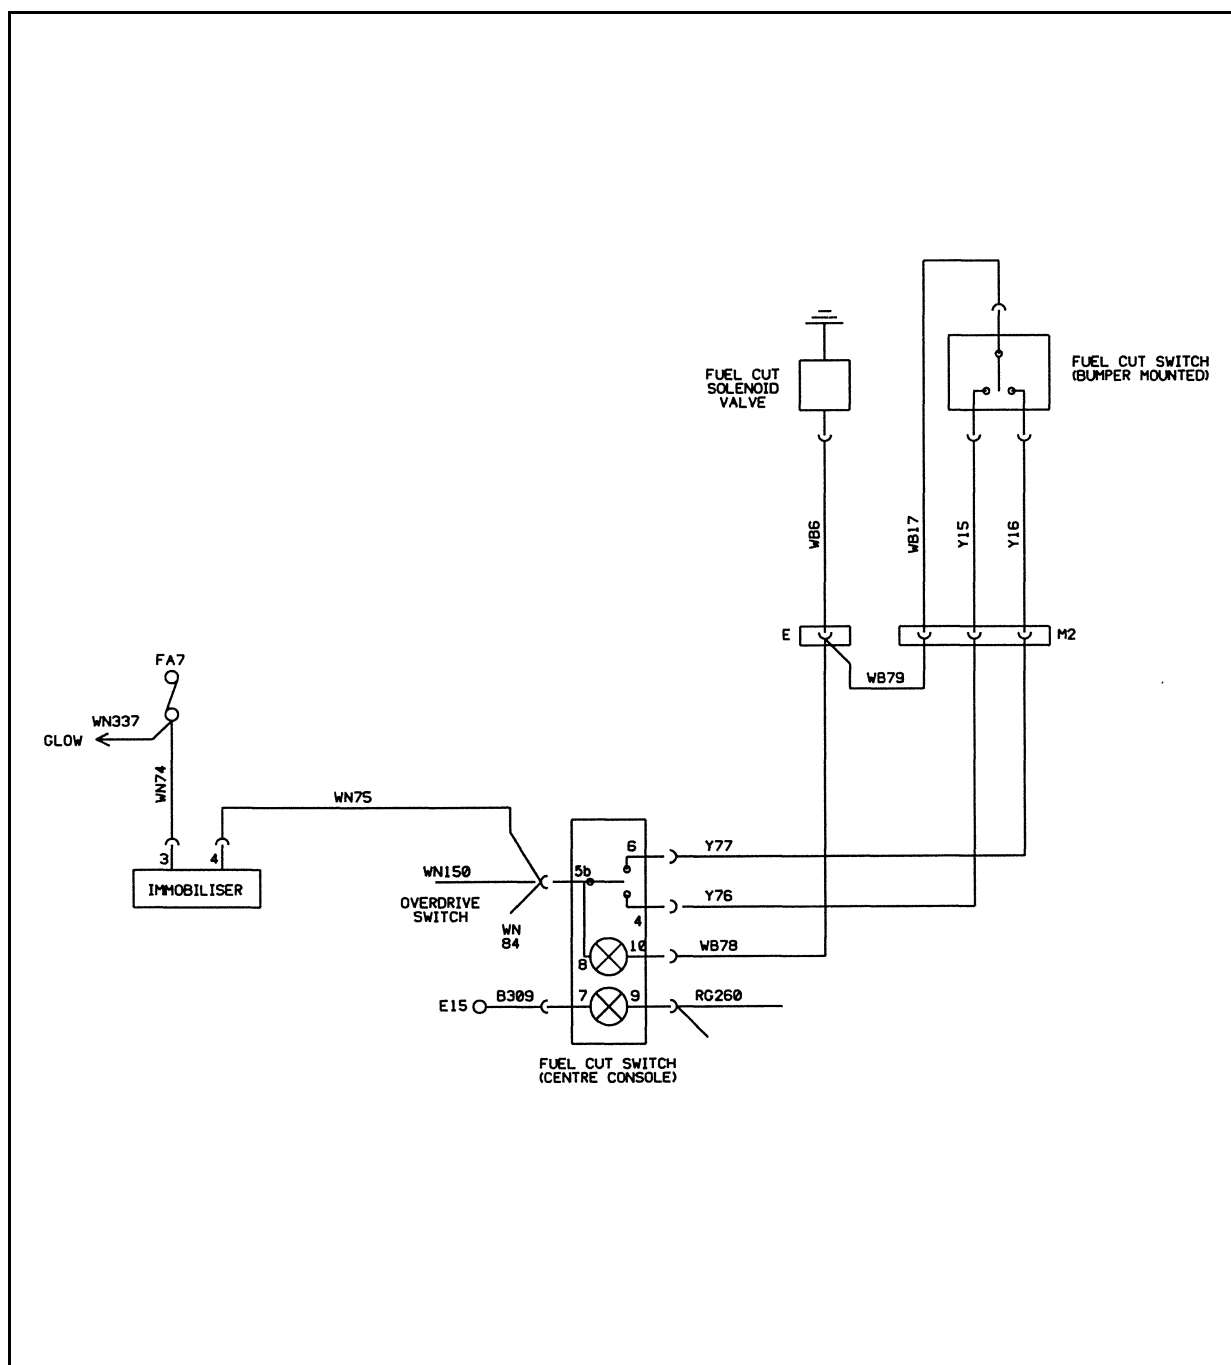FUEL CUT OFF

RHD Diesel Serial Nos: 100016-102766 – Issue 1


E Engine harness to front harness
M2 Under bonnet right harness to front harness
E15 Earth point to right of front heater

FUEL CUT OFF

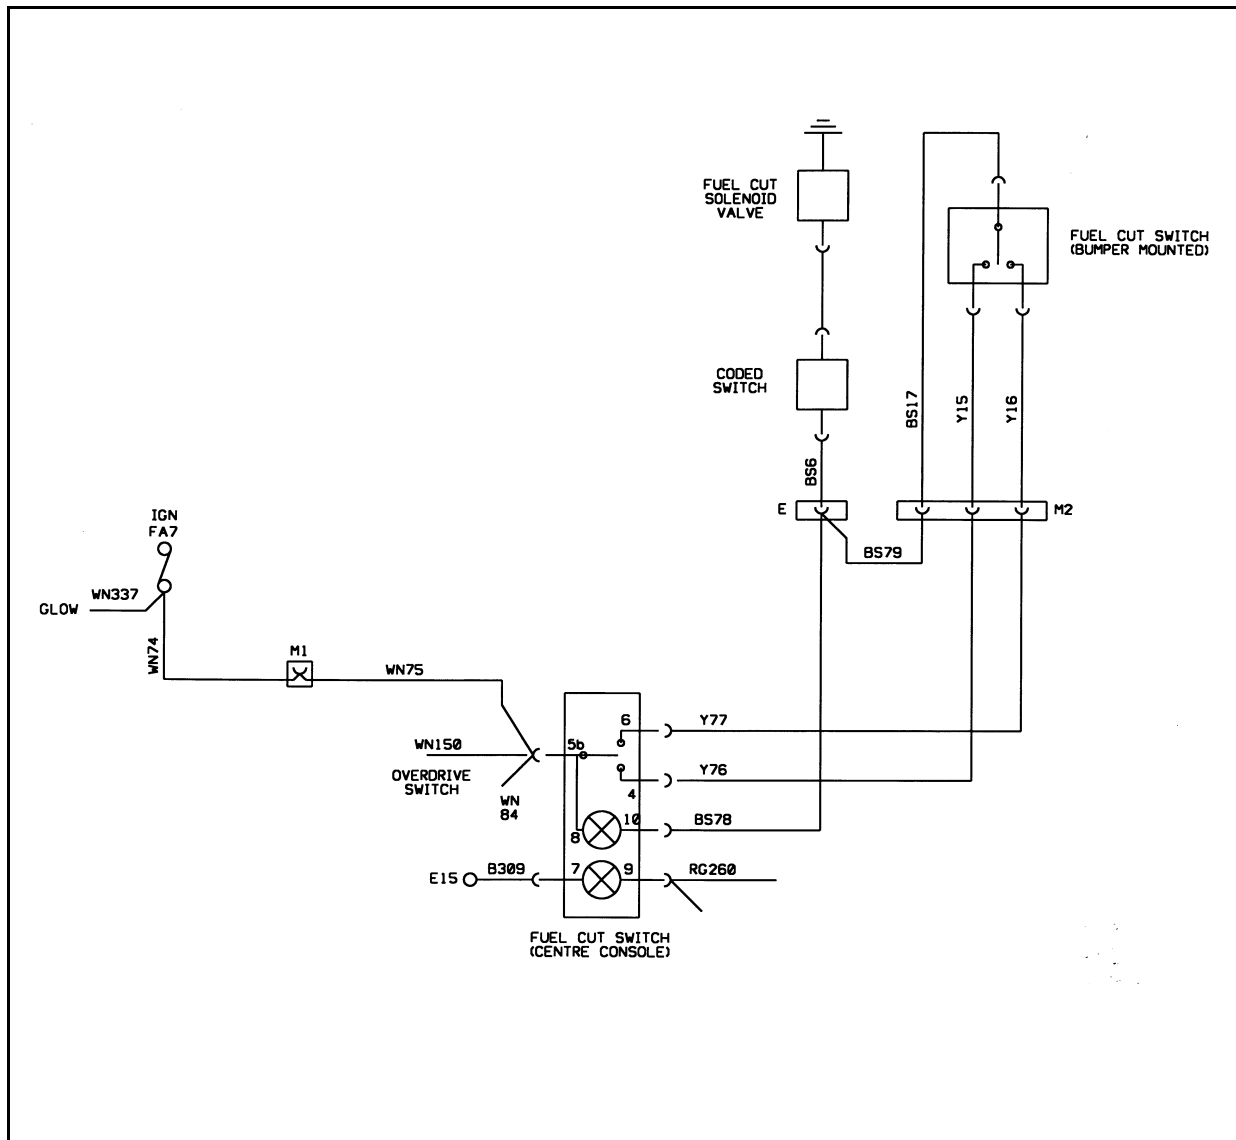

RHD Diesel Serial Nos: 102767-107214 – Issue 1


E Engine harness to front harness
M2 Under bonnet right harness to front harness
E15 Earth point to right of front heater

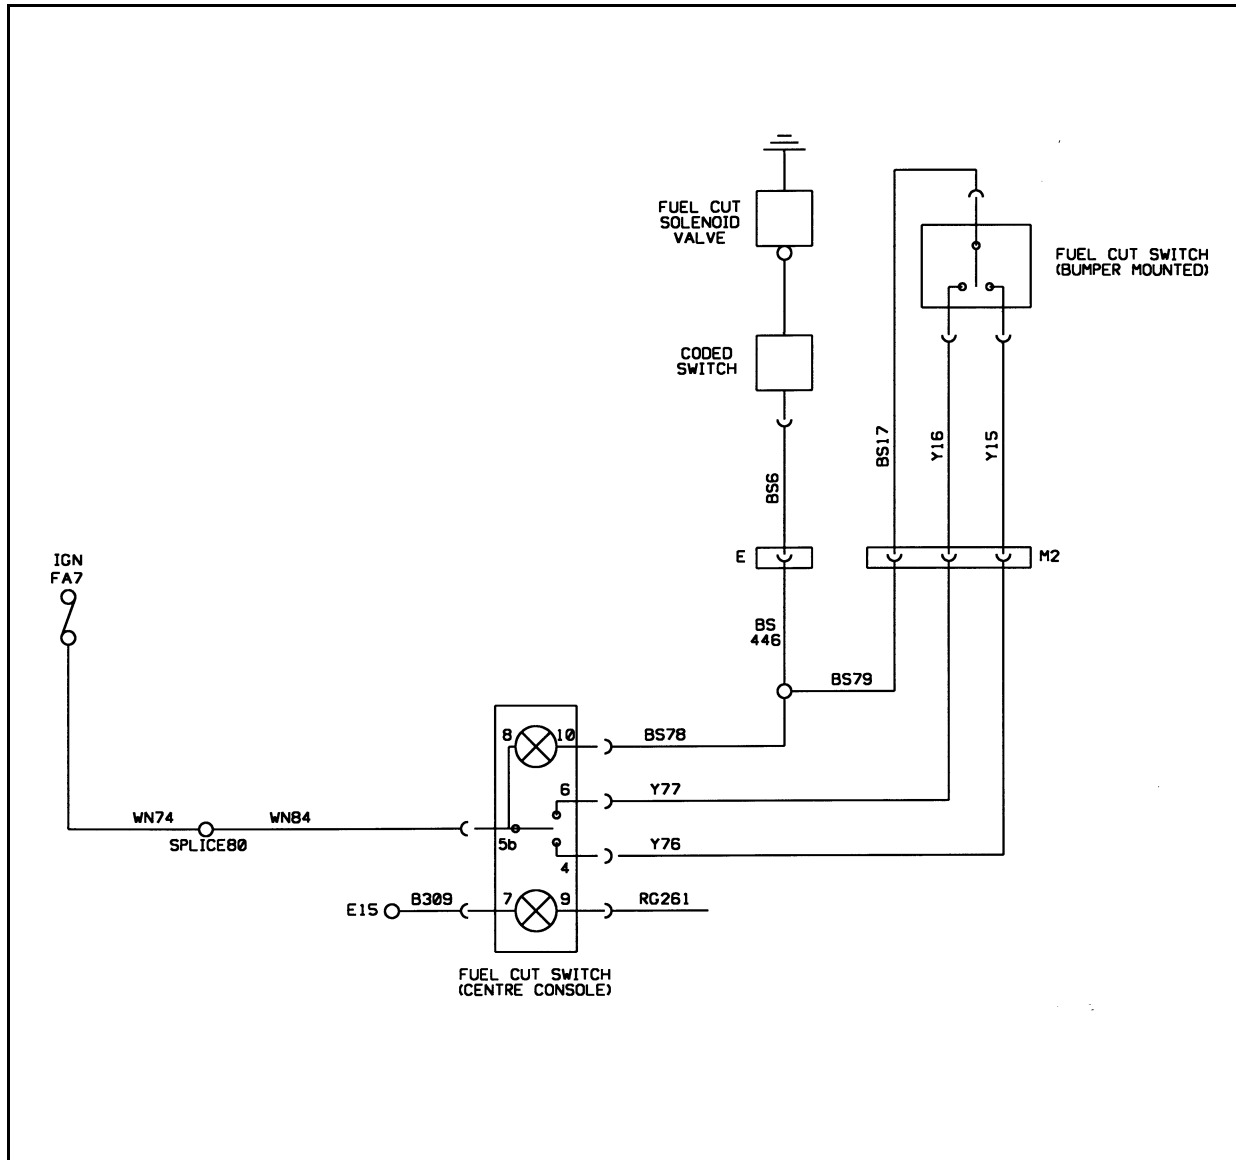FUEL CUT OFF

RHD Diesel Serial Nos: 107215 onwards – Issue 1

- E Engine harness to front harness
- M2 Under bonnet right harness to front harness
- E15 Earth point to right of front heater


GAUGES

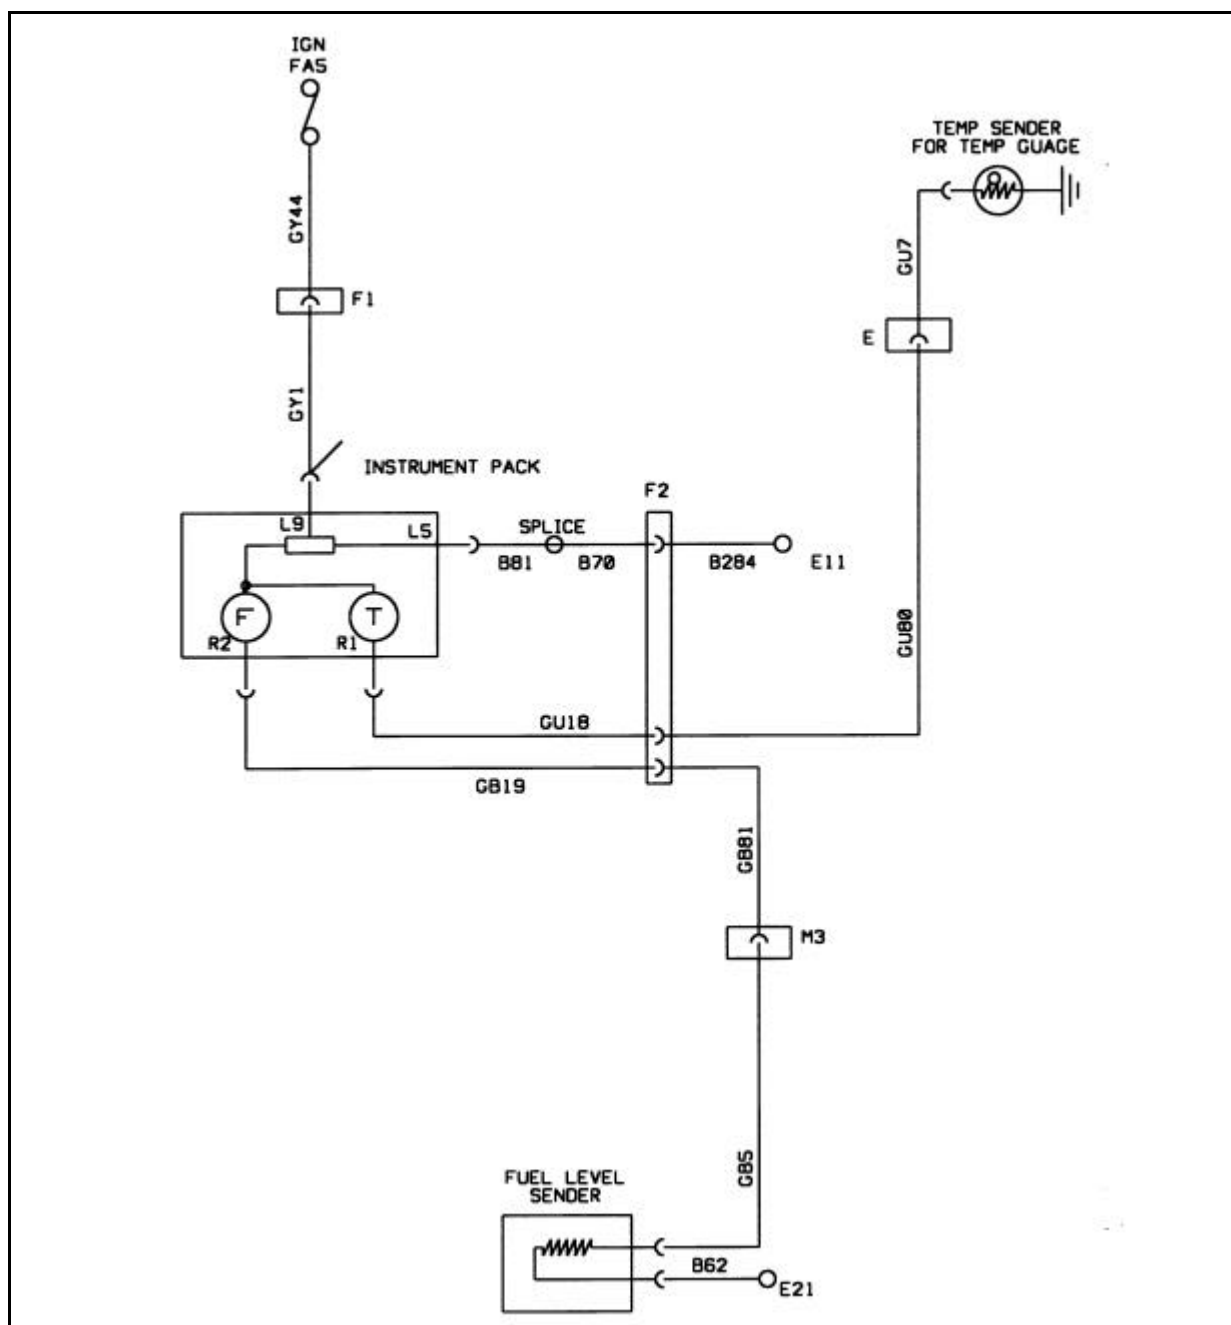

RHD Diesel– Issue 2


- E Engine harness to front harness
- F1 Facia left harness to front harness
- F2 Facia right harness to front harness
- M3 Rear harness to front harness
- E11 Earth point lower right A post
- E21 Earth point rear right lamp cluster

GLOW

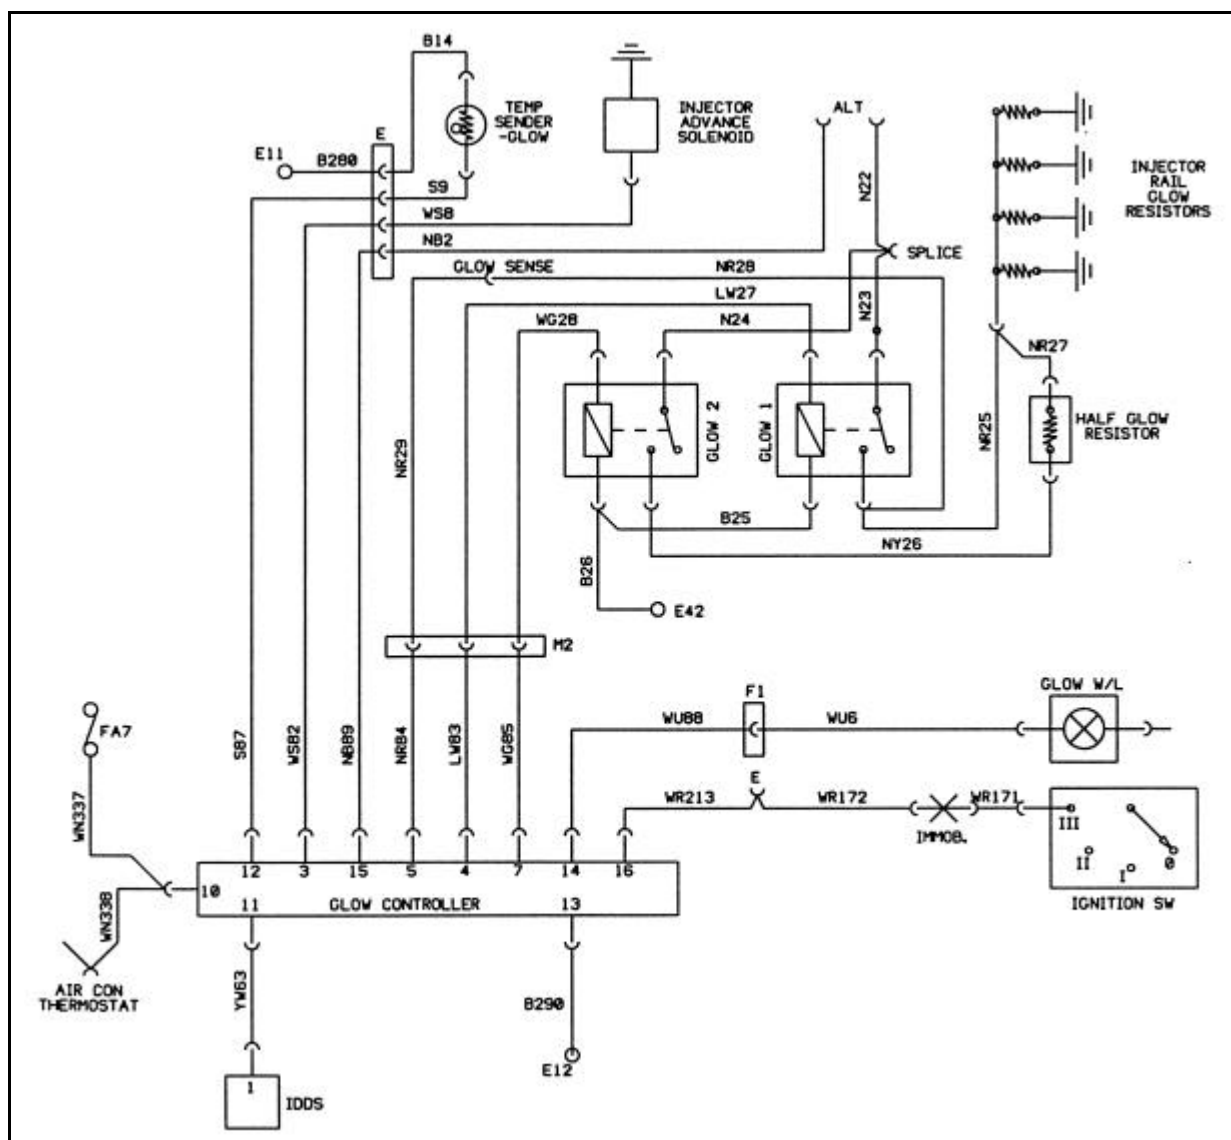


RHD Diesel Serial Nos: 100016-102766 – Issue 1

- E Engine harness to front harness
- F1 Facia left harness to front harness
- M2 Under bonnet right harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post
- E42 Earth point right headlamp

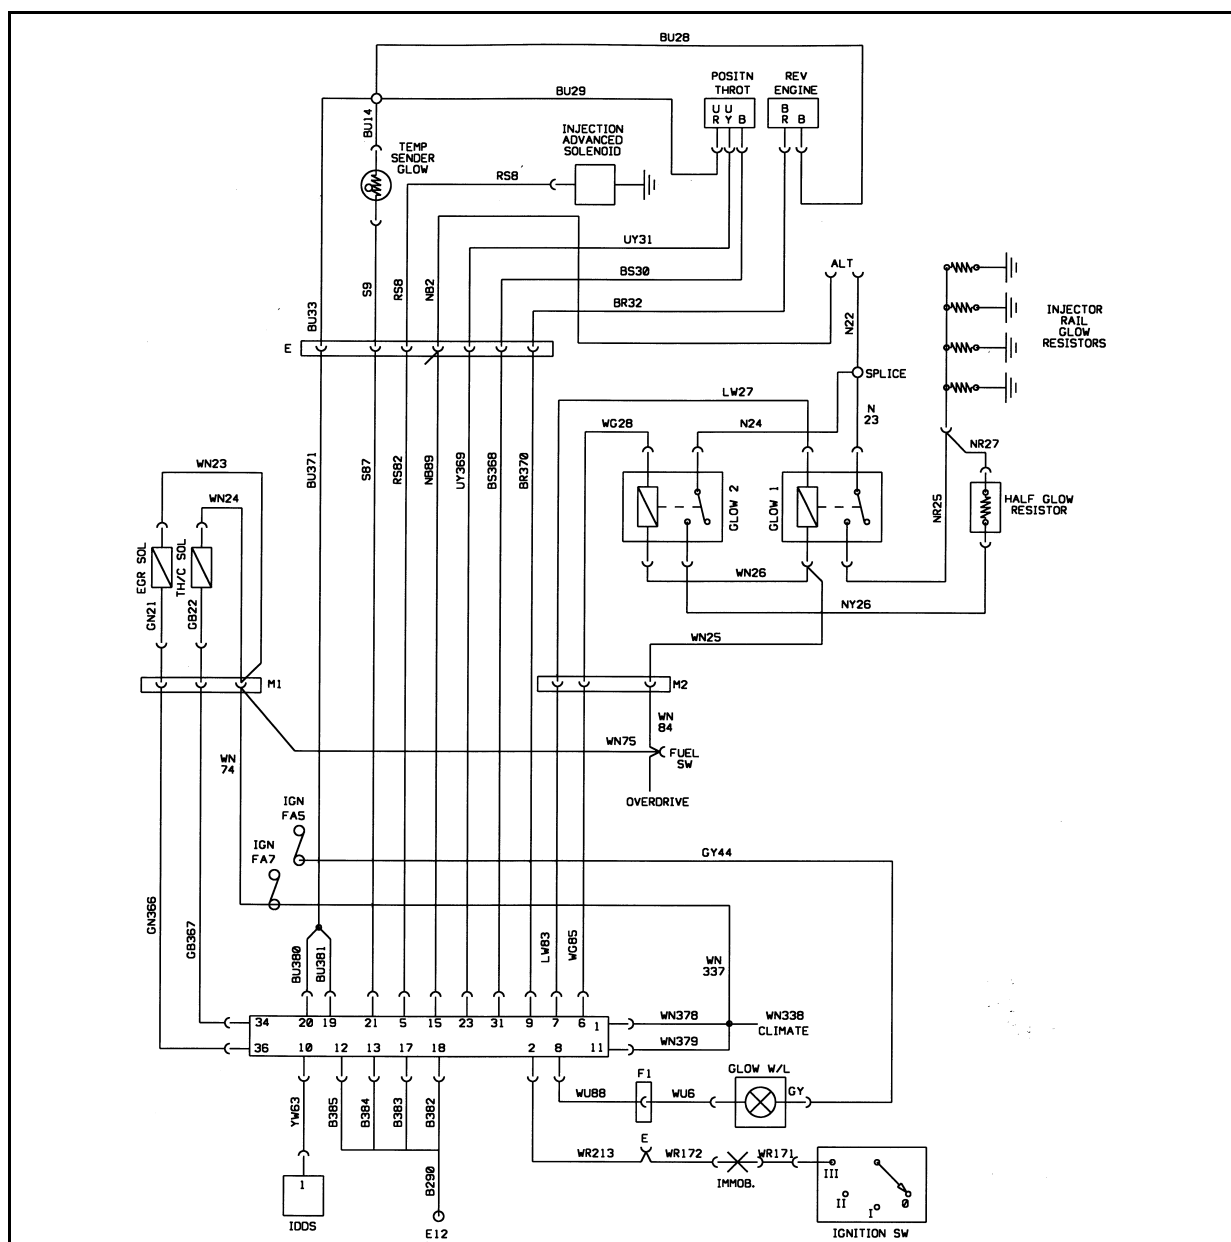GLOW/EGR

RHD Diesel Serial Nos: 102767-107214 – Issue 1


- E Engine harness to front harness
- F1 Facia left harness to front harness
- M1 Under bonnet left harness to front harness
- M2 Under bonnet right harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post
- E42 Earth point right headlamp

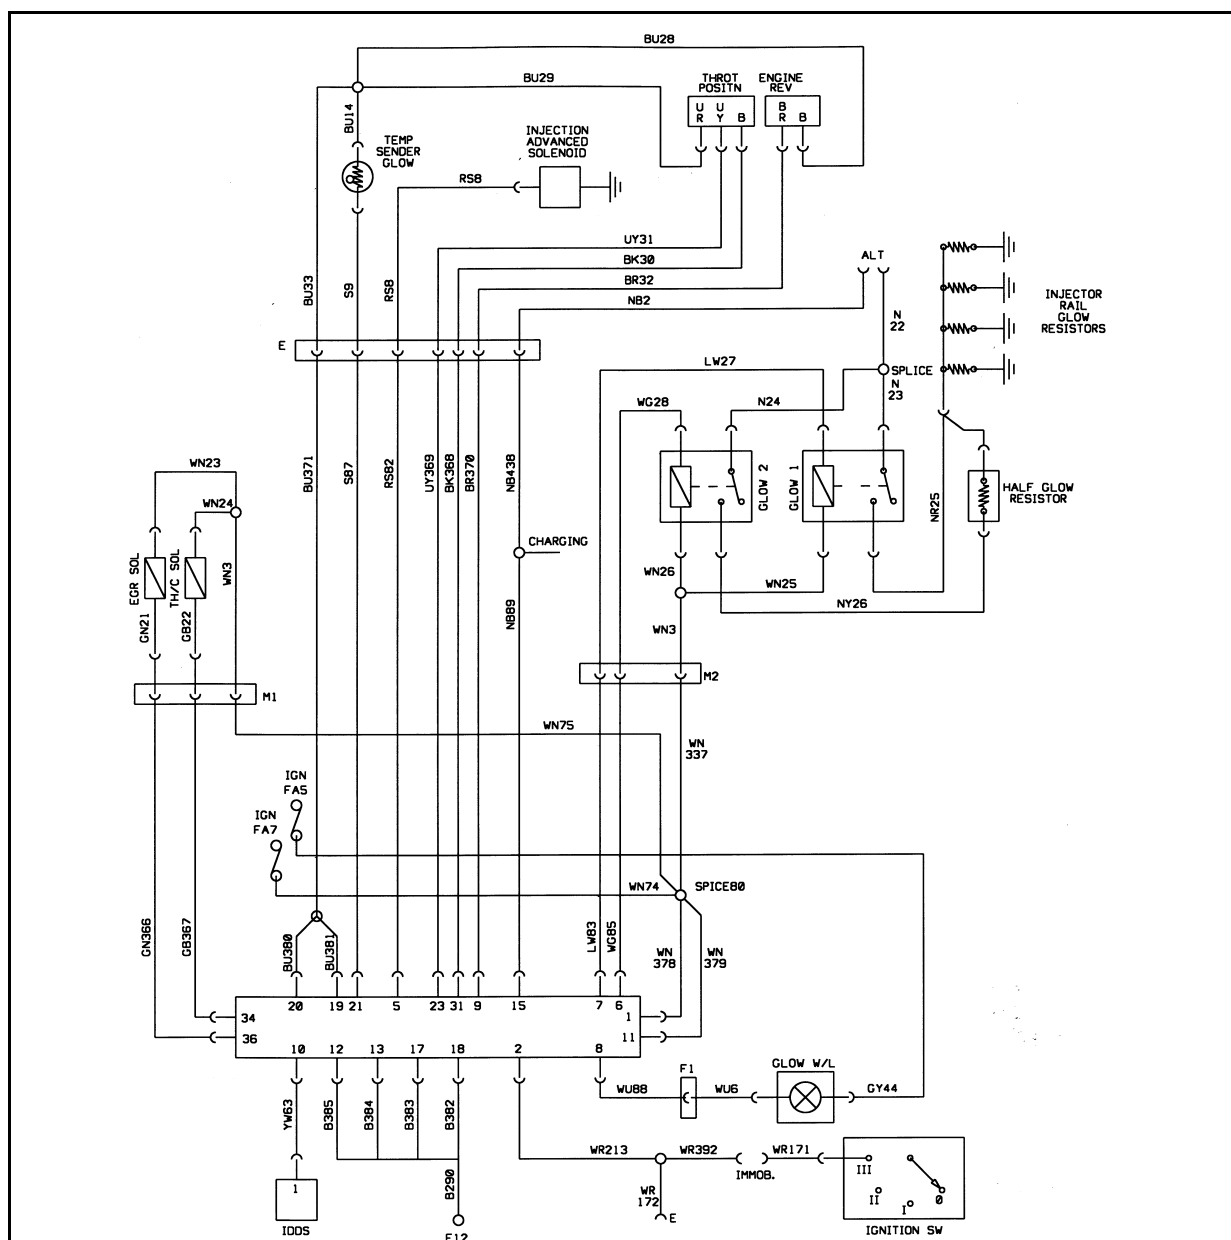GLOW/EGR

RHD Diesel Serial Nos: 107215 onwards – Issue 1


- E Engine harness to front harness
- F1 Facia left harness to front harness
- M1 Under bonnet left harness to front harness
- M2 Under bonnet right harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post
- E42 Earth point right headlamp

HEADLAMP

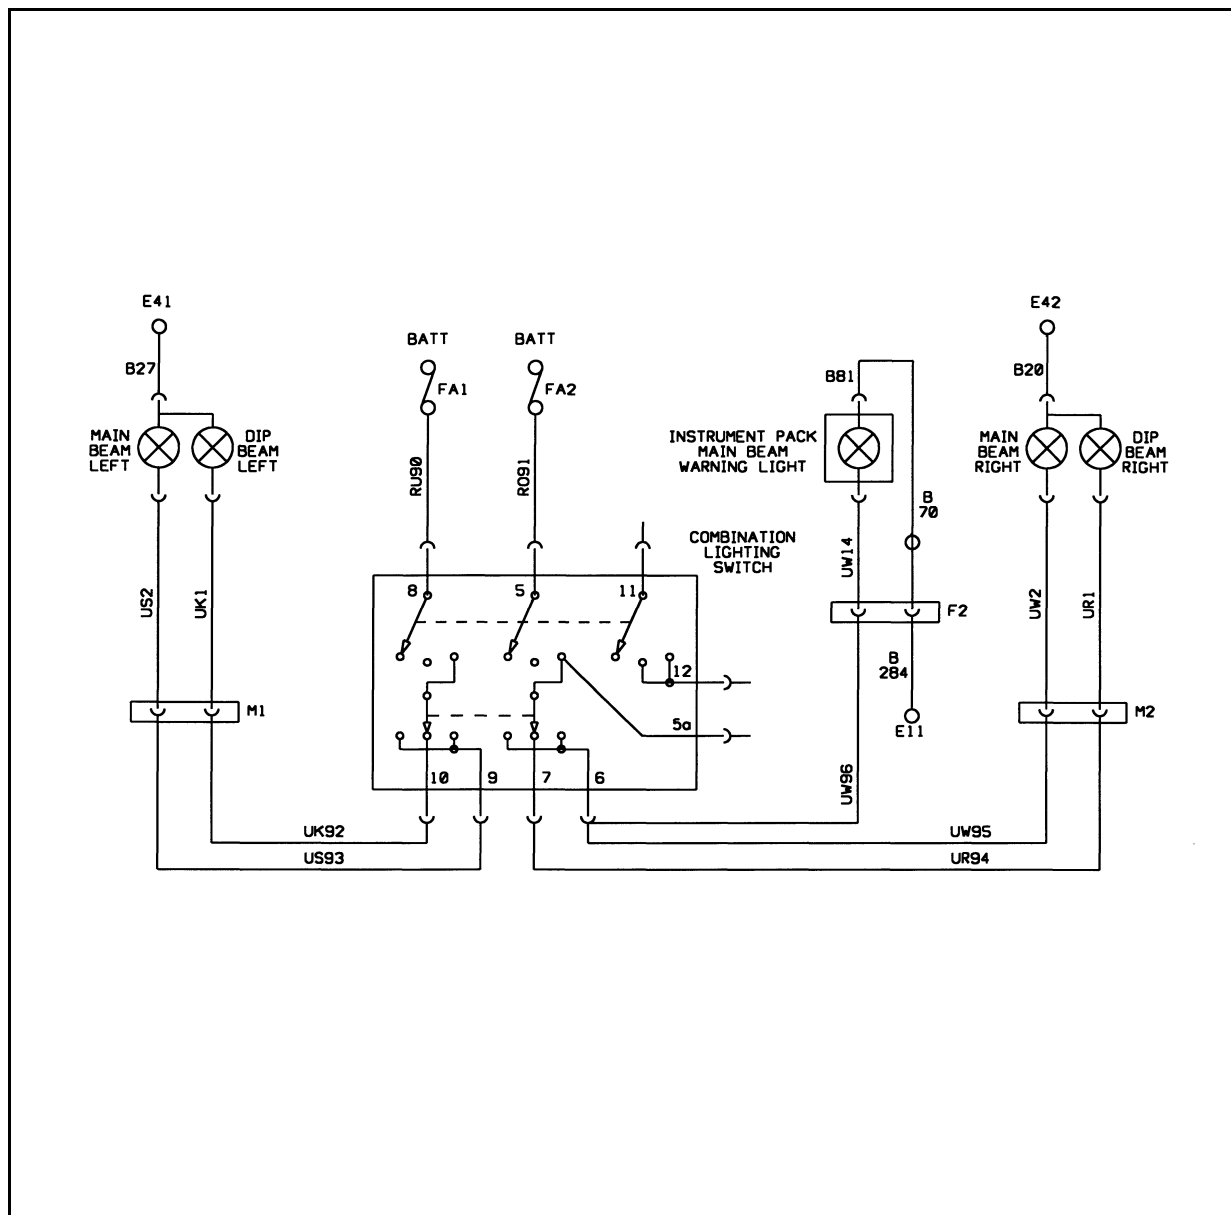


RHD Diesel – Issue 3

- M1 Under bonnet left harness to front harness
- M2 Under bonnet right harness to front harness
- F2 Facia right harness to front harness
- E11 Earth point lower right A post
- E41 Earth point left headlamp
- E42 Earth point right headlamp

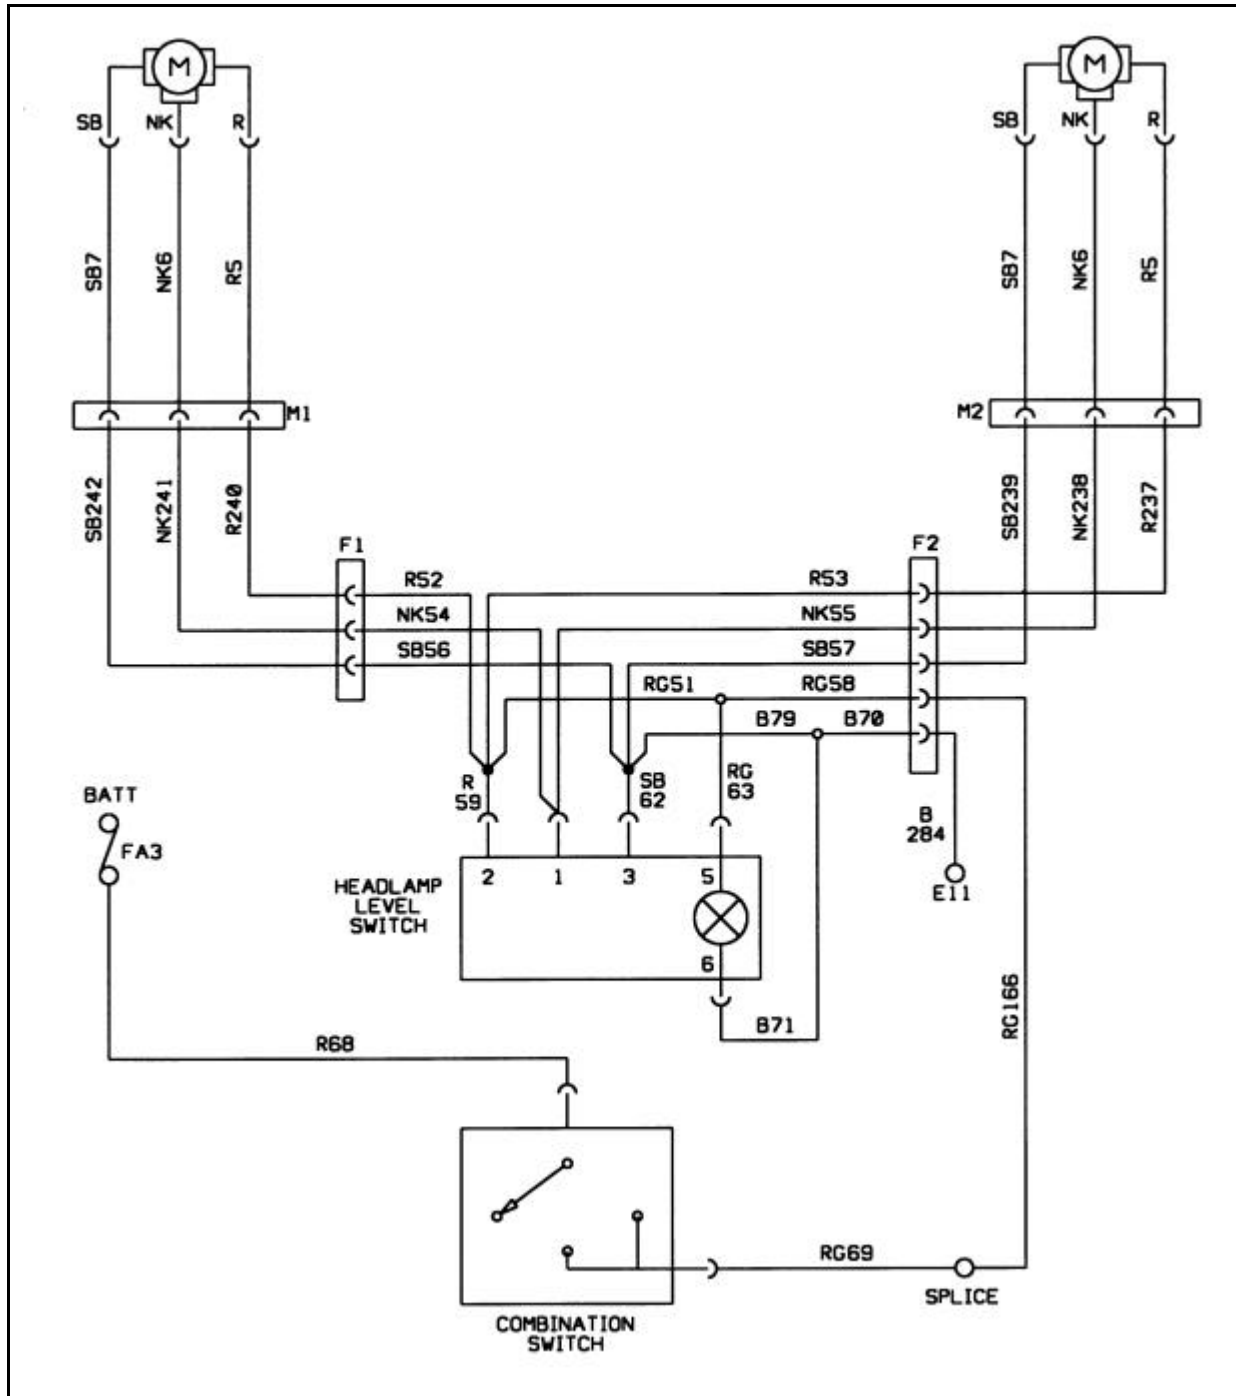HEADLAMP LEVELLING


RHD Diesel Serial Nos: 100016-107214 – Issue 1

- M1 Under bonnet left harness to front harness
- M2 Under bonnet right harness to front harness
- F1 Facia left harness to front harness
- F2 Facia right harness to front harness
- E11 Earth point lower right A post

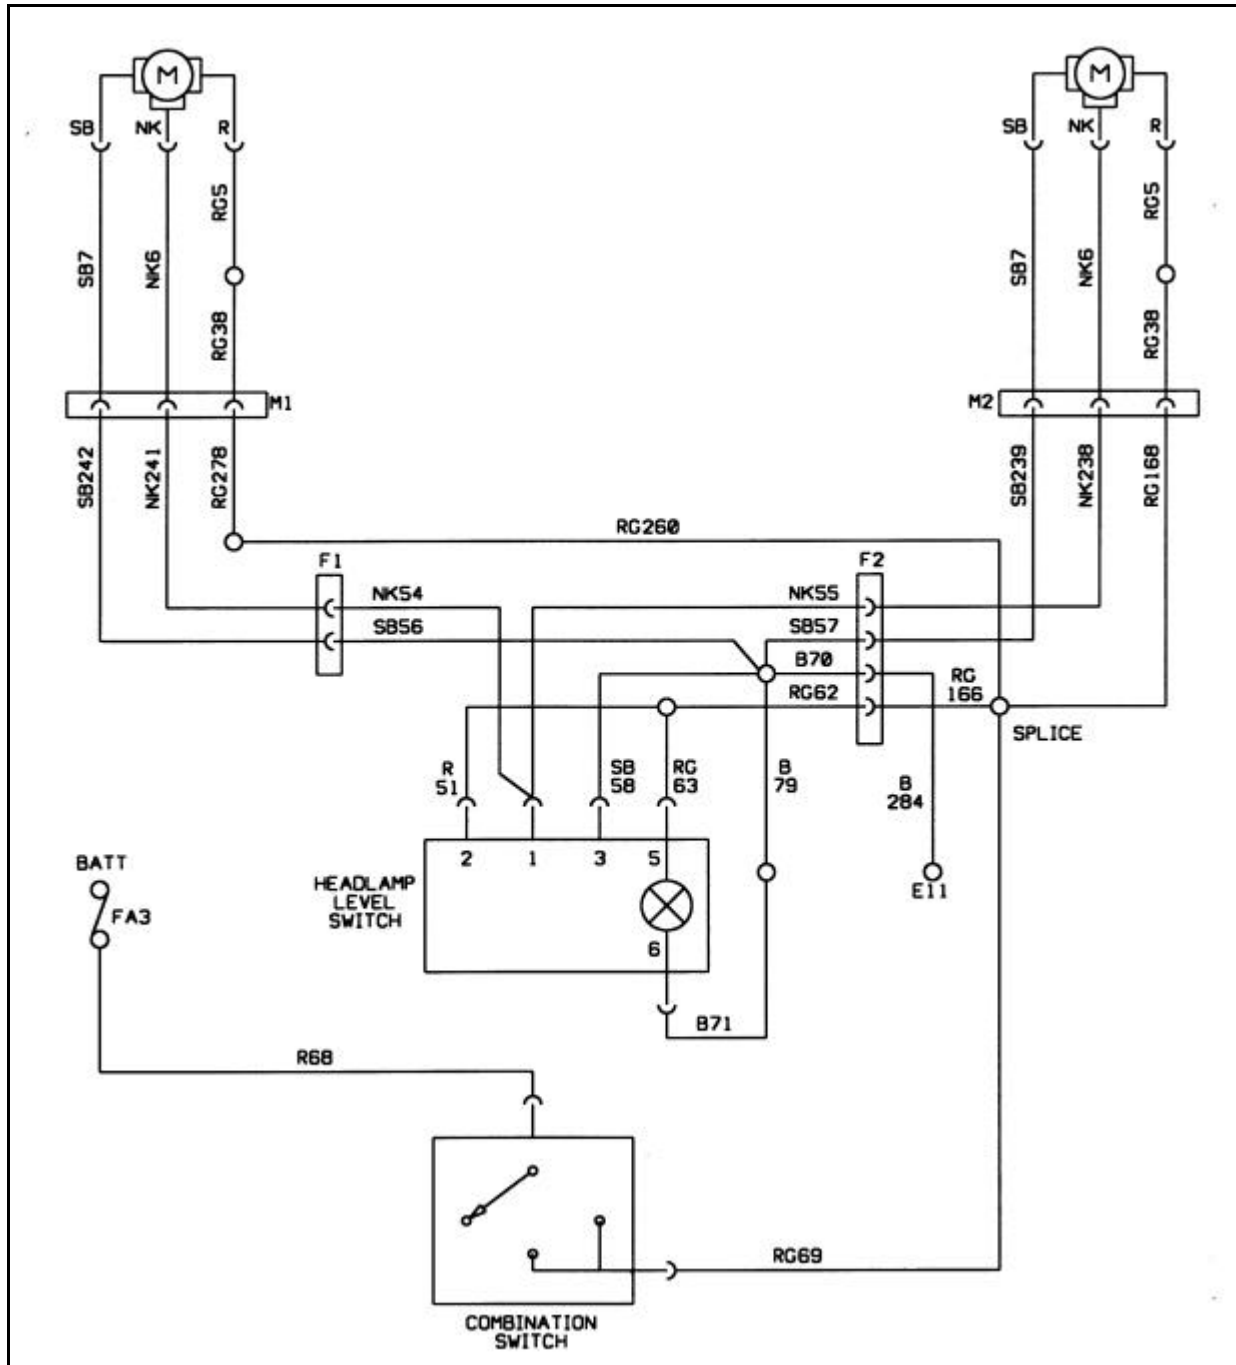HEADLAMP LEVELLING


RHD Diesel Serial Nos: 107215 onwards – Issue 1

- M1 Under bonnet left harness to front harness
- M2 Under bonnet right harness to front harness
- F1 Facia left harness to front harness
- F2 Facia right harness to front harness
- E11 Earth point lower right A post

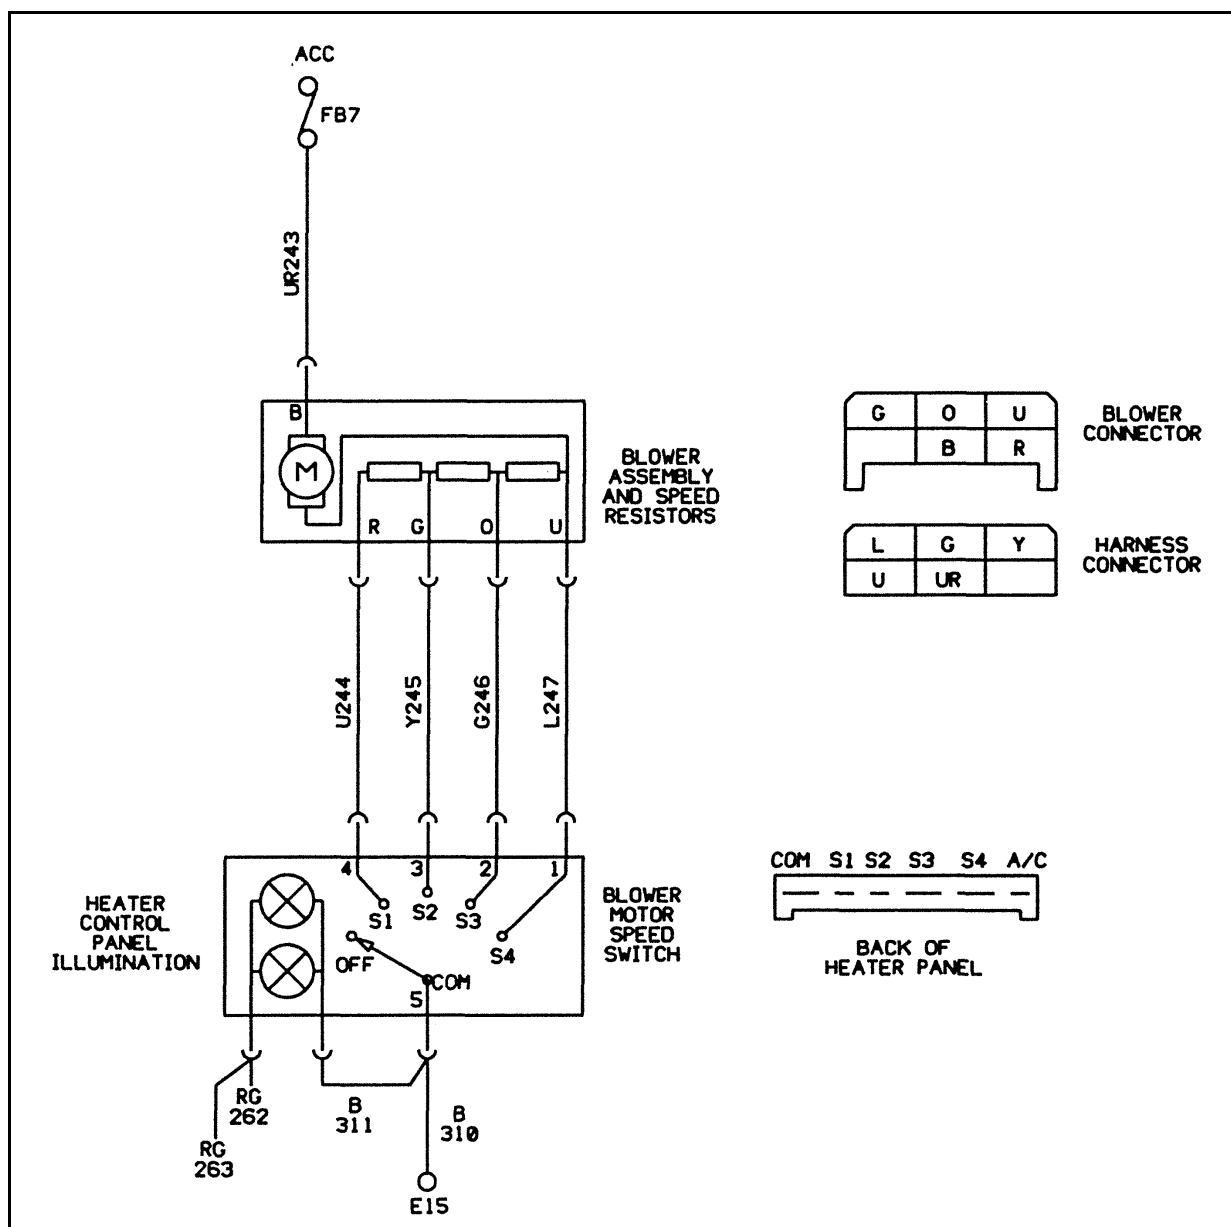HEATER, FRONT

RHD Diesel Serial Nos: 100016-102766– Issue 1


E15 Earth point to right of front heater

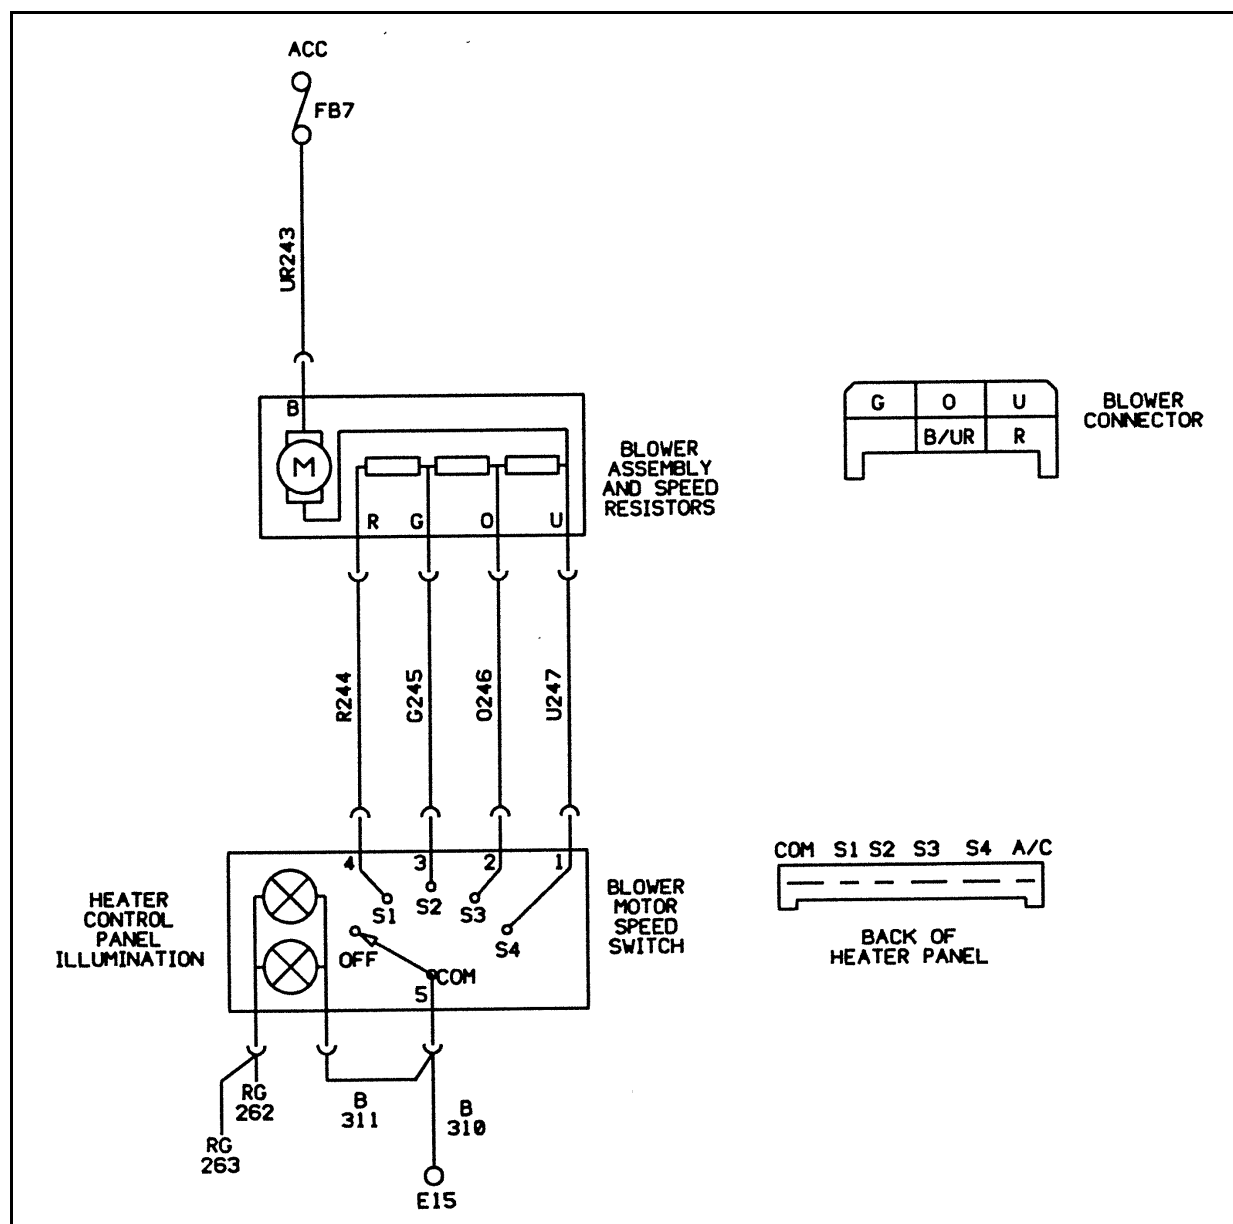HEATER, FRONT

RHD Diesel Serial Nos: 102767 onwards – Issue 1


E15 Earth point to right of front heater

HEATER, REAR

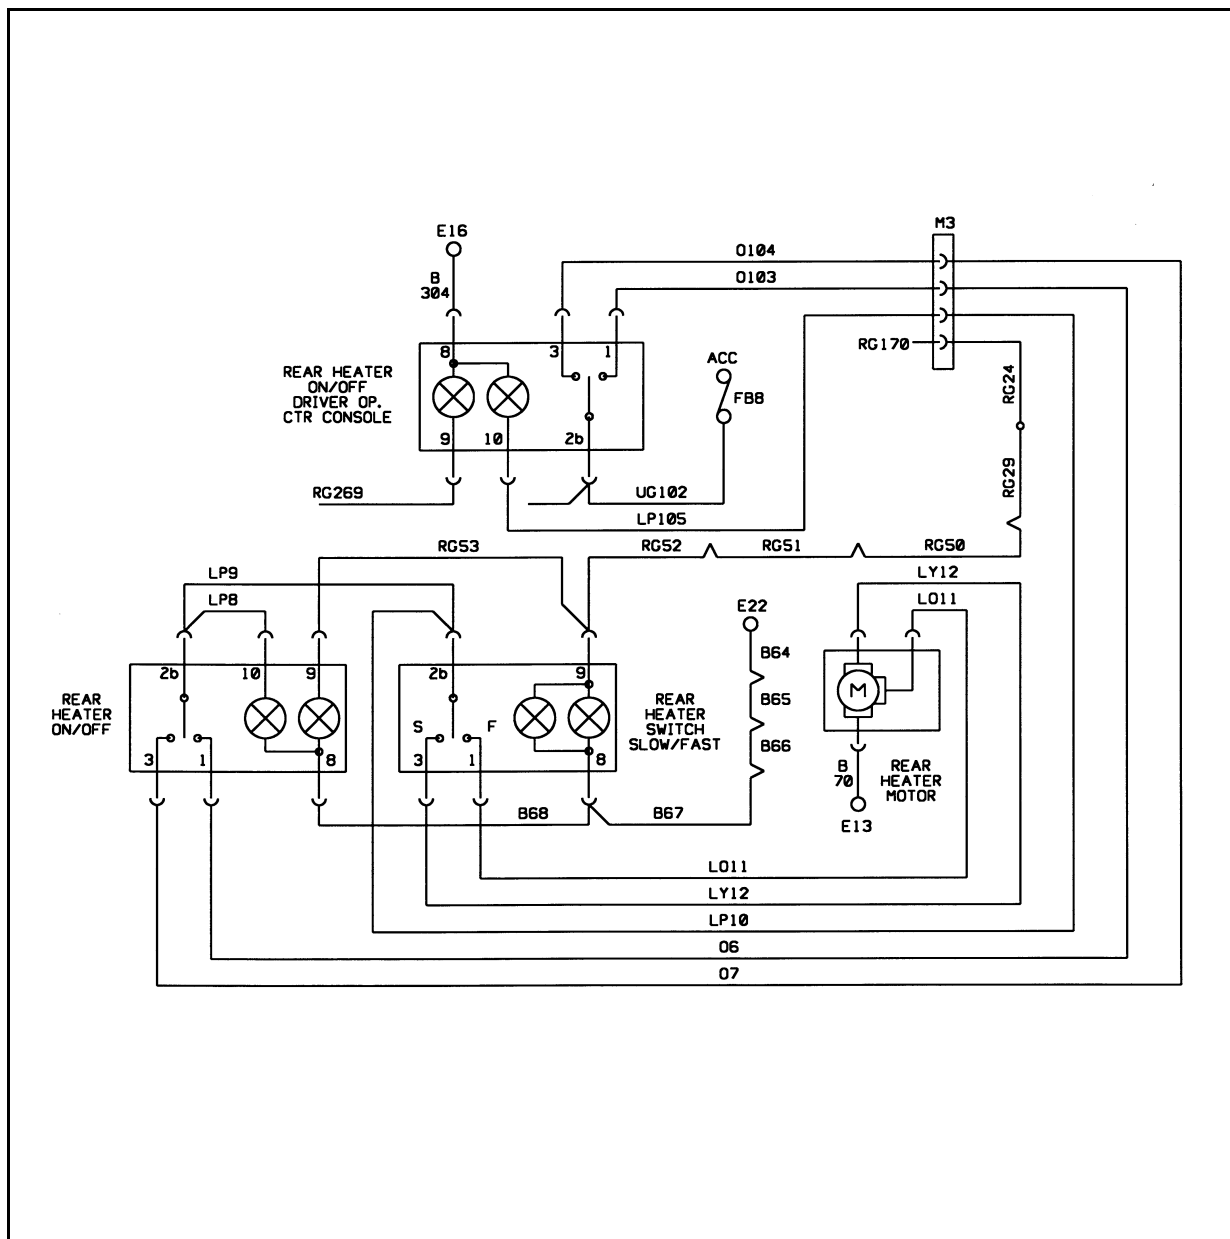


RHD Diesel - Issue 2

- M3 Rear harness to front harness
- E13 Earth point on rear of rear heater
- E16 Earth point on left of handbrake
- E22 Earth point rear left lamp cluster

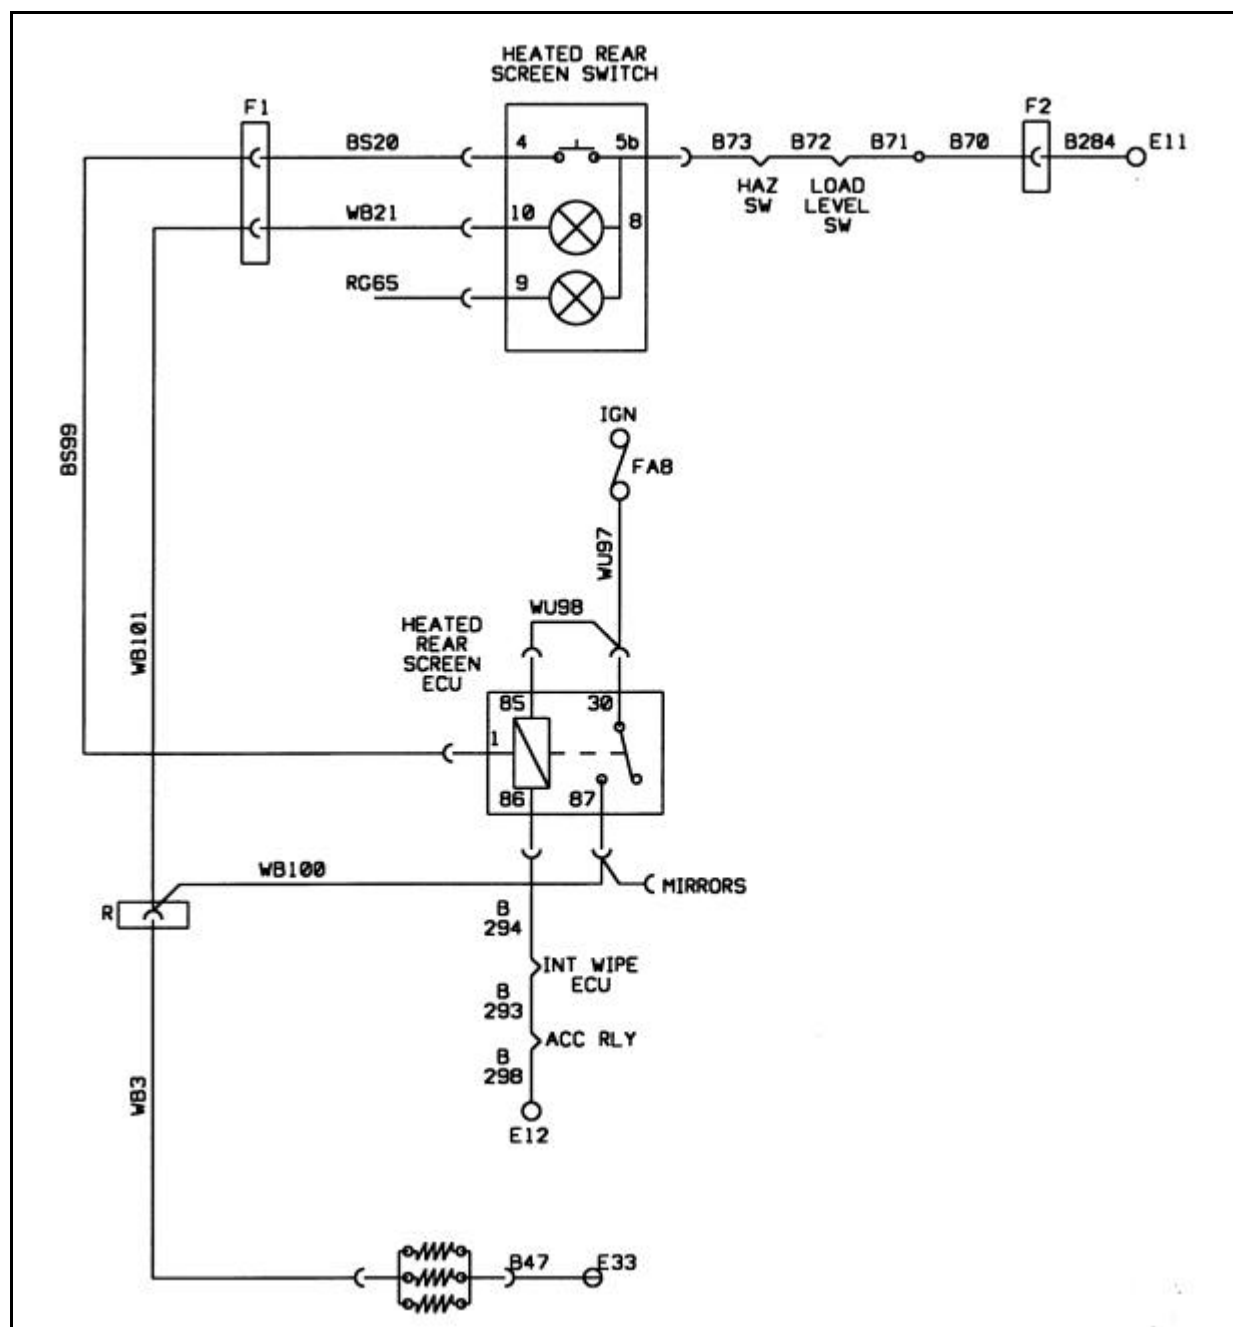HEATED REAR SCREEN

RHD Diesel Serial Nos: 100016-107214 - Issue 2


- F1 Facia left harness to front harness
- F2 Facia right harness to front harness
- R Roof harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post
- E33 Earth point rear right roof

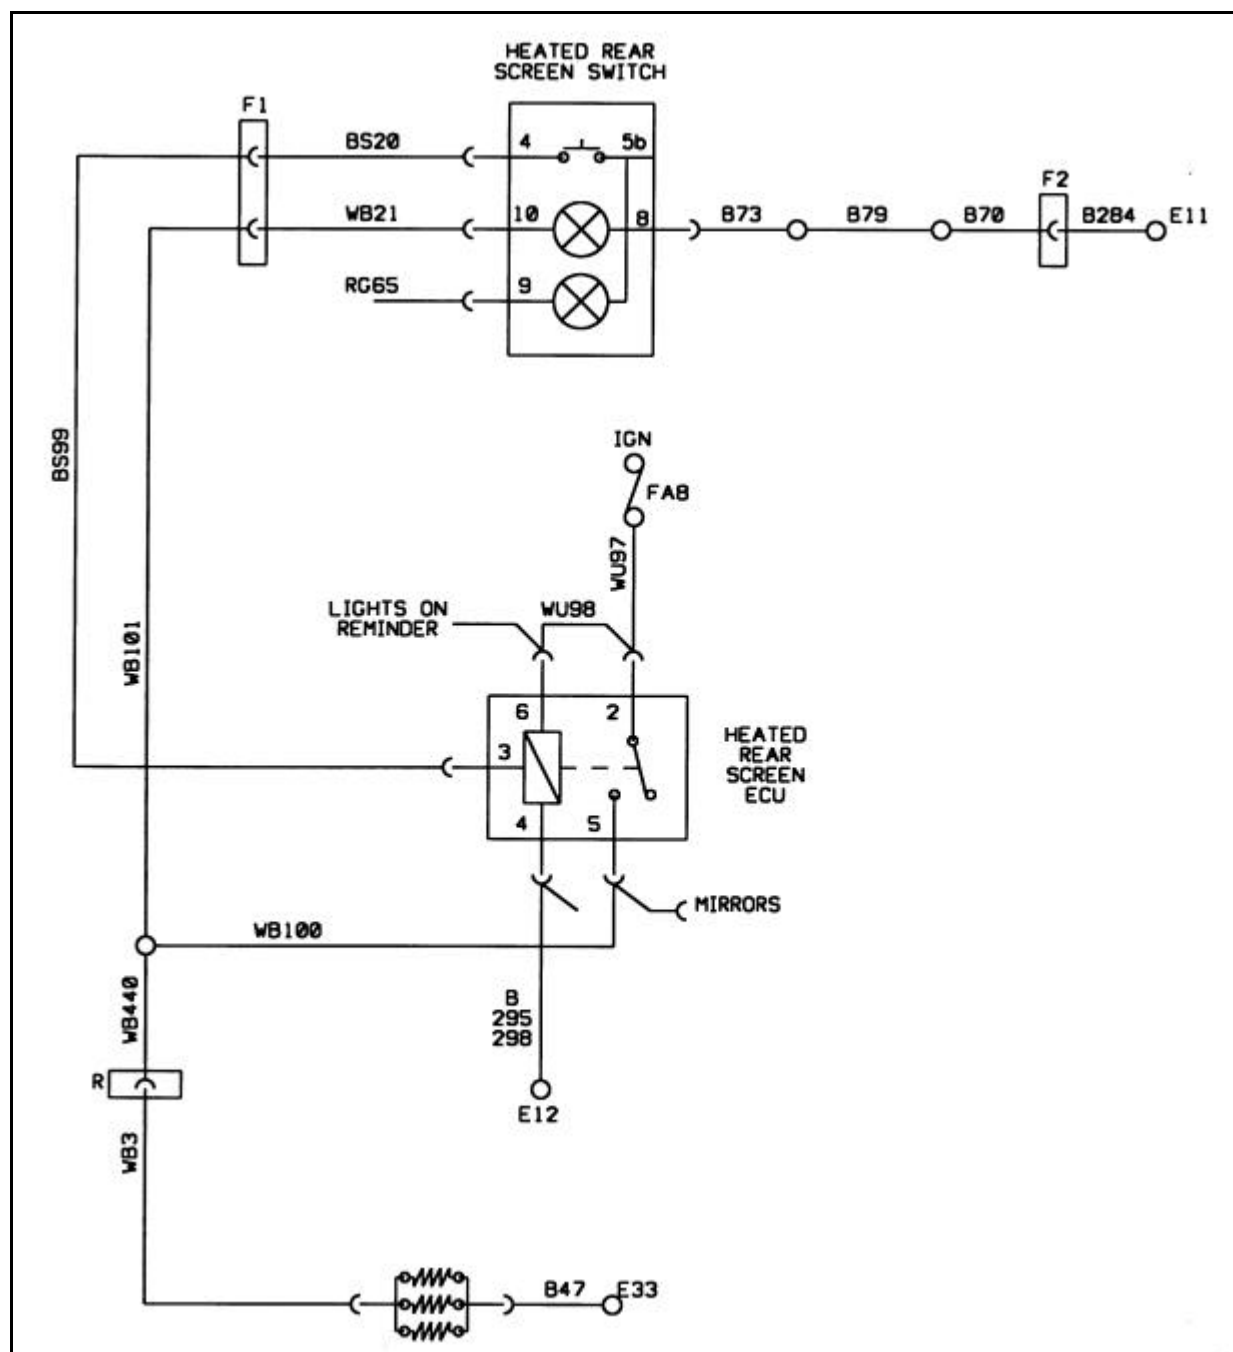HEATED REAR SCREEN

RHD Diesel Serial Nos: 107215 onwards - Issue 1


- F1 Facia left harness to front harness
- F2 Facia right harness to front harness
- R Roof harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post
- E33 Earth point rear right roof

HORN

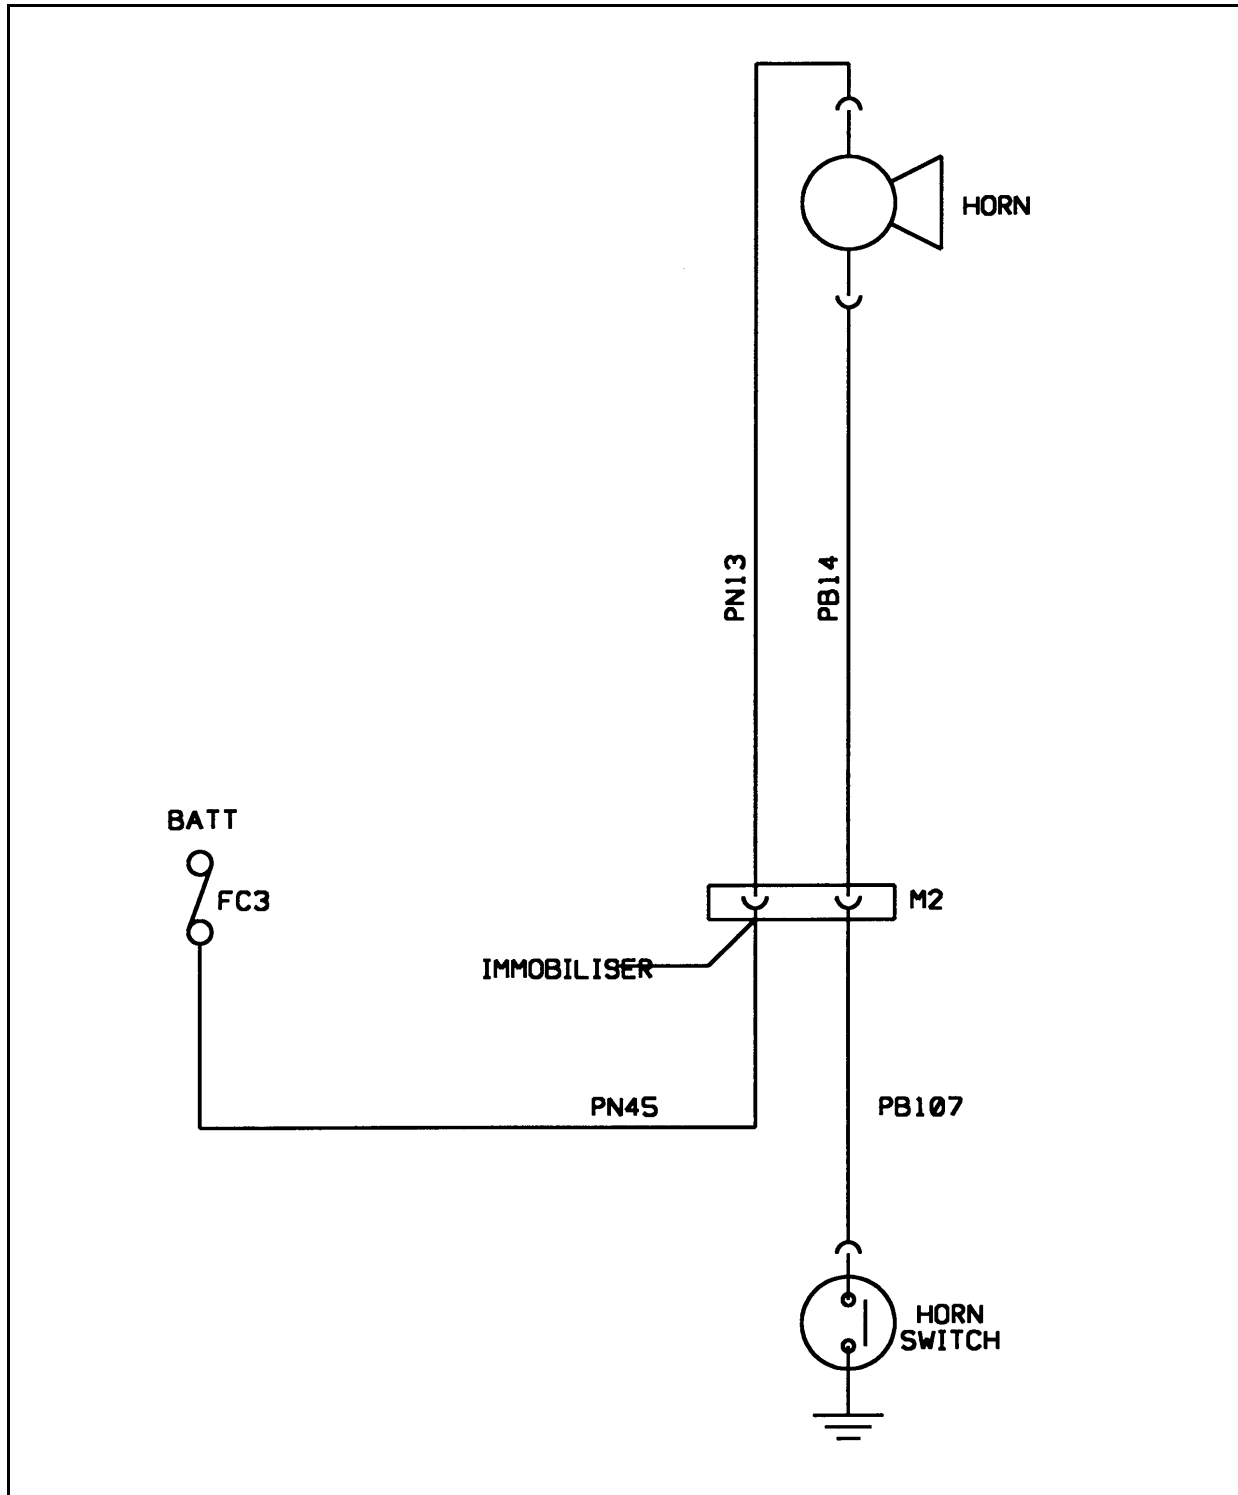

RHD Diesel - Issue 2


M2 Under bonnet offside harness to front harness

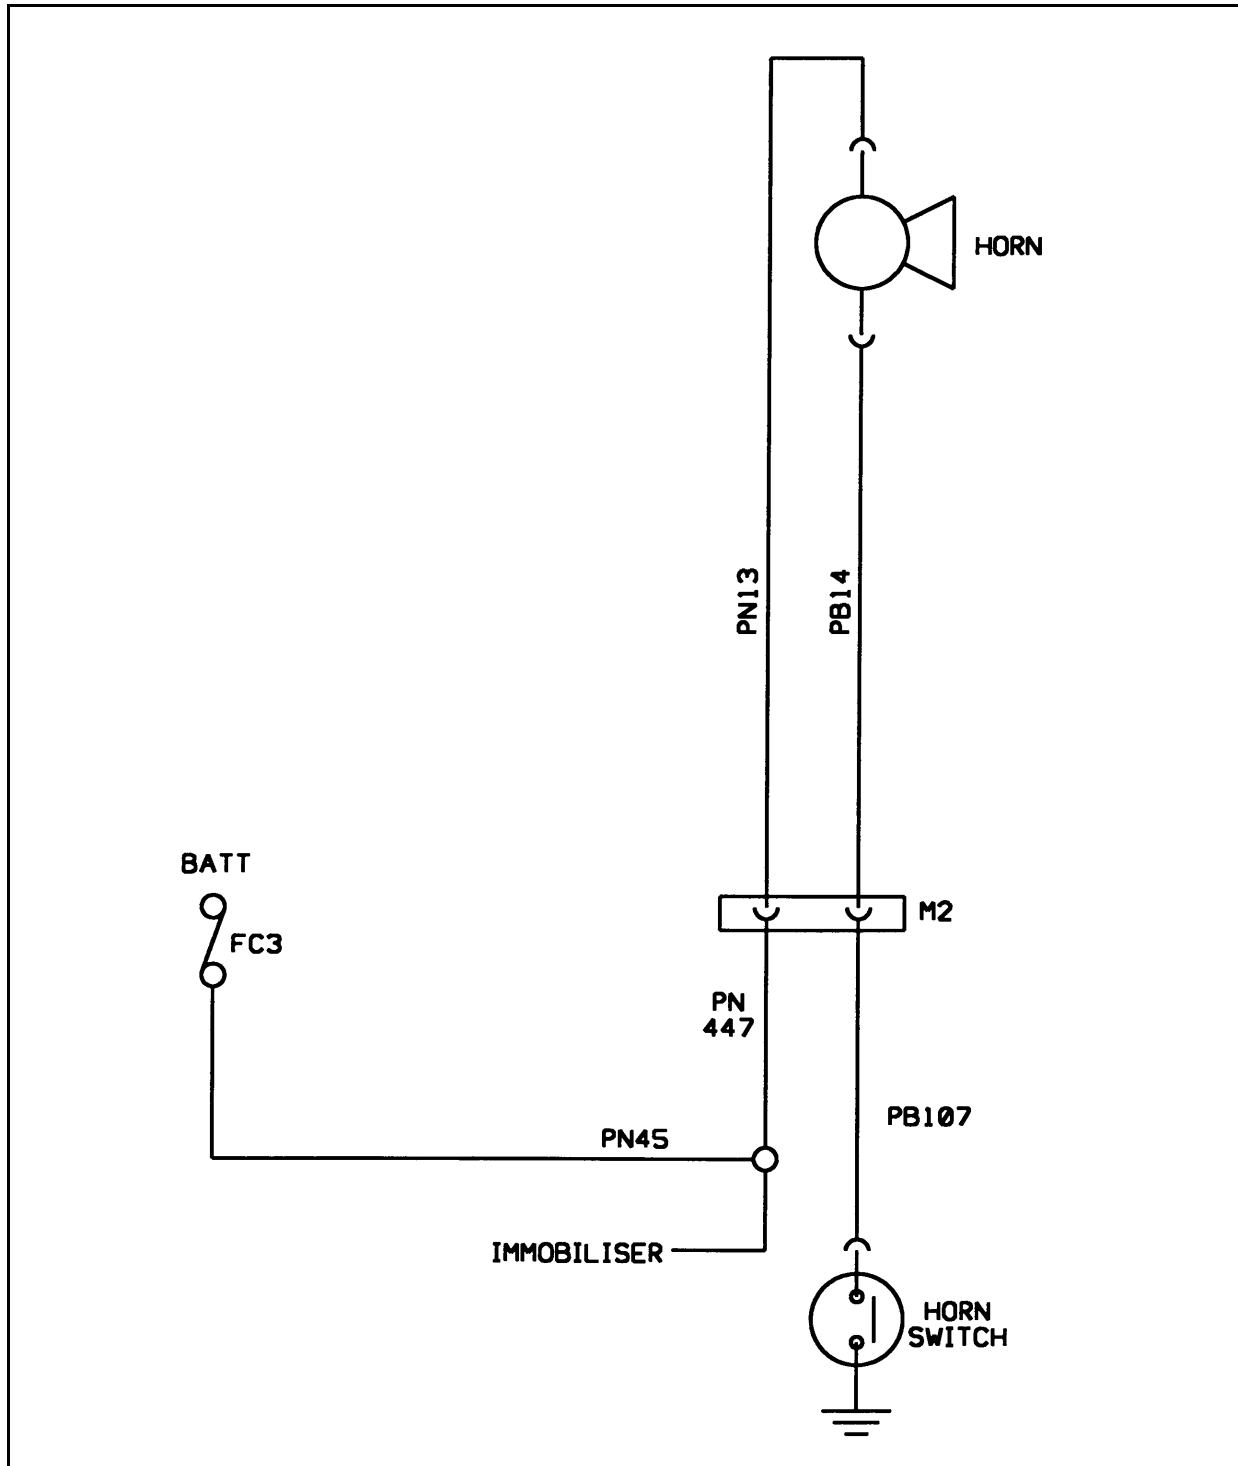HORN

RHD Diesel Serial Nos: 107215 onwards - Issue 1

M2 Under bonnet offside harness to front harness


ILLUMINATION

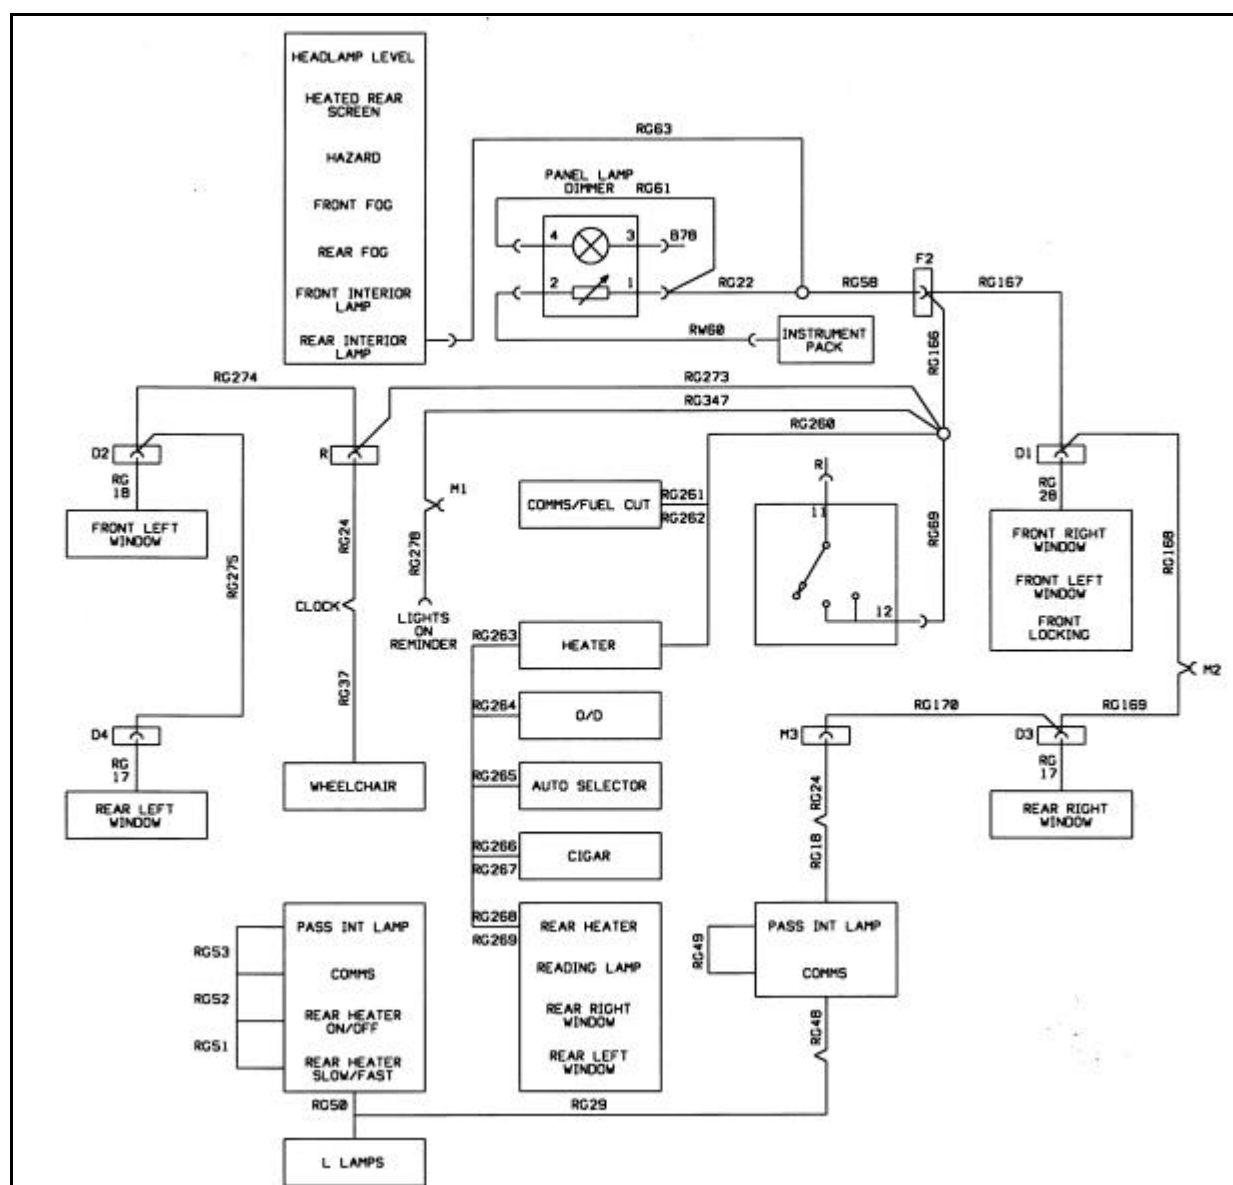

RHD Diesel Serial Nos: 100016-107214 - Issue 2

- F2 Facia right harness to front harness
- D1 Drivers door harness to front harness
- D2 Luggage door harness to front harness
- D3 Passenger door right harness to front harness
- D4 Passenger door left harness to front harness
- M1 Under bonnet nearside harness to front harness
- M2 Under bonnet offside harness to front harness
- M3 Rear harness to front harness
- R Roof harness to front harness

ILLUMINATION

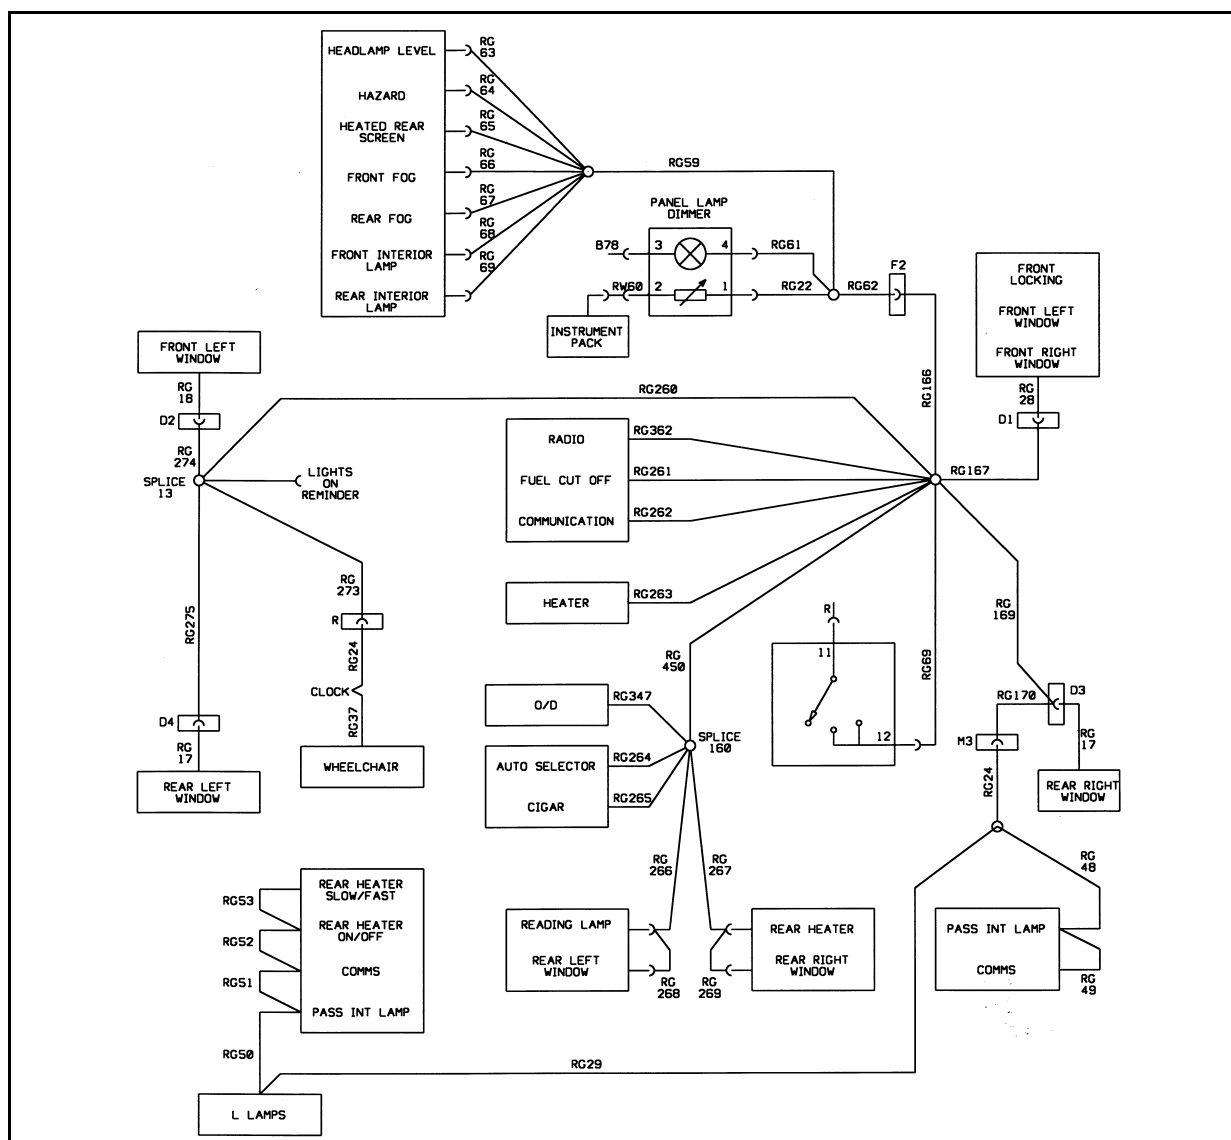

RHD Diesel Serial Nos: 107215 onwards - Issue 1

- F2 Facia right harness to front harness
- D1 Drivers door harness to front harness
- D2 Luggage door harness to front harness
- D3 Passenger door right harness to front harness
- D4 Passenger door left harness to front harness
- M1 Under bonnet nearside harness to front harness
- M2 Under bonnet offside harness to front harness
- M3 Rear harness to front harness
- R Roof harness to front harness


E	Engine harness to front harness
F1	Facia left harness to front harness
M1	Under bonnet nearside harness to front harness
M2	Under bonnet offside harness to front harness
M3	Rear harness to front harness
R	Roof harness to front harness
E12	Earth point lower left A post

- E15 Earth point to right of front heater
- E17 Earth point on rear of rear heater
- E21 Earth point on rear right lamp cluster
- E22 Earth point on rear left lamp cluster
- E41 Earth point near left headlamp
- E42 Earth point near right headlamp

A	Immobiliser to ultrasonic/led
K	Immobiliser to keypad/antenna
S	Immobiliser to siren
E	Engine harness to front harness
F1	Facia left harness to front harness
M1	Under bonnet nearside harness to front harness
M2	Under bonnet offside harness to front harness
M3	Rear harness to front harness
R	Roof harness to front harness
E11	Earth point lower right A post

- E12 Earth point lower left A post
- E13 Earth point on rear of rear heater
- E15 Earth point to right of front heater
- E21 Earth point on rear right lamp cluster
- E22 Earth point on rear left lamp cluster
- E41 Earth point near left headlamp
- E42 Earth point near right headlamp
- AL Siren to front harness (N/S under bonnet)
- CV Coded valve to front harness
- KE Keypad to front harness (upper O/S A post)


IMMOBILISER/ALARM

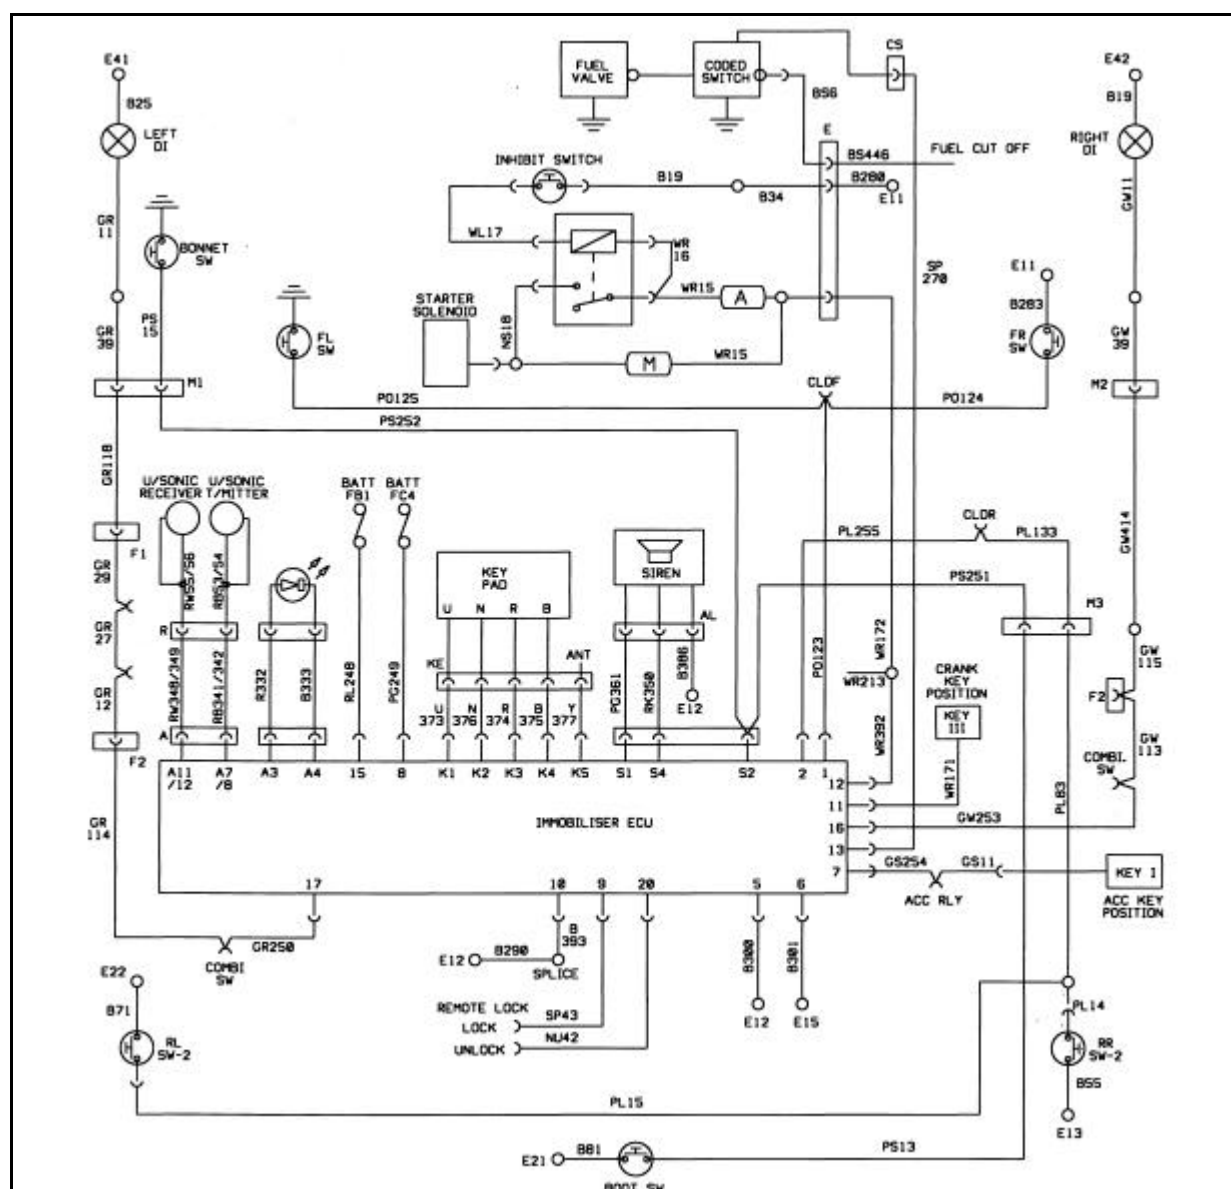

RHD Diesel Serial Nos: 107215 onwards - Issue 1

- | | | | |
|-----|--|-----|--|
| A | Immobiliser to ultrasonic/led | E12 | Earth point lower left A post |
| K | Immobiliser to keypad/antenna | E13 | Earth point on rear of rear heater |
| S | Immobiliser to siren | E15 | Earth point to right of front heater |
| E | Engine harness to front harness | E21 | Earth point on rear right lamp cluster |
| F1 | Facia left harness to front harness | E22 | Earth point on rear left lamp cluster |
| M1 | Under bonnet nearside harness to front harness | E41 | Earth point near left headlamp |
| M2 | Under bonnet offside harness to front harness | E42 | Earth point near right headlamp |
| M3 | Rear harness to front harness | AL | Siren to front harness (N/S under bonnet) |
| R | Roof harness to front harness | CV | Coded valve to front harness |
| E11 | Earth point lower right A post | KE | Keypad to front harness (upper O/S A post) |


INDICATOR/HAZARD

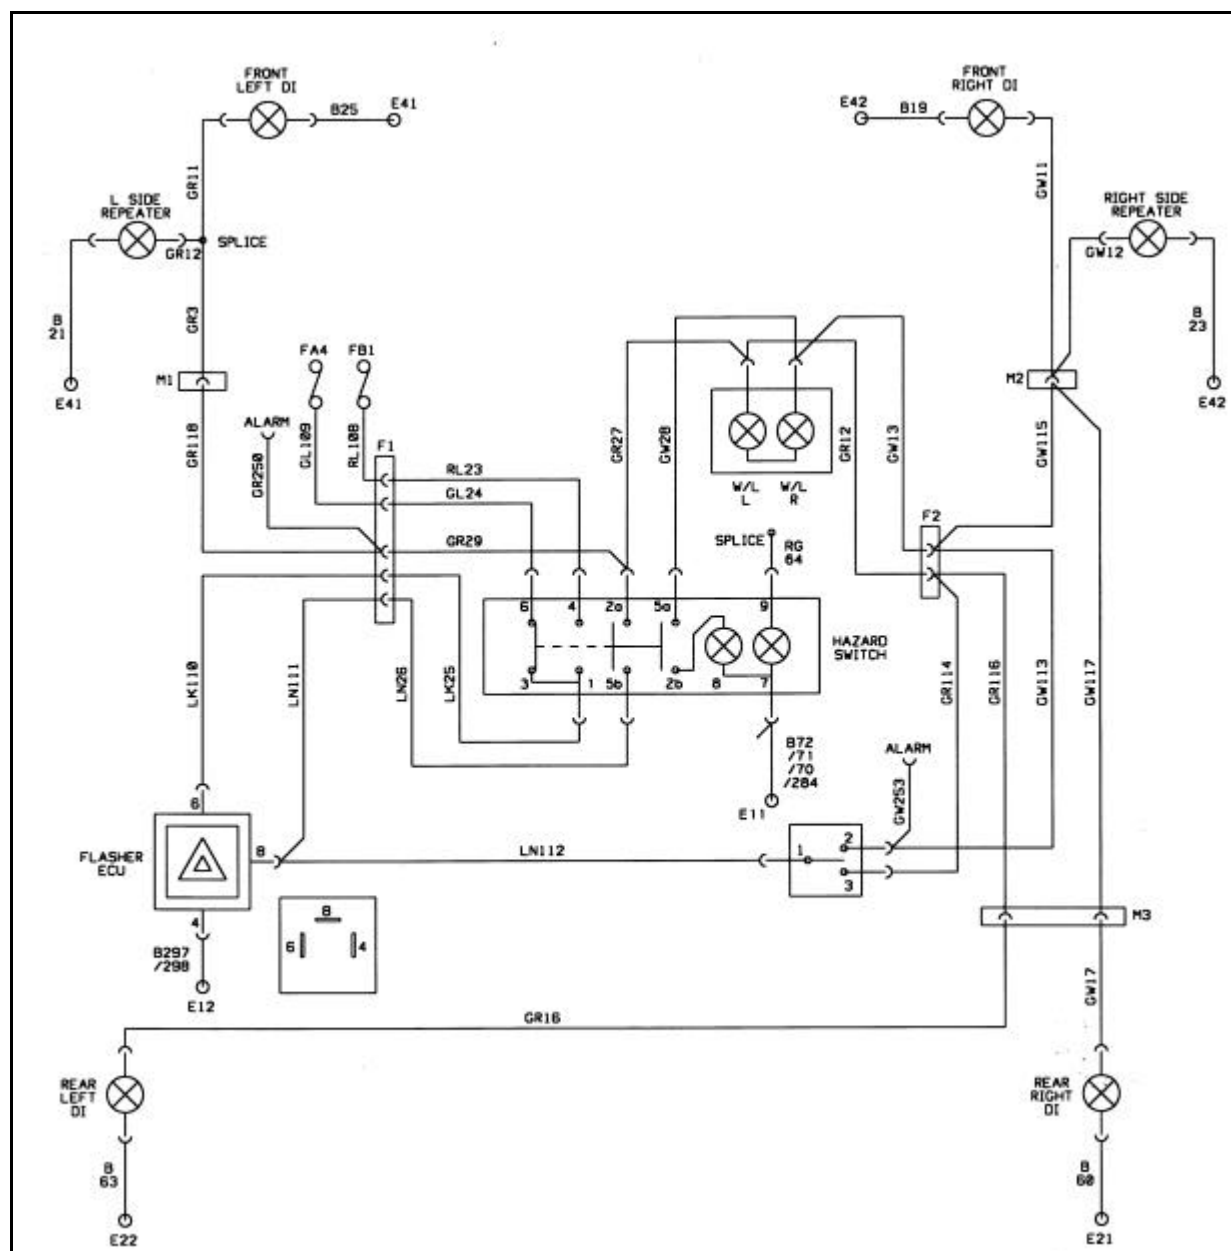

RHD Diesel Serial Nos: 100016-102766 - Issue 2


- F1 Facia left harness to front harness
- F2 Facia right harness to front harness
- M1 Under bonnet nearside harness to front harness
- M2 Under bonnet offside harness to front harness
- M3 Rear harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post
- E21 Earth point rear right lamp cluster
- E22 Earth point rear left lamp cluster
- E41 Earth point near left headlamp
- E42 Earth point near right headlamp

INDICATOR/HAZARD

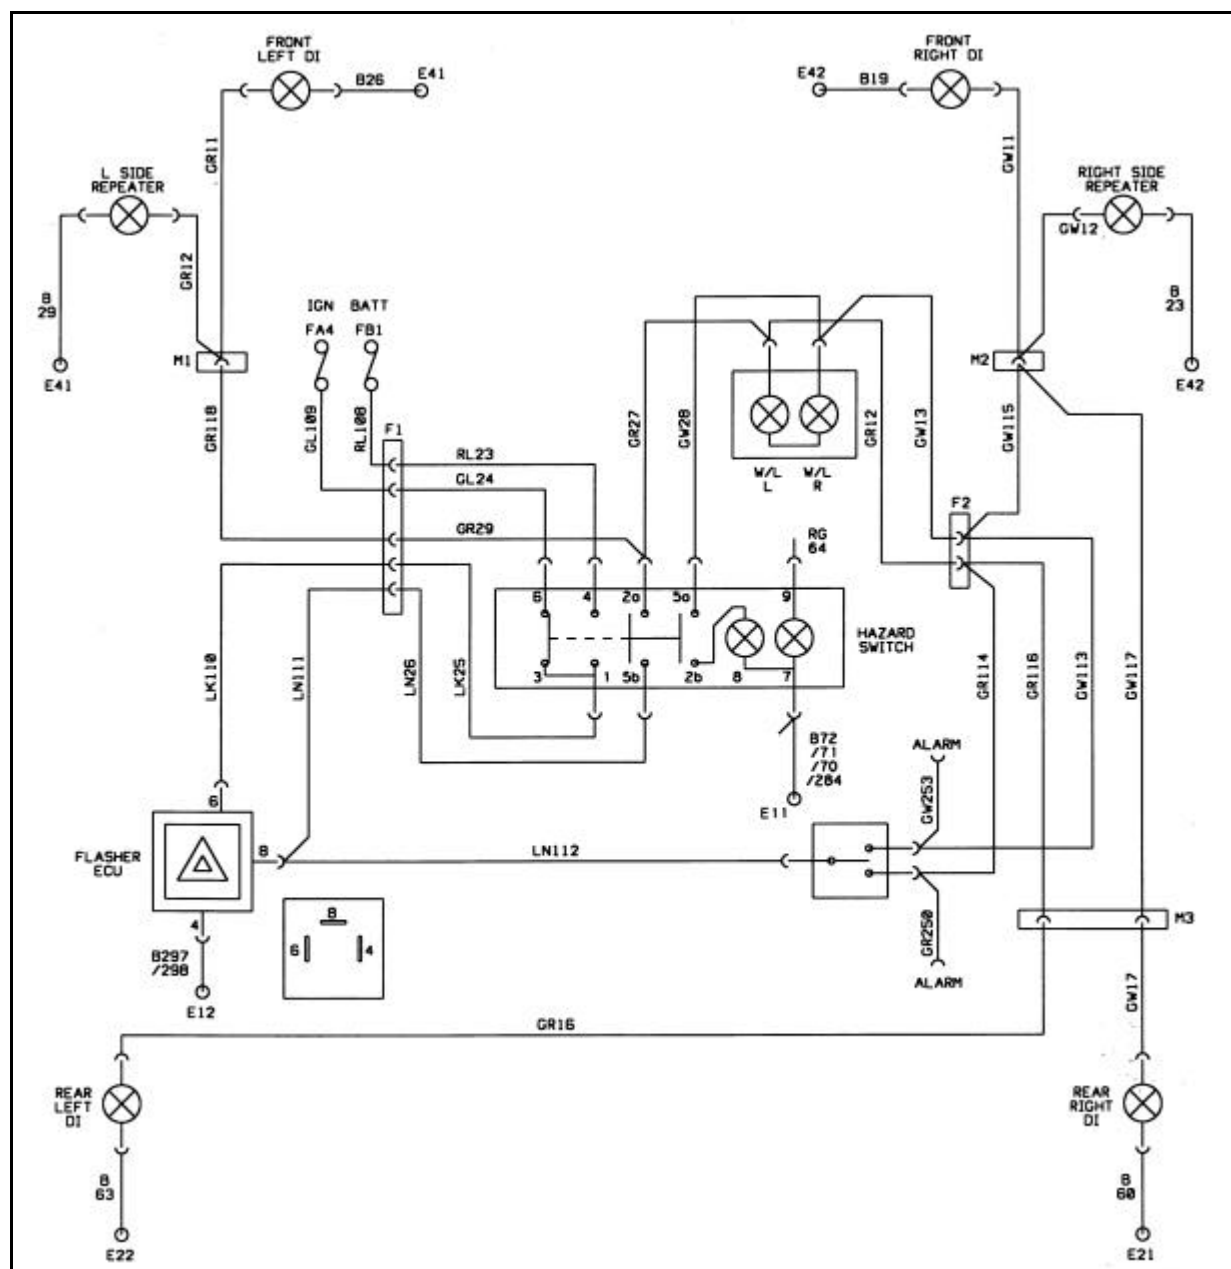

RHD Diesel Serial Nos: 102767-107214 - Issue 1


- F1 Facia left harness to front harness
- F2 Facia right harness to front harness
- M1 Under bonnet nearside harness to front harness
- M2 Under bonnet offside harness to front harness
- M3 Rear harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post
- E21 Earth point rear right lamp cluster
- E22 Earth point rear left lamp cluster
- E41 Earth point near left headlamp
- E42 Earth point near right headlamp

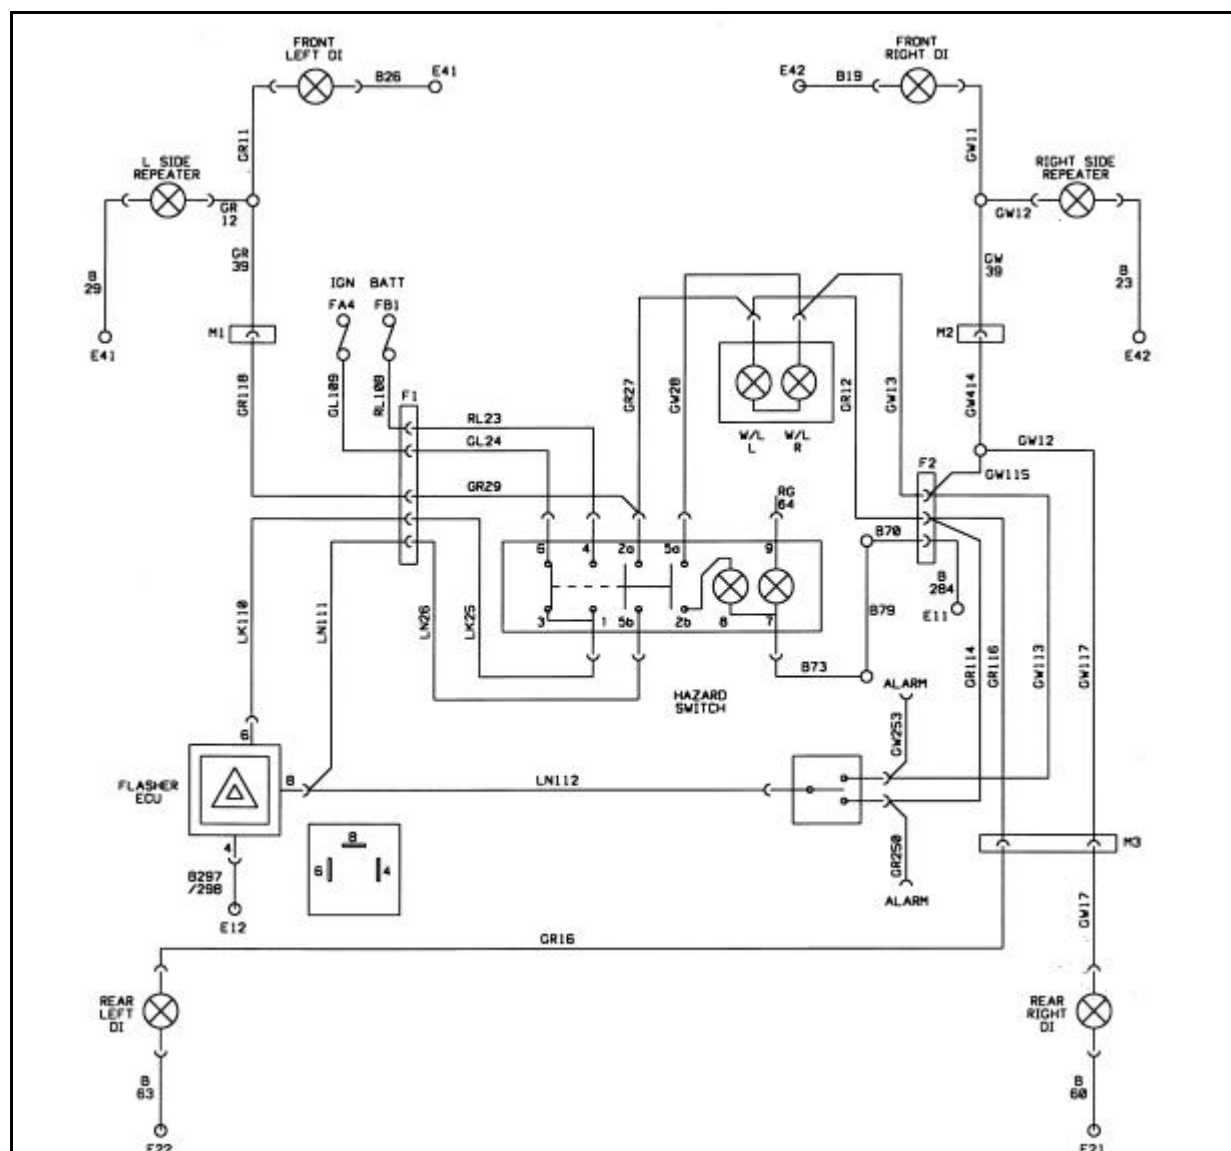INDICATOR/HAZARD

RHD Diesel Serial Nos: 107215 onwards - Issue 1

- F1 Facia left harness to front harness
- F2 Facia right harness to front harness
- M1 Under bonnet nearside harness to front harness
- M2 Under bonnet offside harness to front harness
- M3 Rear harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post
- E21 Earth point rear right lamp cluster
- E22 Earth point rear left lamp cluster
- E41 Earth point near left headlamp
- E42 Earth point near right headlamp


INTERIOR LIGHTING FRONT

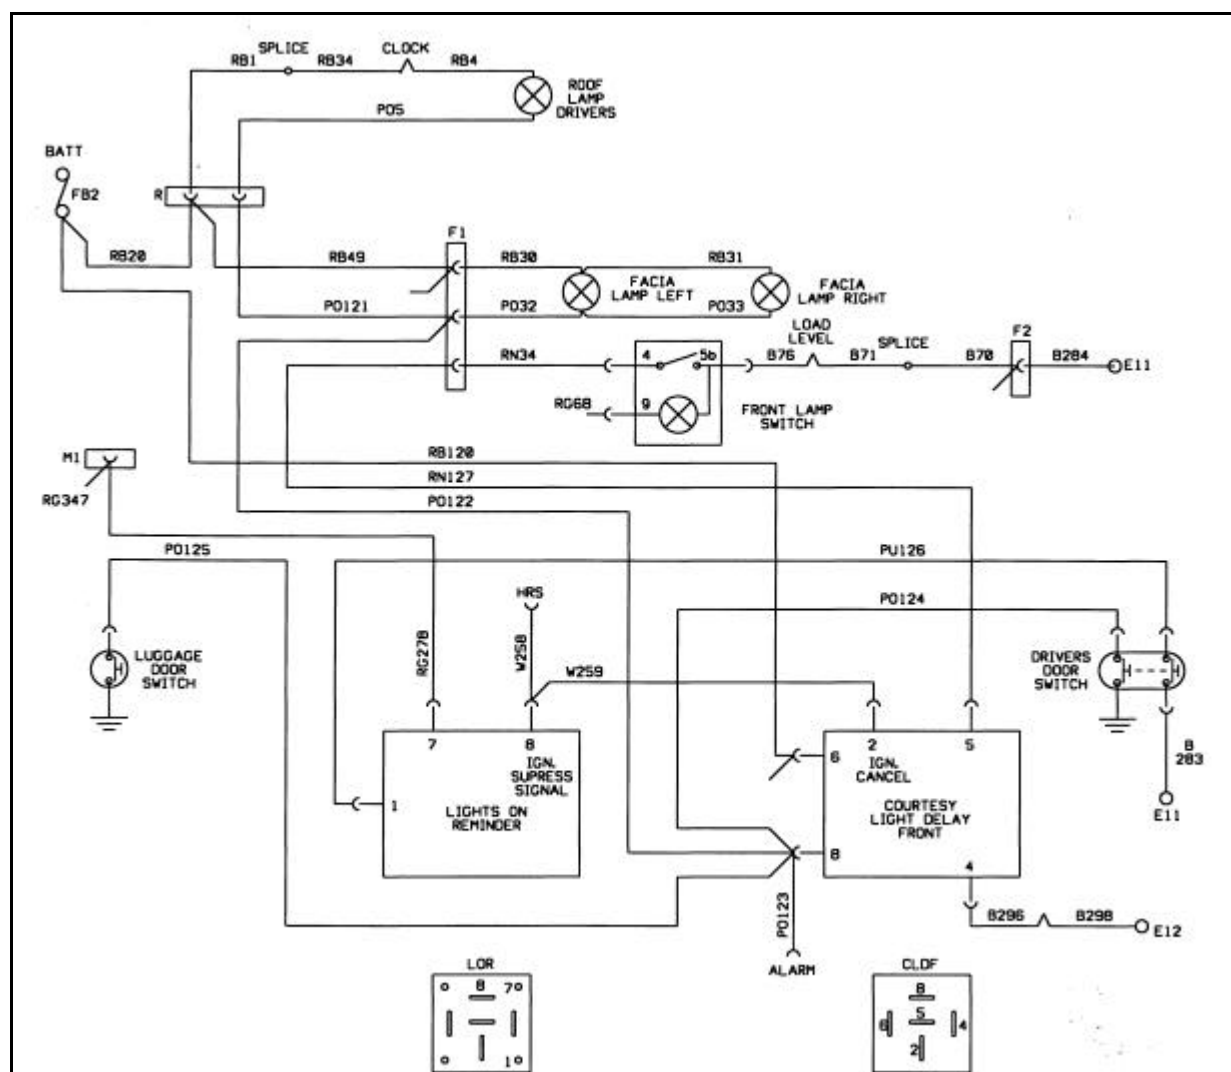

RHD Diesel Serial Nos: 100016-107214 - Issue 2

- F1 Facia left harness to front harness
- M1 Under bonnet nearside harness to front harness
- R Roof harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post


INTERIOR LIGHTING FRONT

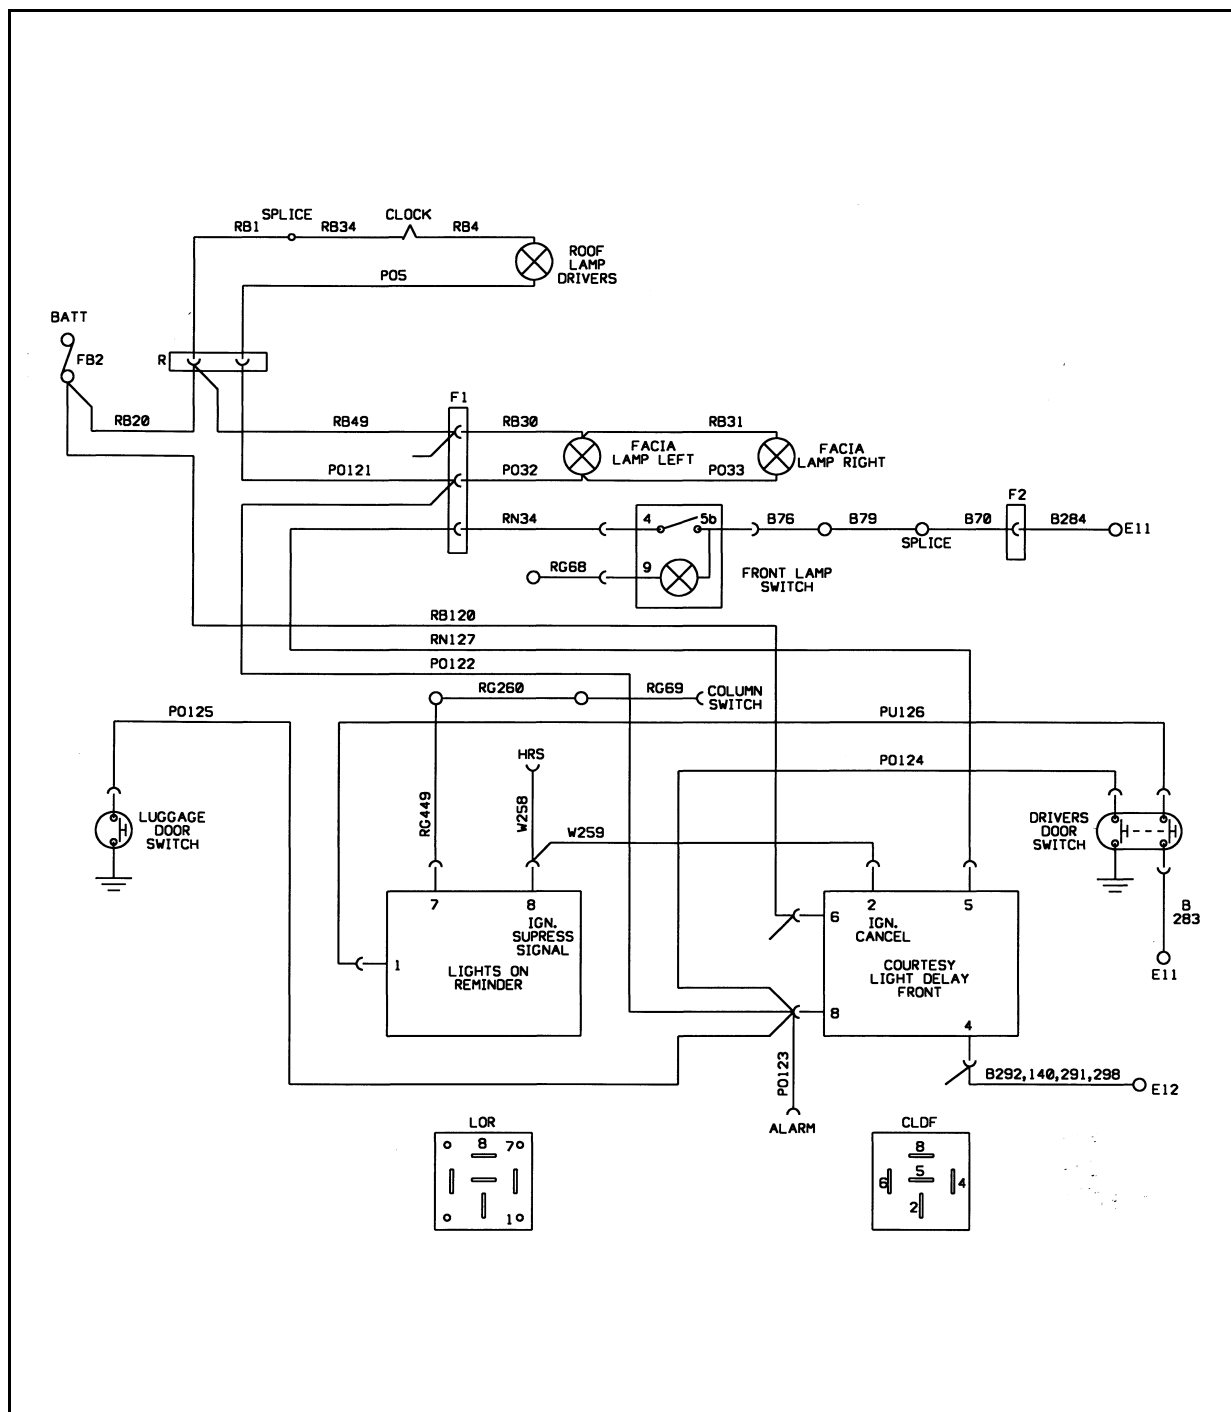

RHD Diesel Serial Nos: 107215 onwards - Issue 1

- F1 Facia left harness to front harness
- M1 Under bonnet nearside harness to front harness
- R Roof harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post


INTERIOR LIGHT REAR

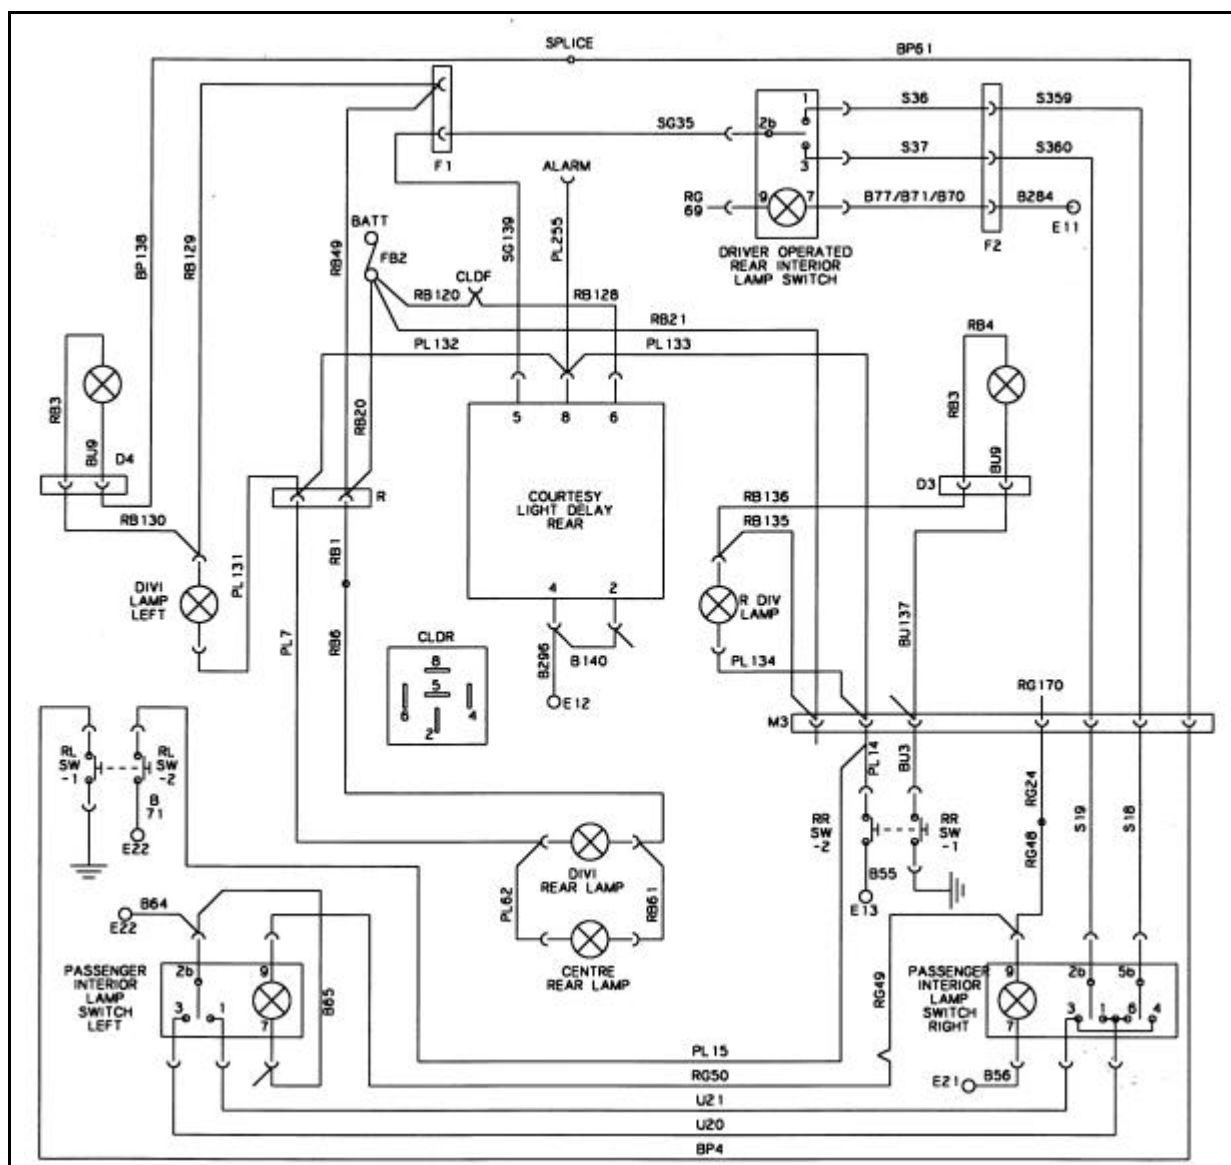

RHD Diesel Serial Nos: 100016-107214 - Issue 2


- D3 Passenger door harness to front harness
- D4 Passenger door harness to front harness
- F1 Facia left harness to front harness
- F2 Facia right harness to front harness
- M3 Rear harness to front harness
- R Roof harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post
- E13 Earth point on rear of rear heater
- E21 Earth point rear right lamp cluster
- E22 Earth point rear left lamp cluster

INTERIOR LIGHT REAR

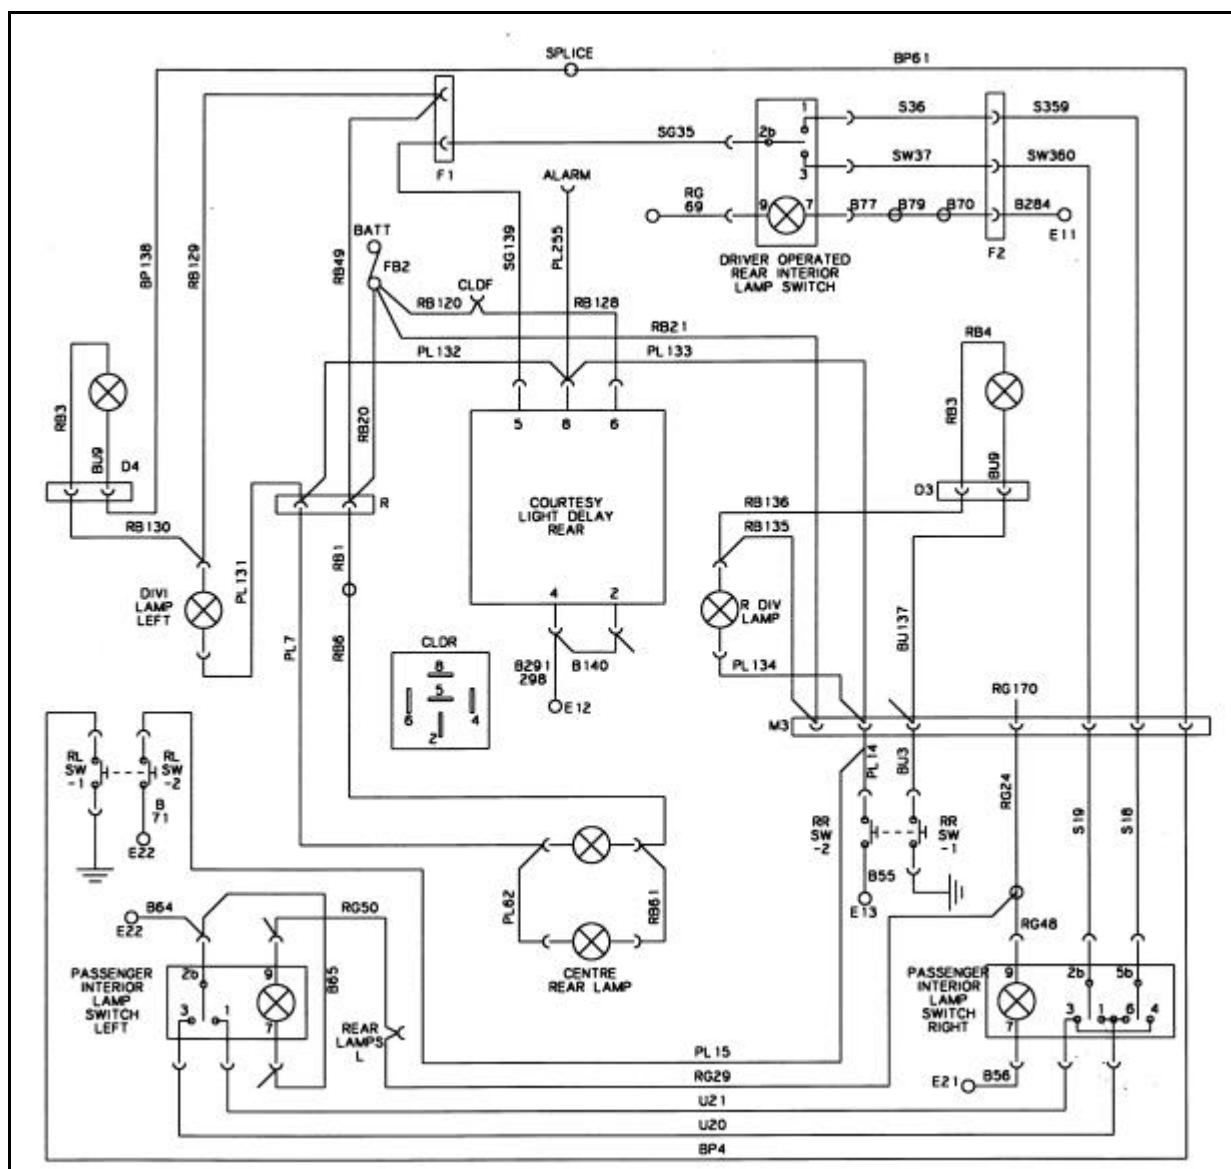

RHD Diesel Serial Nos: 107215 onwards - Issue 1


- D3 Passenger door harness to front harness
- D4 Passenger door harness to front harness
- F1 Facia left harness to front harness
- F2 Facia right harness to front harness
- M3 Rear harness to front harness
- R Roof harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post
- E13 Earth point on rear of rear heater
- E21 Earth point rear right lamp cluster
- E22 Earth point rear left lamp cluster

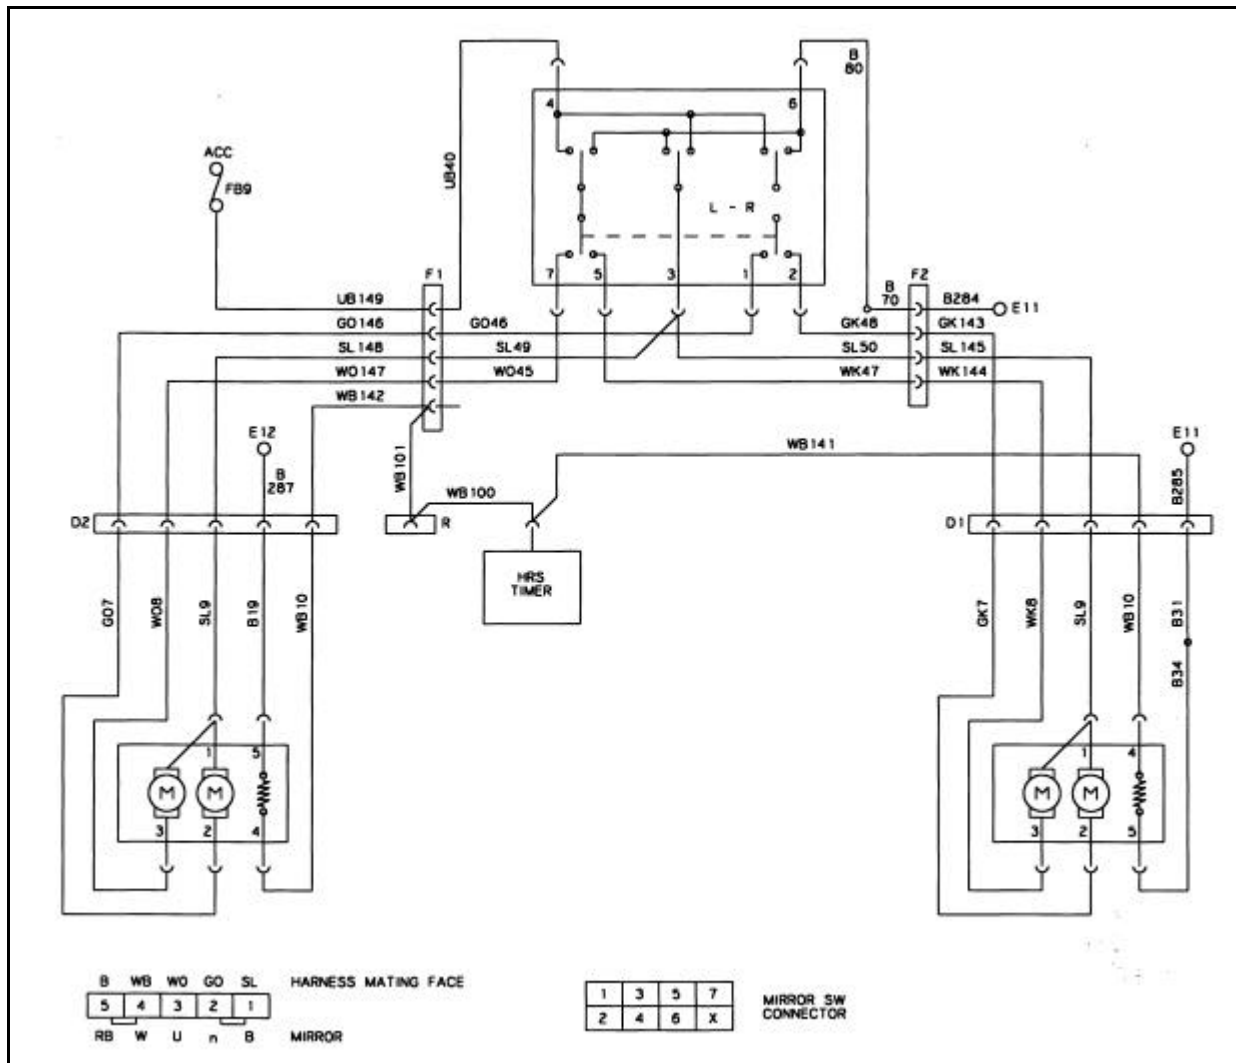MIRROR

RHD Diesel Serial Nos: 100016-105629 - Issue 2


- D1 Drivers door harness to front harness
- D2 Luggage door harness to front harness
- F1 Facia left harness to front harness
- F2 Facia right harness to front harness
- R Roof harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post

MIRROR

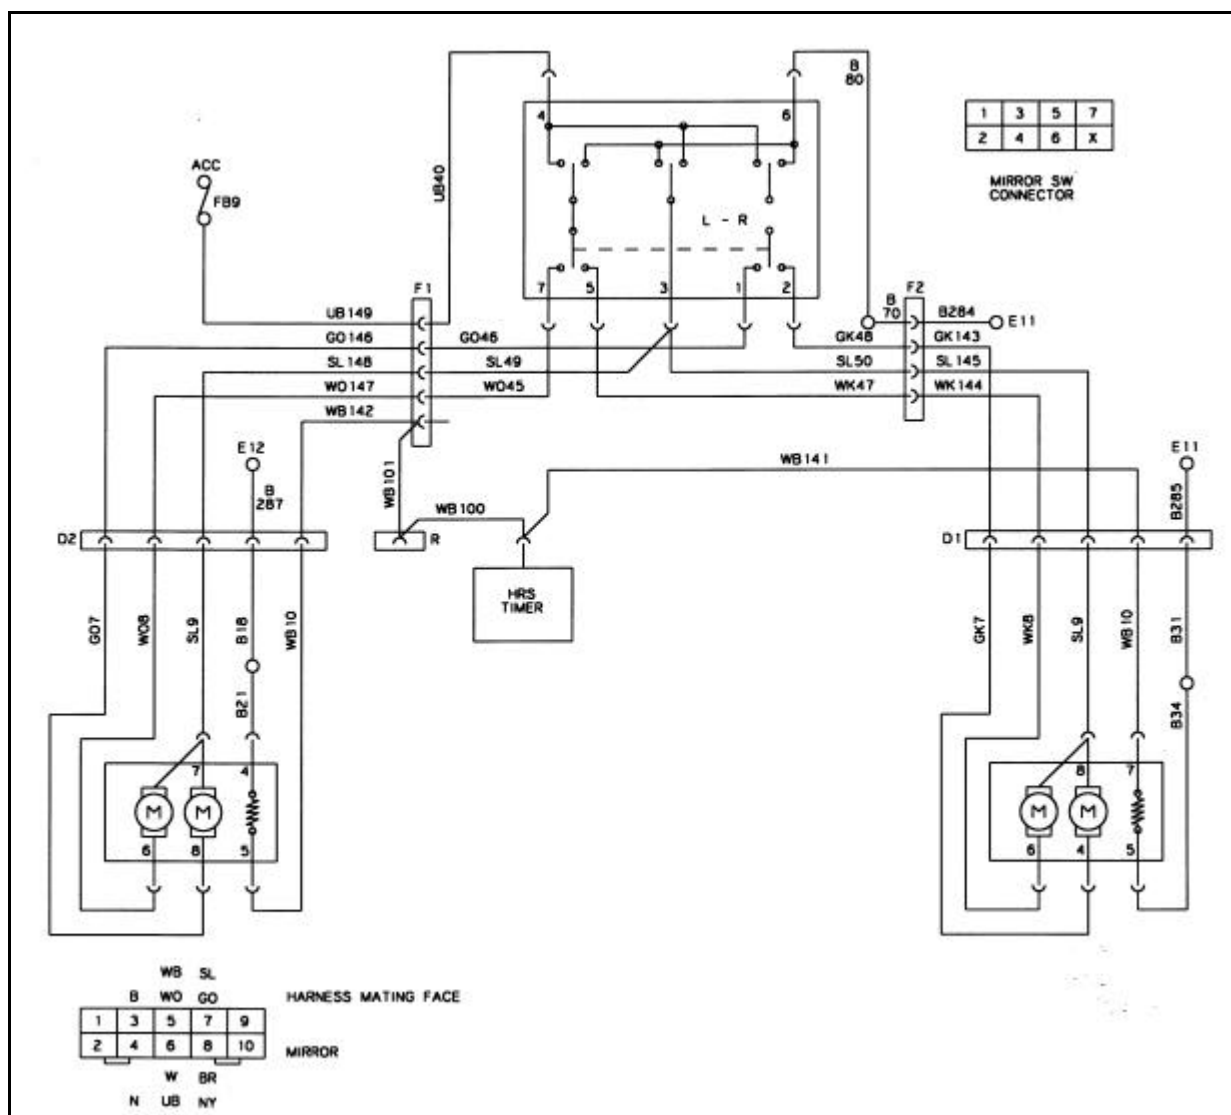

RHD Diesel Serial Nos: 105630 onwards - Issue 1


- D1 Drivers door harness to front harness
- D2 Luggage door harness to front harness
- F1 Facia left harness to front harness
- F2 Facia right harness to front harness
- R Roof harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post

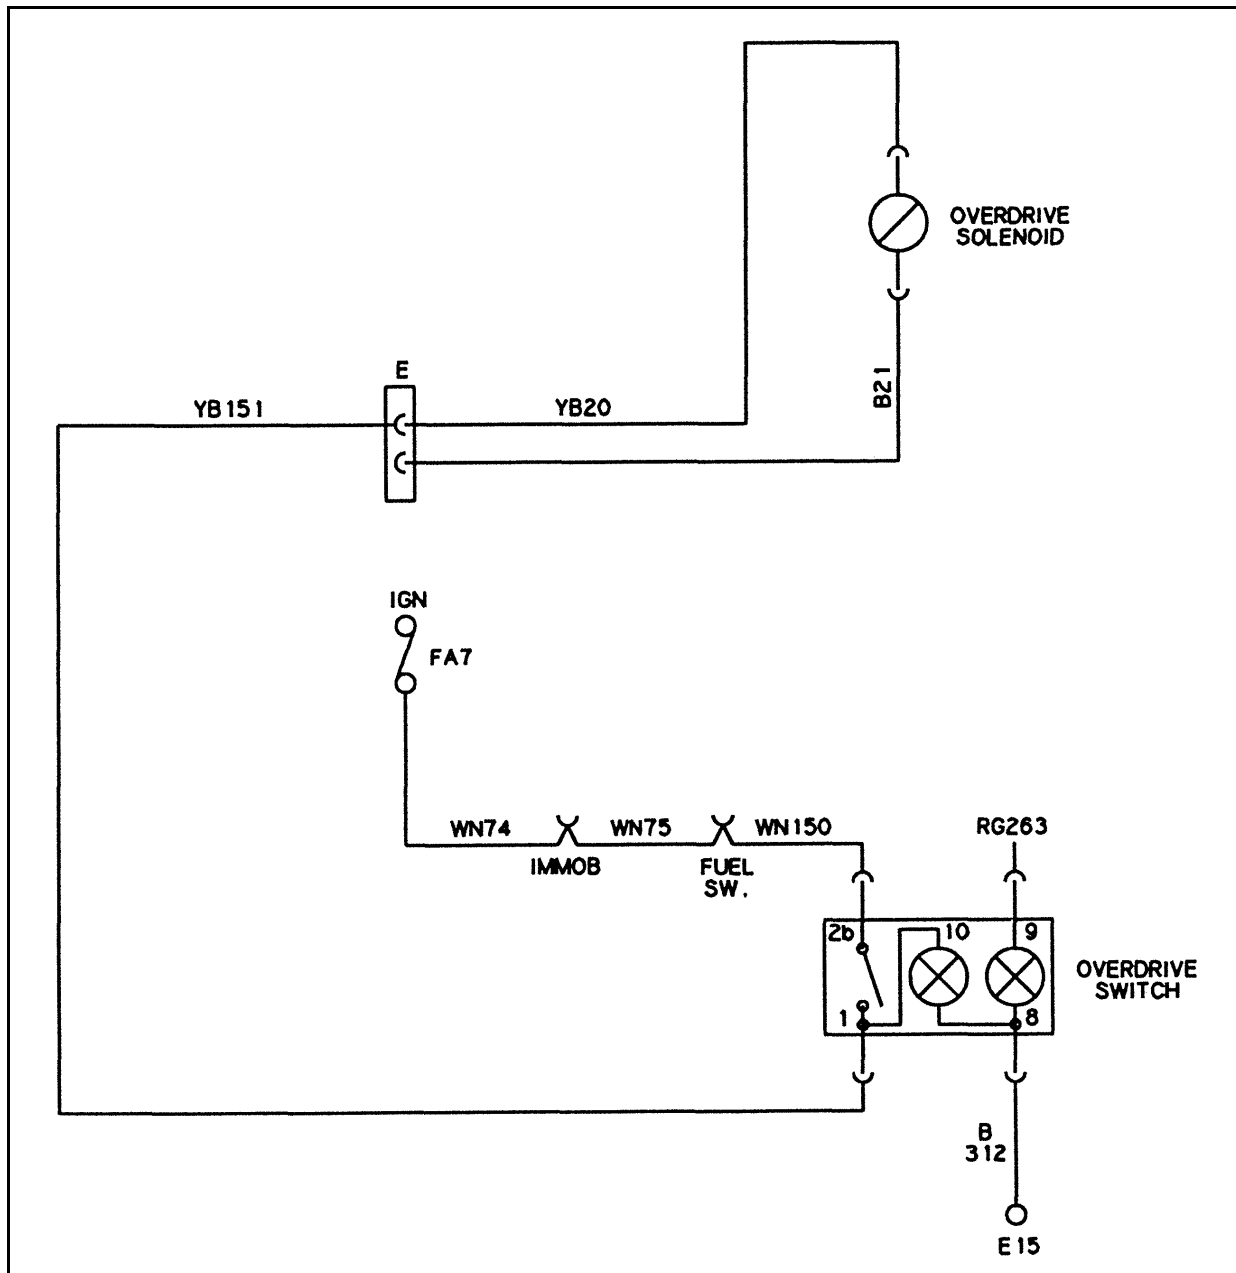OVERDRIVE

RHD Diesel Serial Nos: 100016-102766 - Issue 1


E Engine harness to front harness
 E15 Earth point to right of front heater

OVERDRIVE

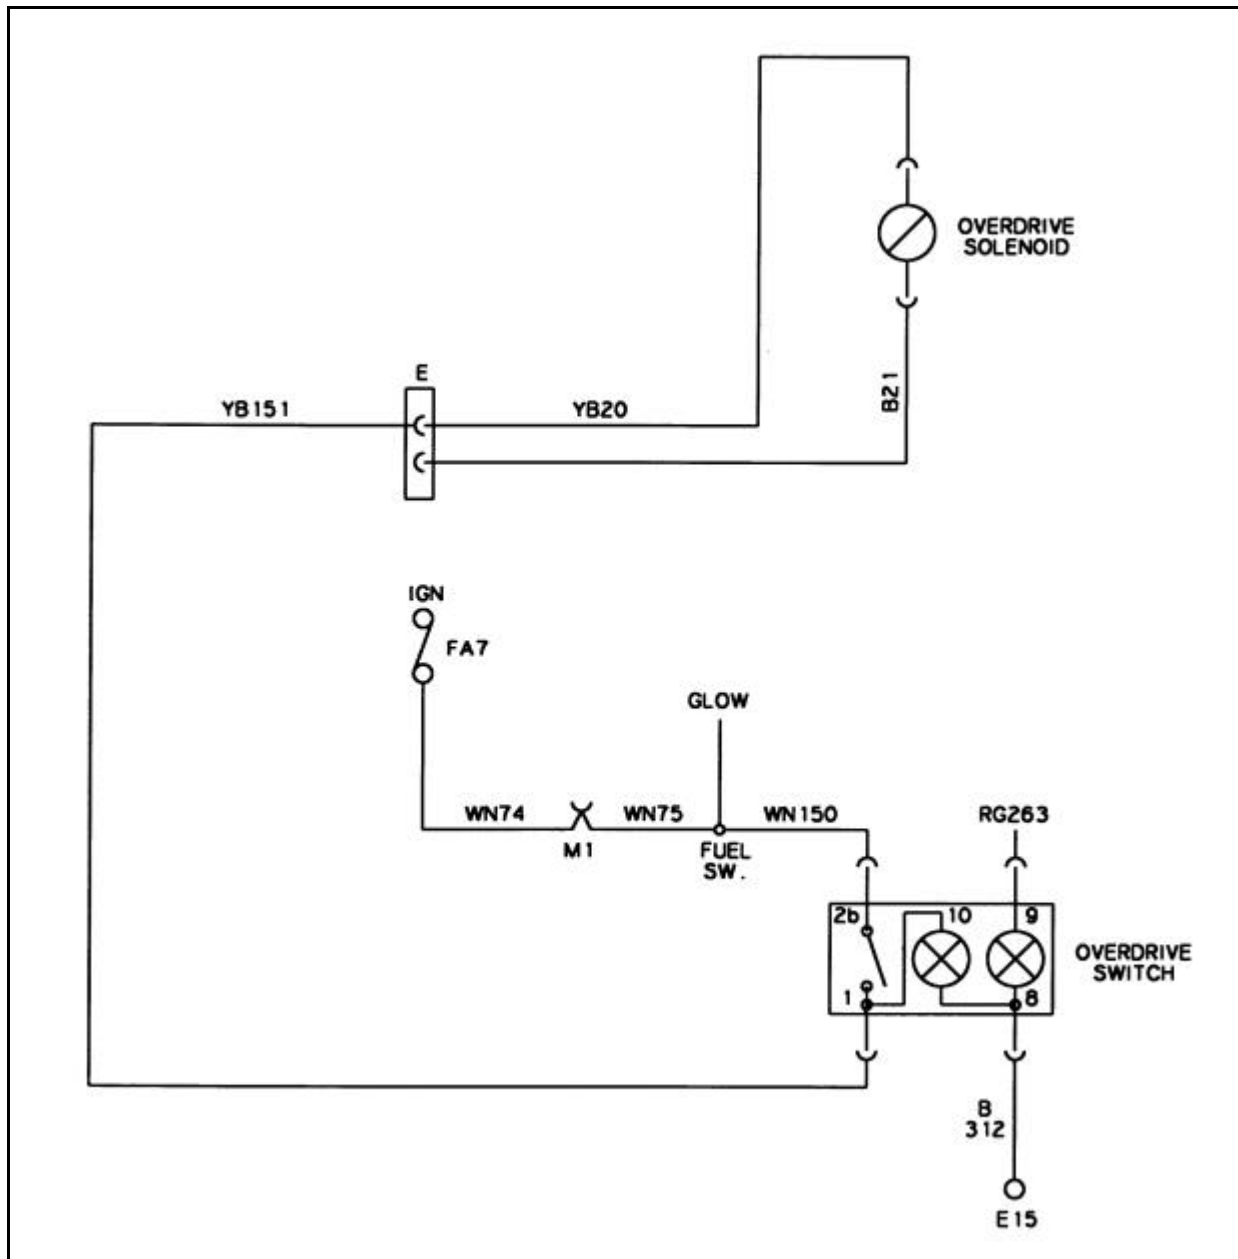


RHD Diesel Serial Nos: 102767-107214 - Issue 1

E Engine harness to front harness
E15 Earth point to right of front heater

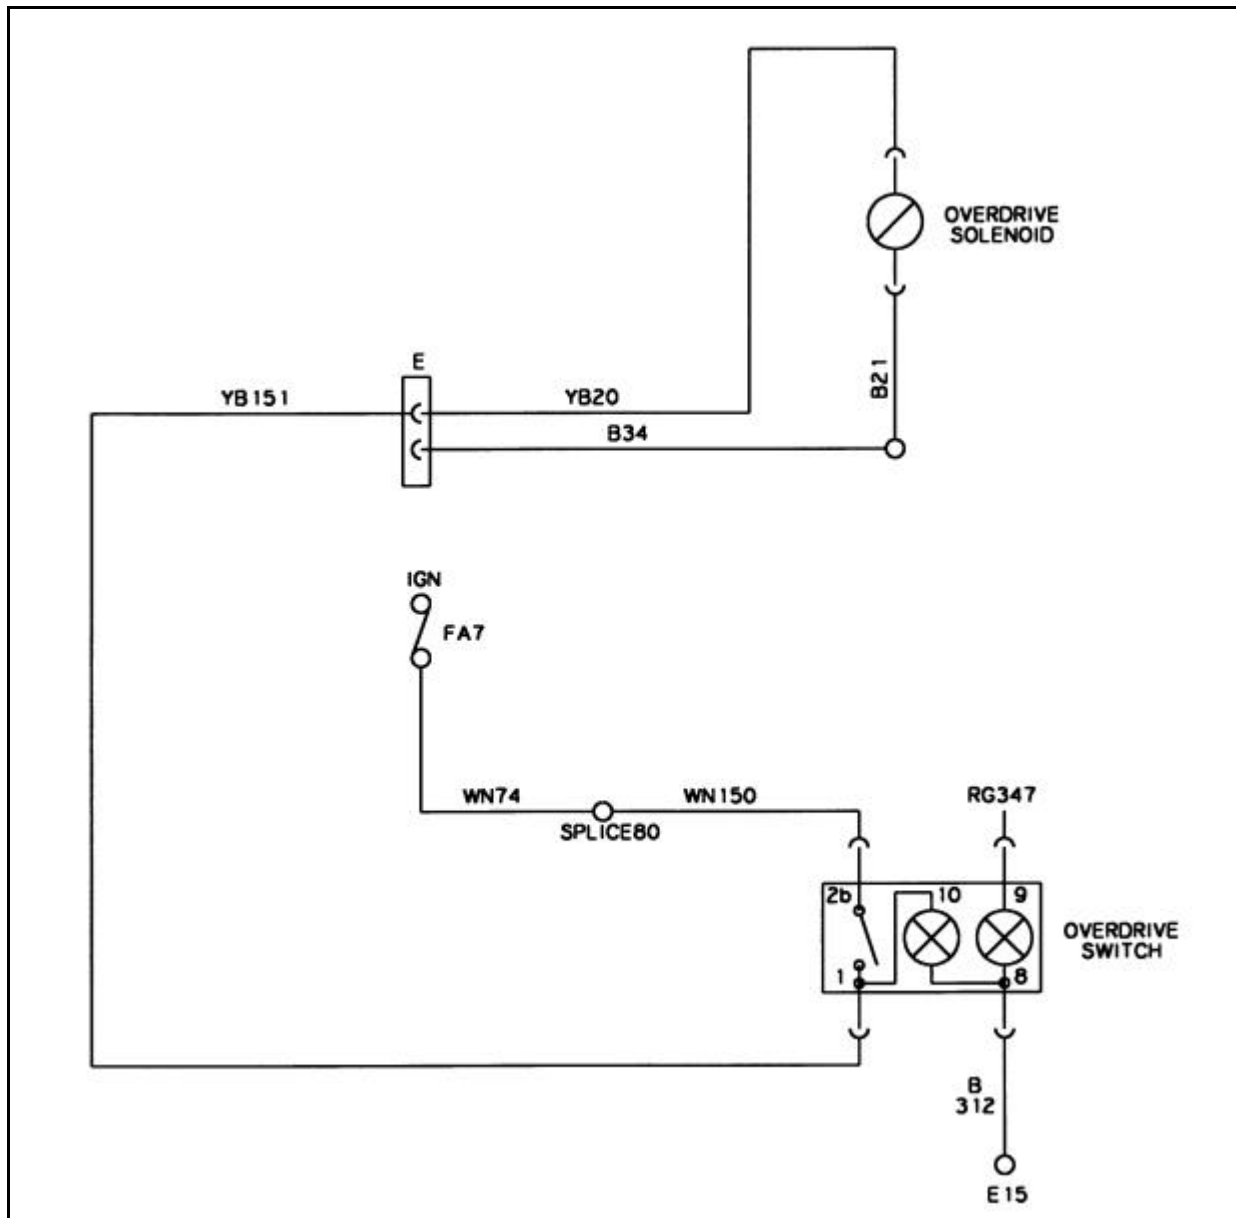OVERDRIVE


RHD Diesel Serial Nos: 107215 onwards - Issue 1

E Engine harness to front harness
 E15 Earth point to right of front heater

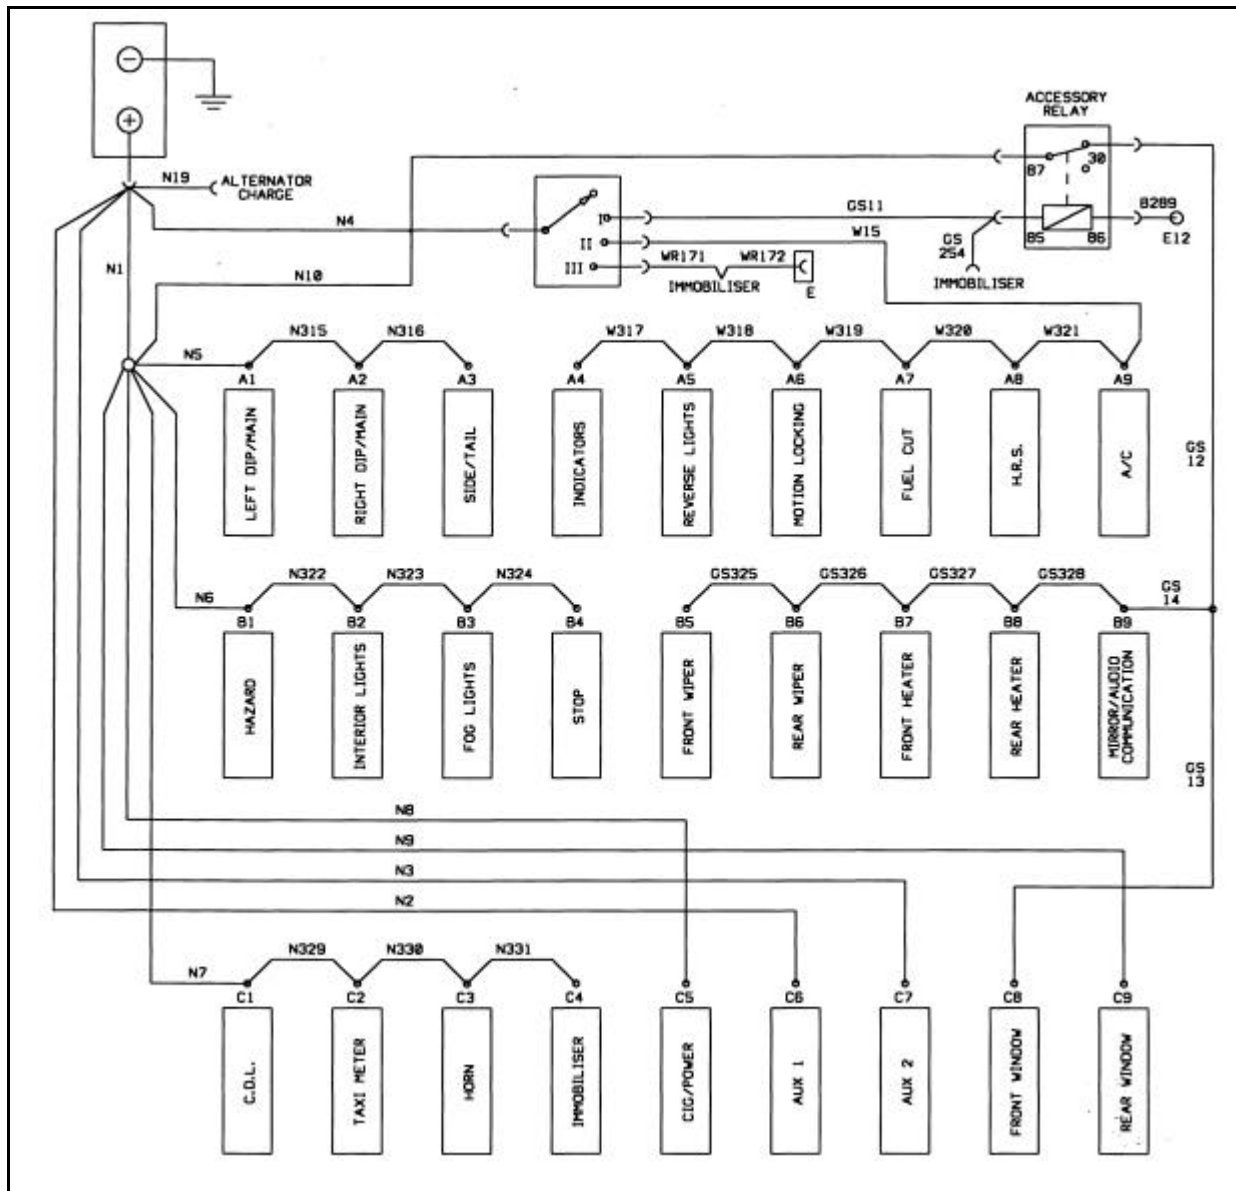POWER

RHD Diesel Serial Nos: 100016-107214 - Issue 2


E12 Earth point lower left A post

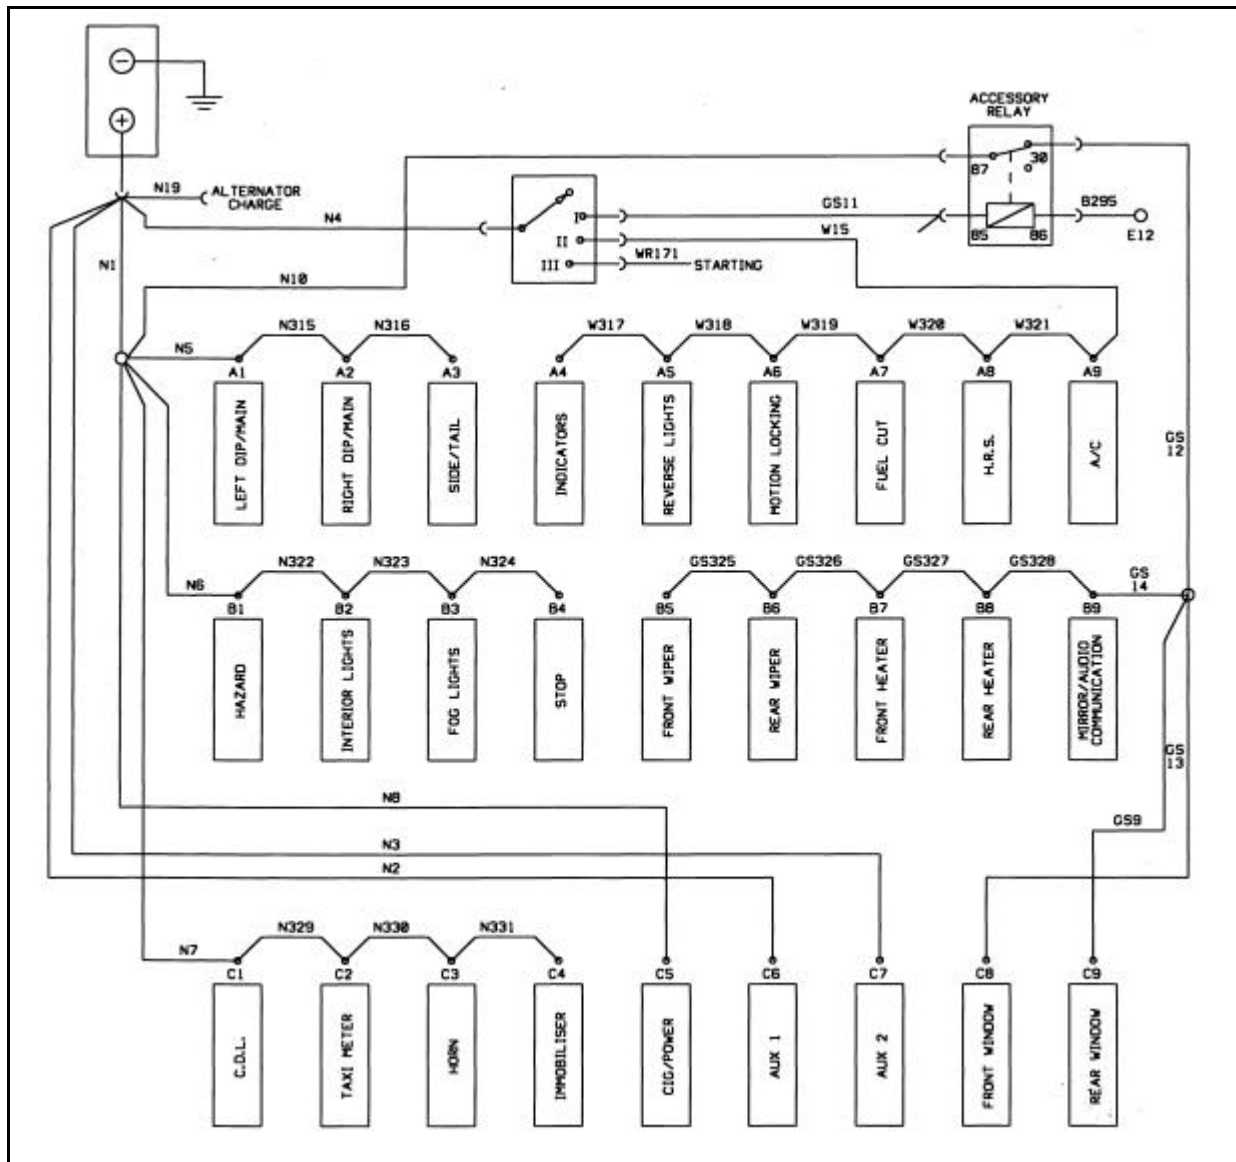POWER

RHD Diesel Serial Nos: 107215 onwards - Issue 1


E12 Earth point lower left A post

RADIO

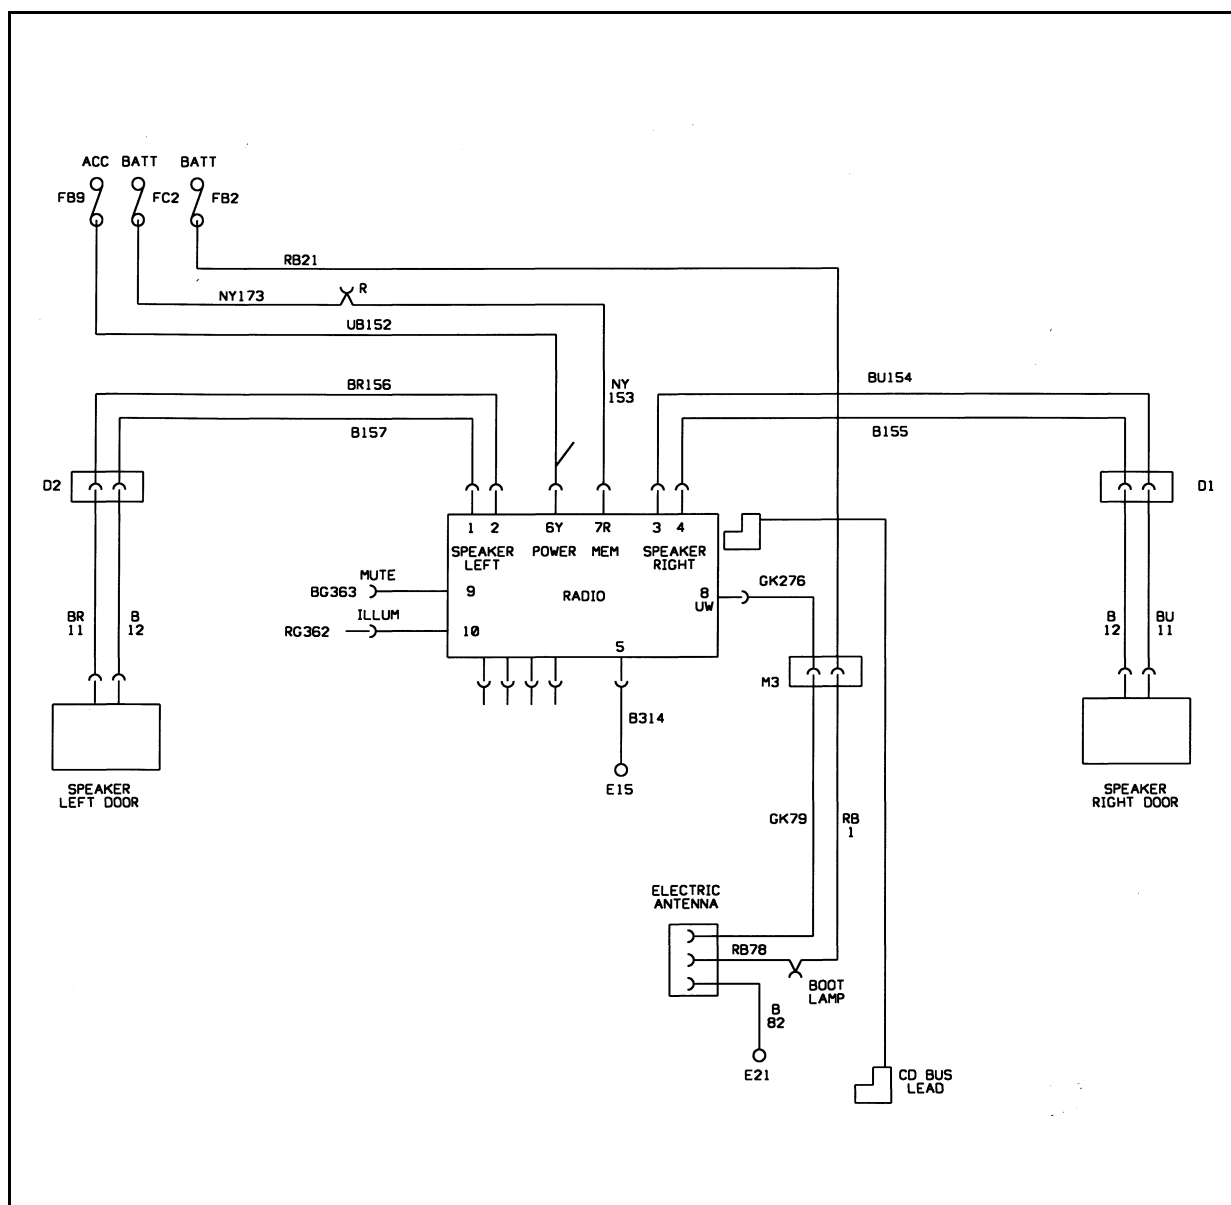

RHD Diesel Serial Nos: 100016 onwards- Issue 3


- D1 Drivers door harness to front harness
- D2 Luggage door harness to front harness
- M3 Rear harness to front harness
- R Roof harness to front harness
- E15 Earth point to right of front heater
- E21 Earth point rear right lamp cluster

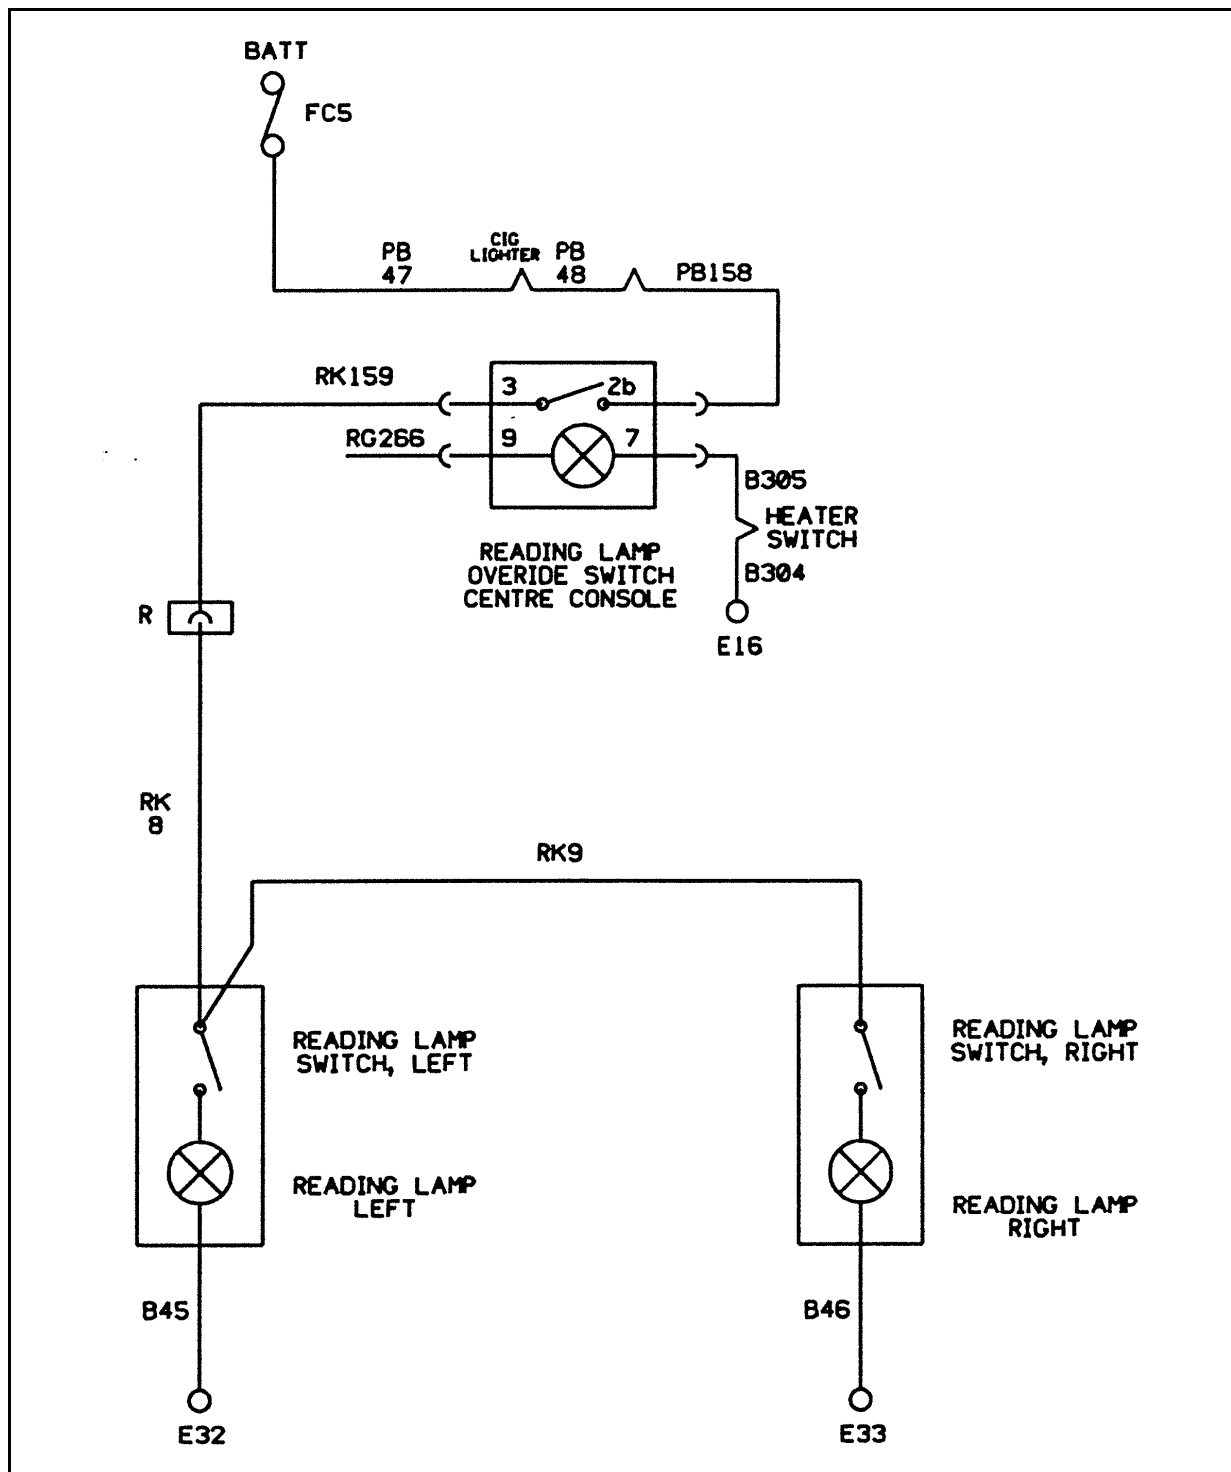READING LAMP

RHD Diesel - Issue 1

- R Roof harness to front harness
- E16 Earth point on left of handbrake
- E32 Earth point rear left roof
- E33 Earth point rear right roof


STARTING AUTO

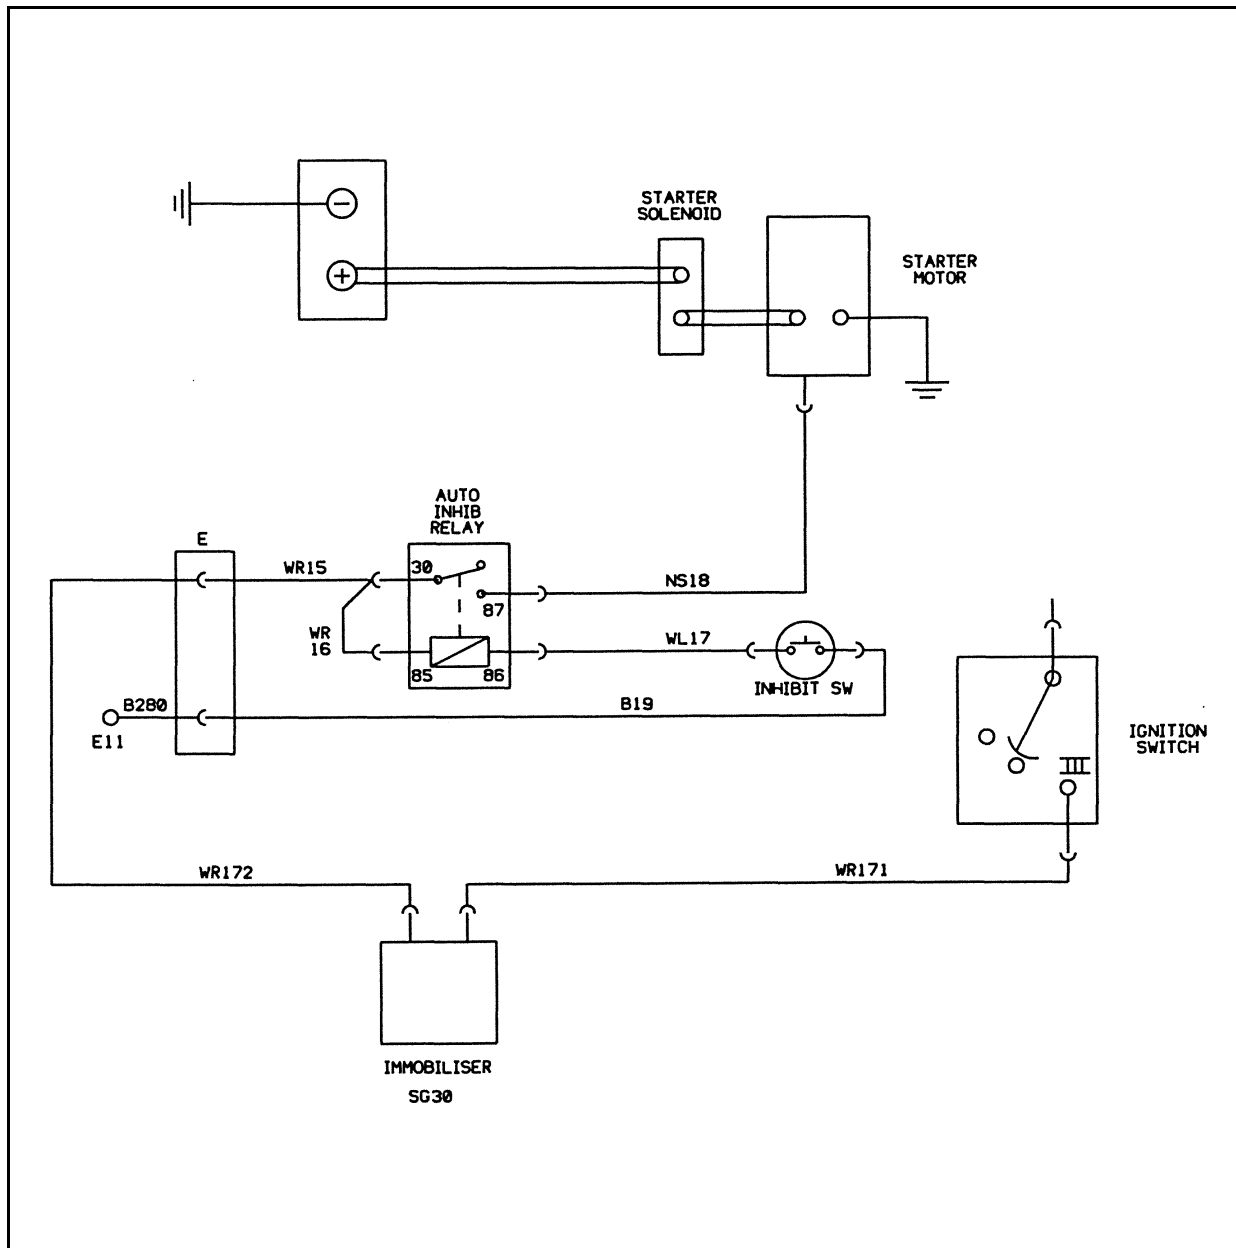

RHD Diesel Serial Nos: 100016-102766 - Issue 1

E Engine harness to front harness
E11 Earth point lower right A post


STARTING AUTO

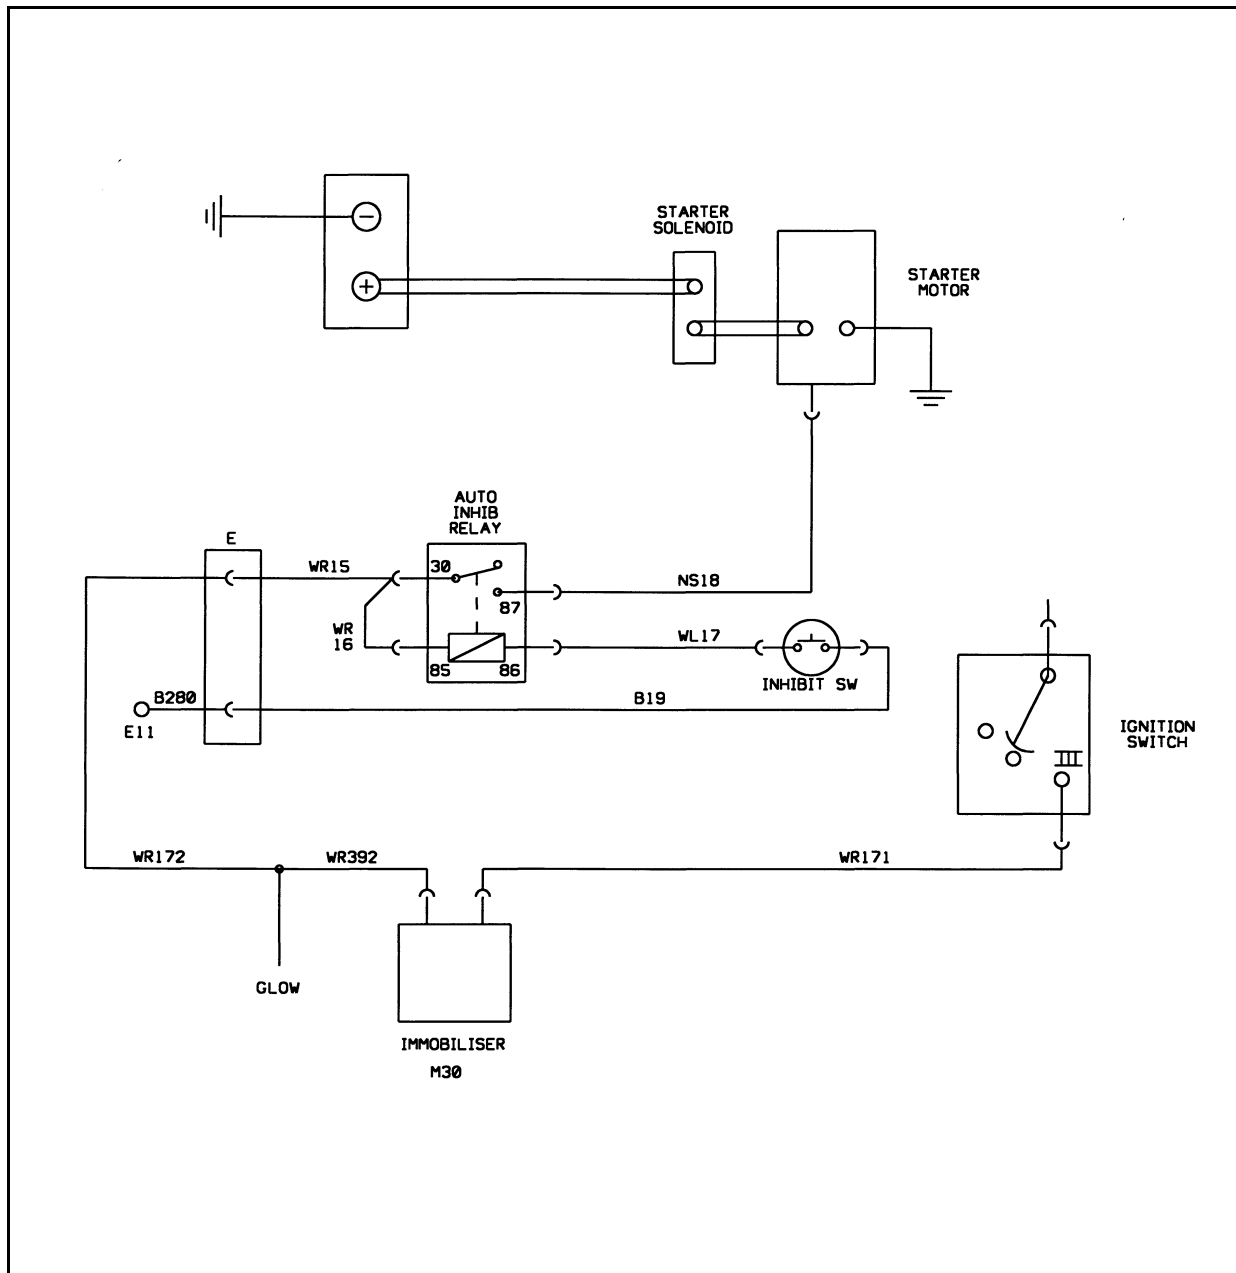

RHD Diesel Serial Nos: 102767-107214 - Issue 1


E Engine harness to front harness
E11 Earth point lower right A post

STARTING AUTO

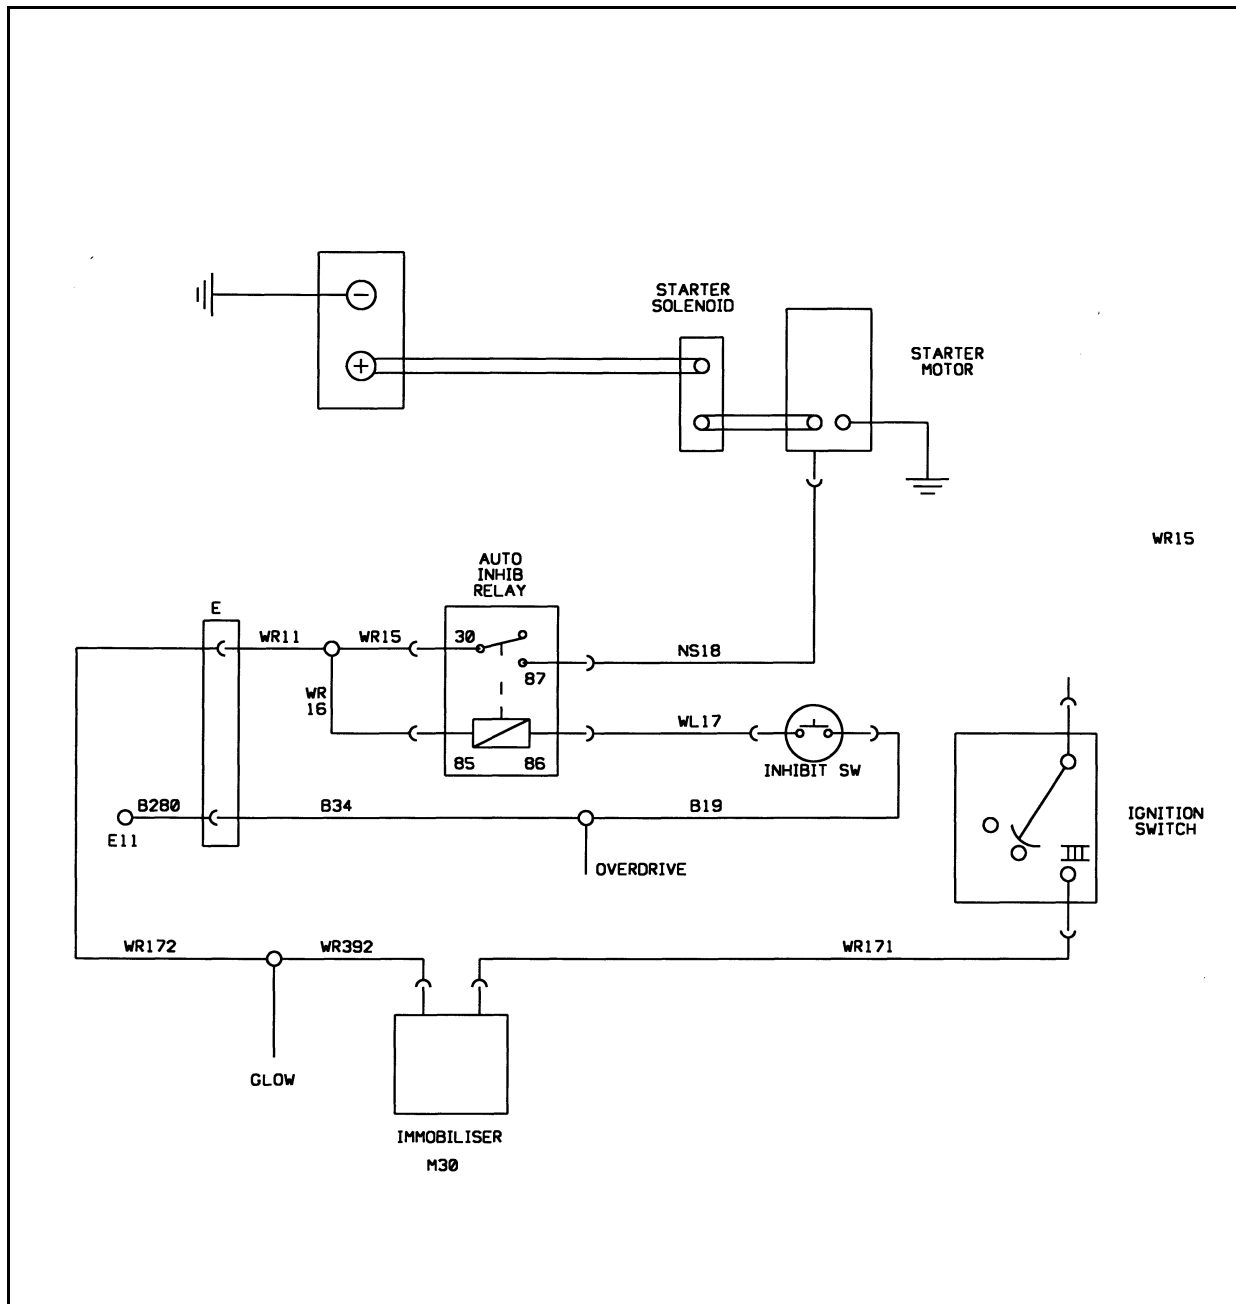


RHD Diesel Serial Nos: 107215 onwards - Issue 1

E Engine harness to front harness
E11 Earth point lower right A post

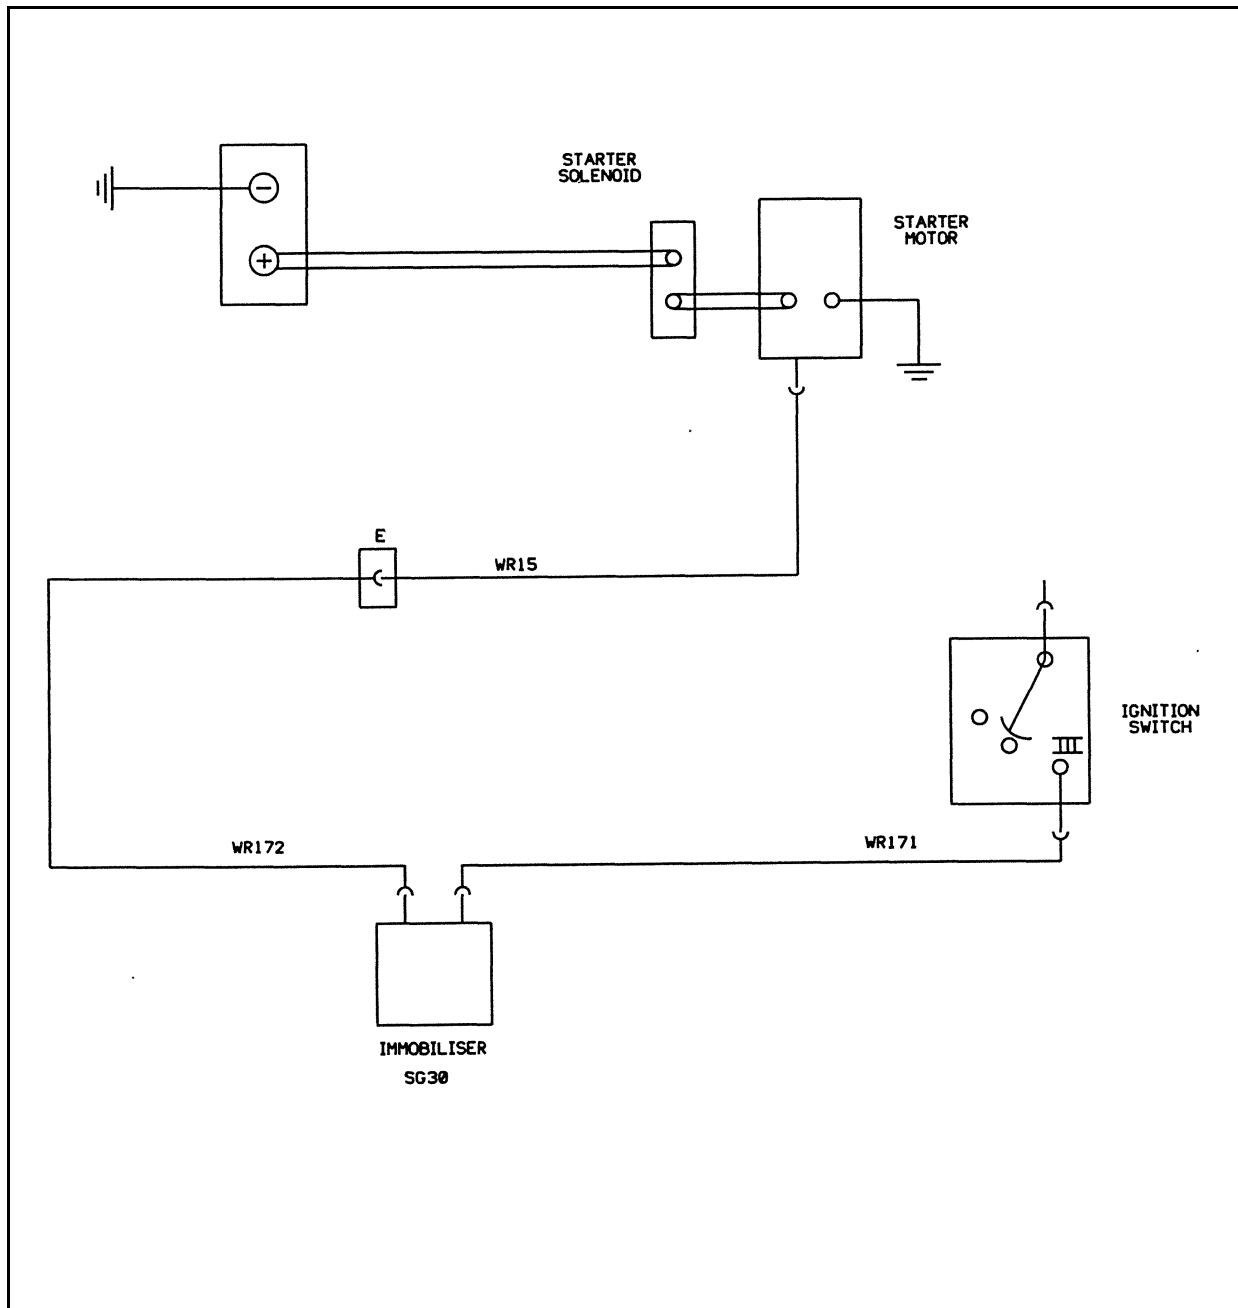STARTING MANUAL


RHD Diesel Serial Nos: 100016-102766 - Issue 1

E Engine harness to front harness

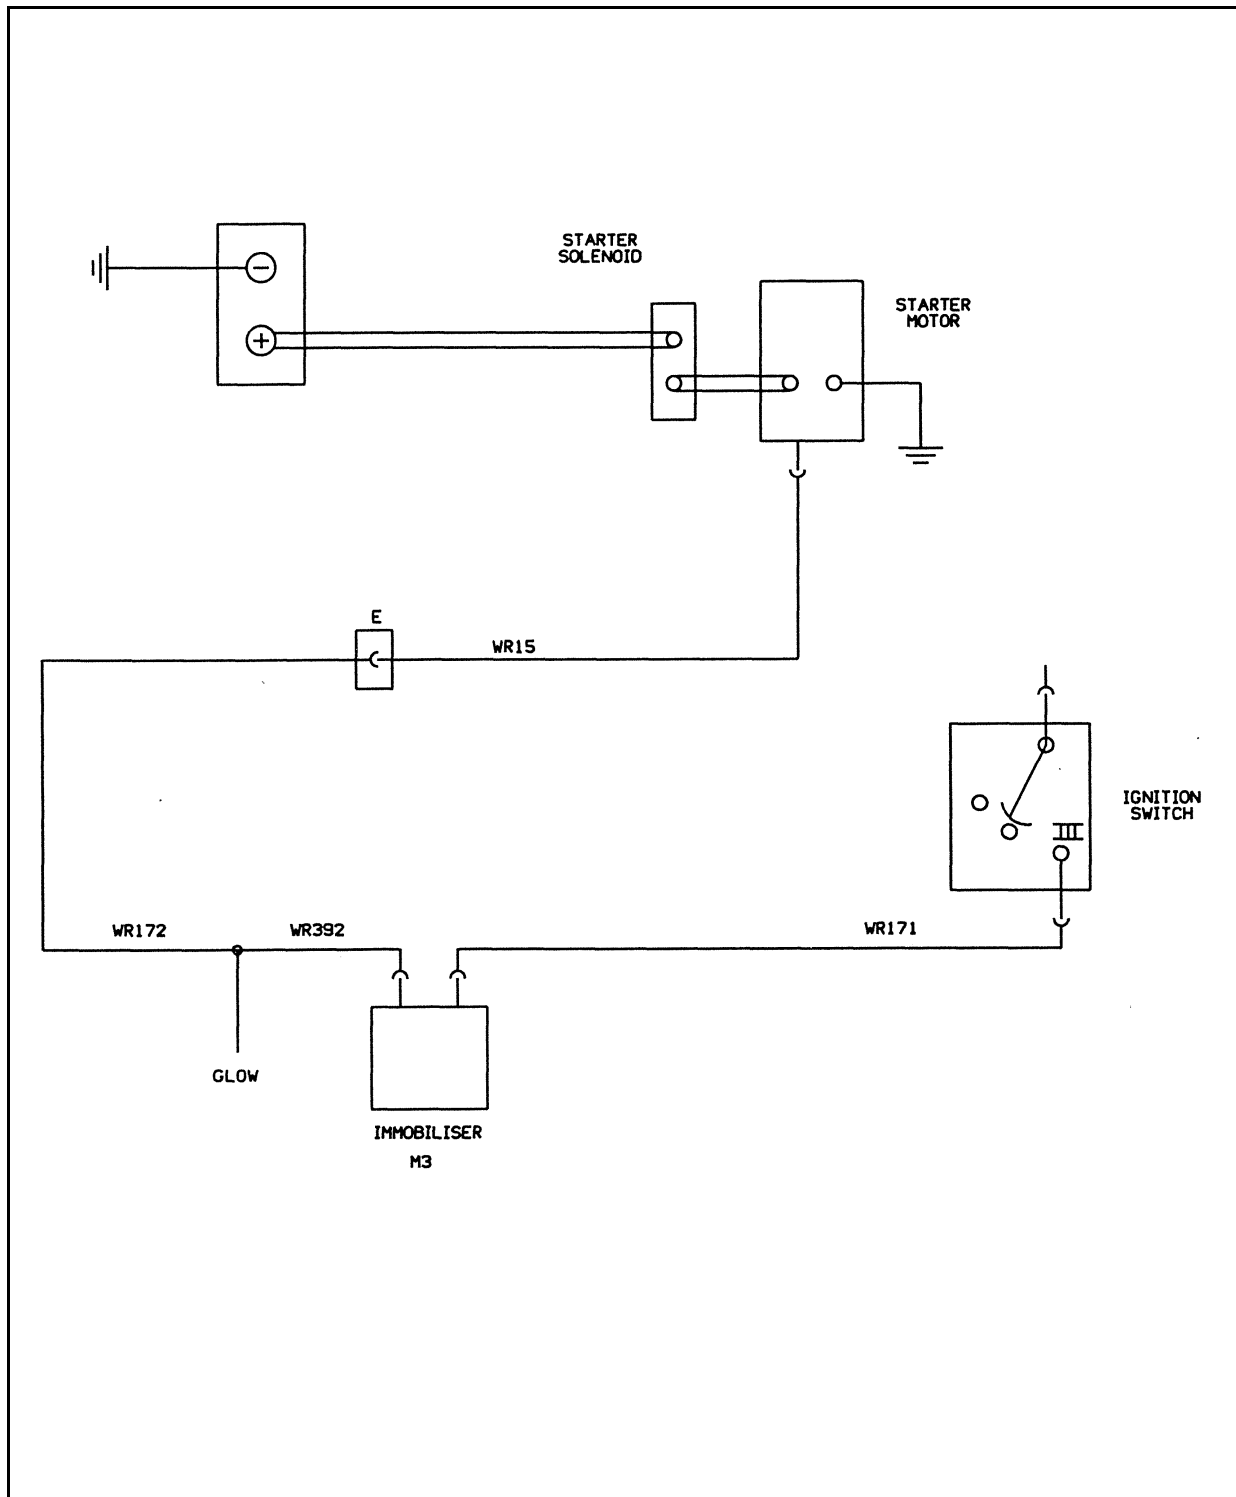STARTING MANUAL

RHD Diesel Serial Nos: 102767 onwards - Issue 1


E Engine harness to front harness

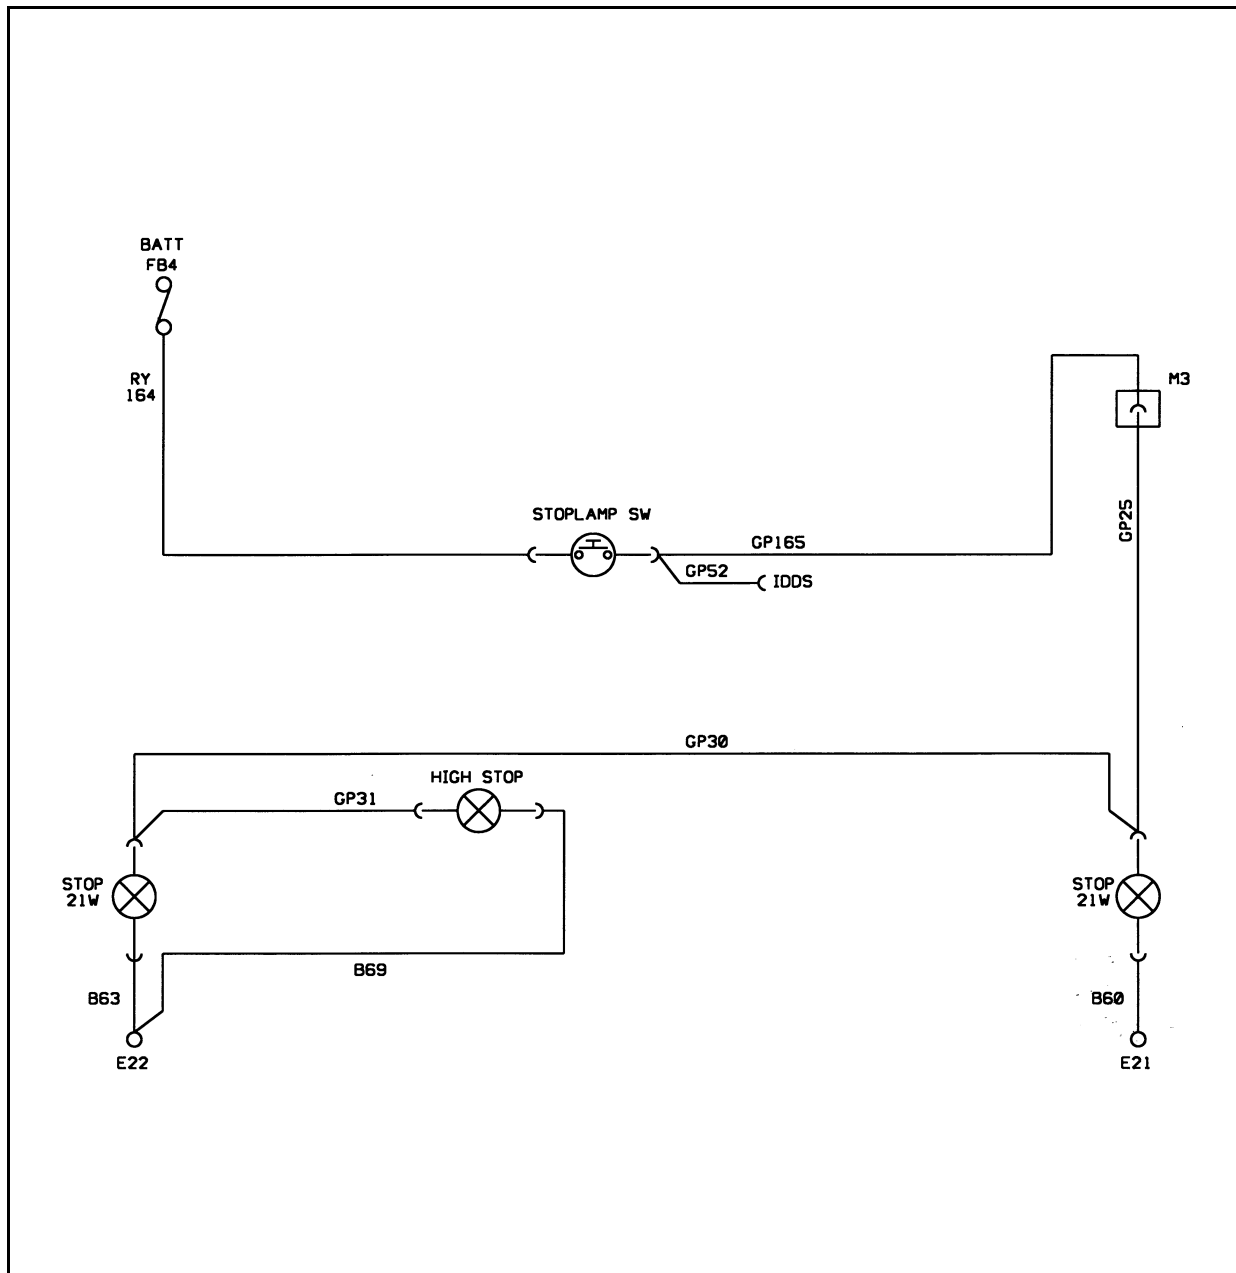STOP LAMP

RHD Diesel Serial Nos: 100016 onwards - Issue 1

- M3 Rear harness to front harness
- E21 Earth point rear right lamp cluster
- E22 Earth point rear left lamp cluster


TAXIMETER

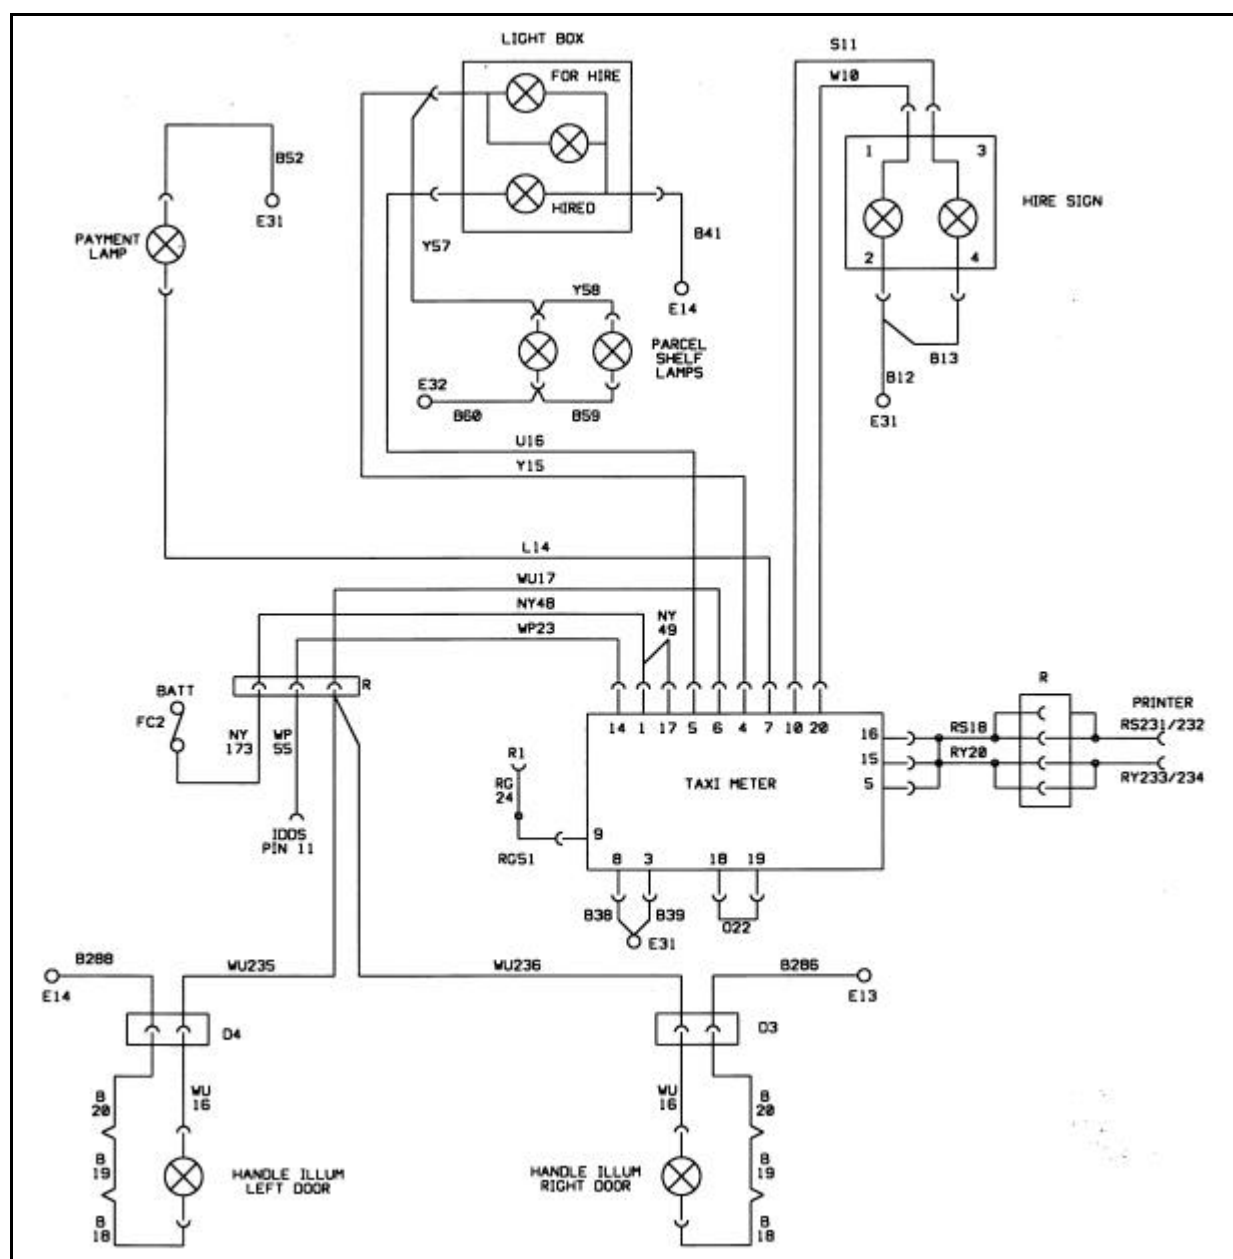

RHD Diesel Serial Nos: 100016-105629 - Issue 3

- R Roof harness to front harness
- D3 Passenger door right harness to front harness
- D4 Passenger door left harness to front harness
- E13 Earth point on rear of rear heater
- E14 Earth point lower left B-C post
- E31 Earth point roof front behind console


TAXIMETER

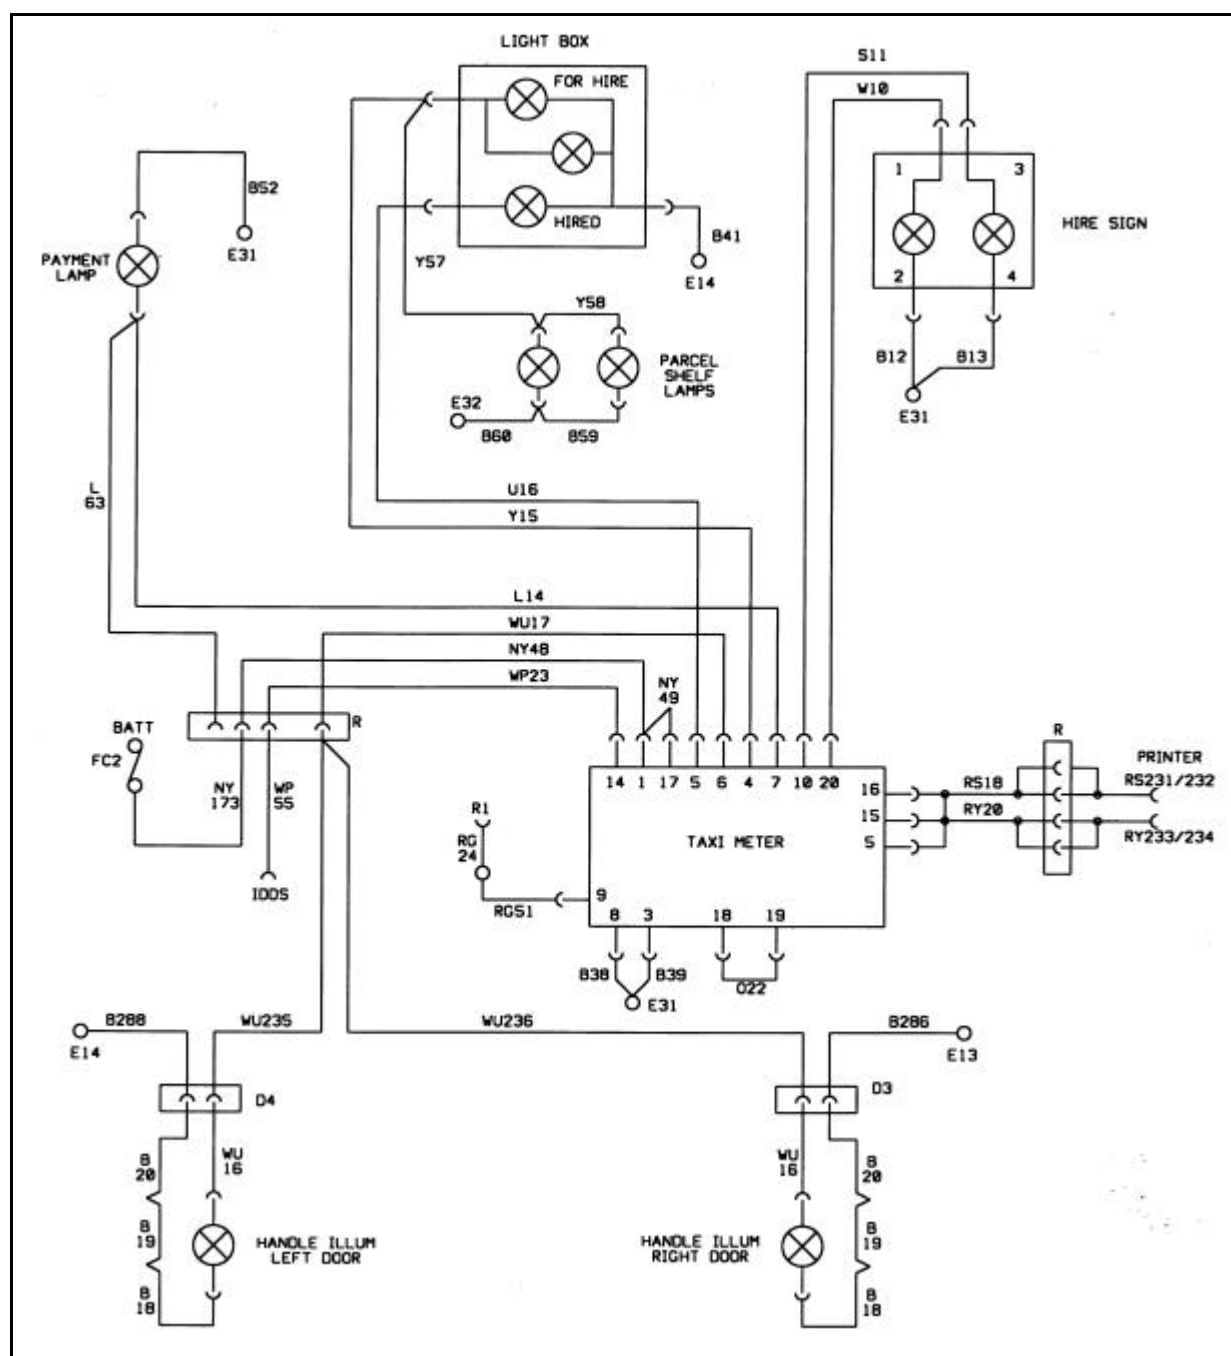

RHD Diesel Serial Nos: 105630 onwards - Issue 1


- R Roof harness to front harness
- D3 Passenger door right harness to front harness
- D4 Passenger door left harness to front harness
- E13 Earth point on rear of rear heater
- E14 Earth point lower left B-C post
- E31 Earth point roof front behind console

WARNING LAMPS

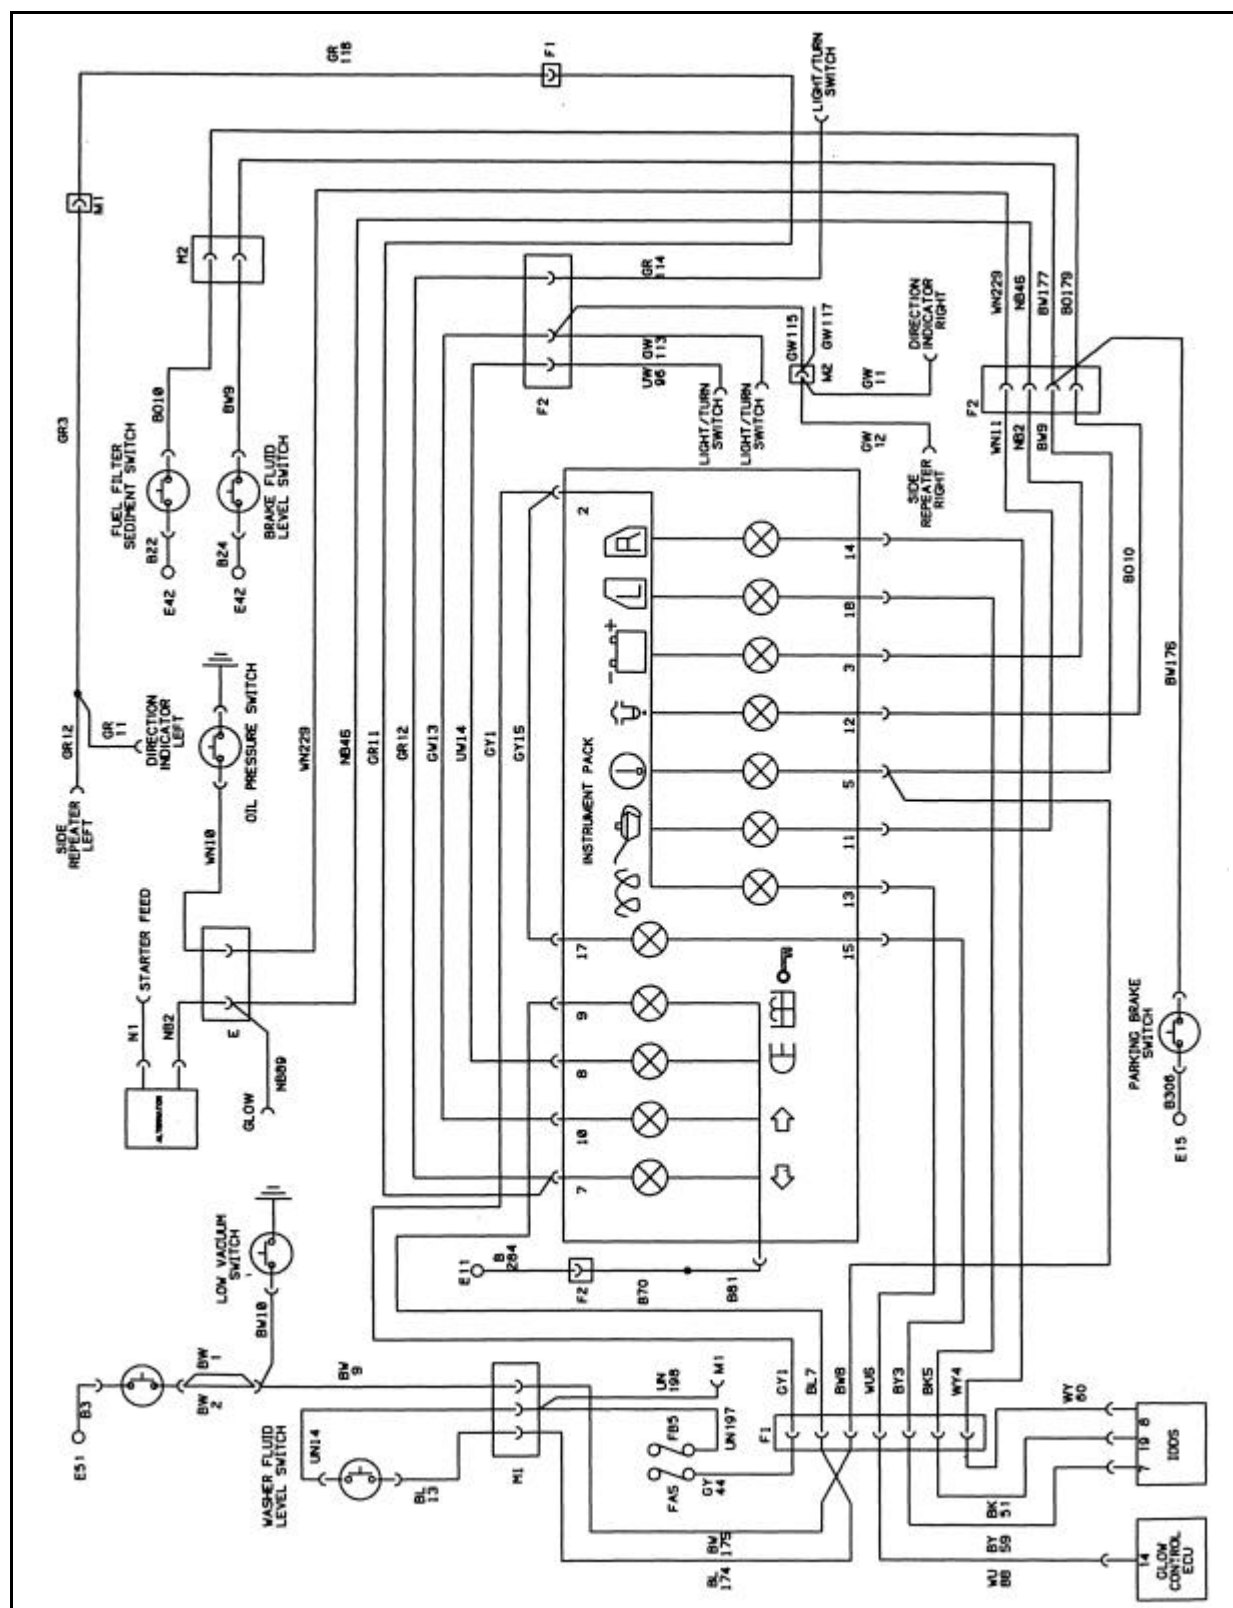


RHD Diesel Serial Nos: 100016-102766 - Issue 2

WARNING LAMPS

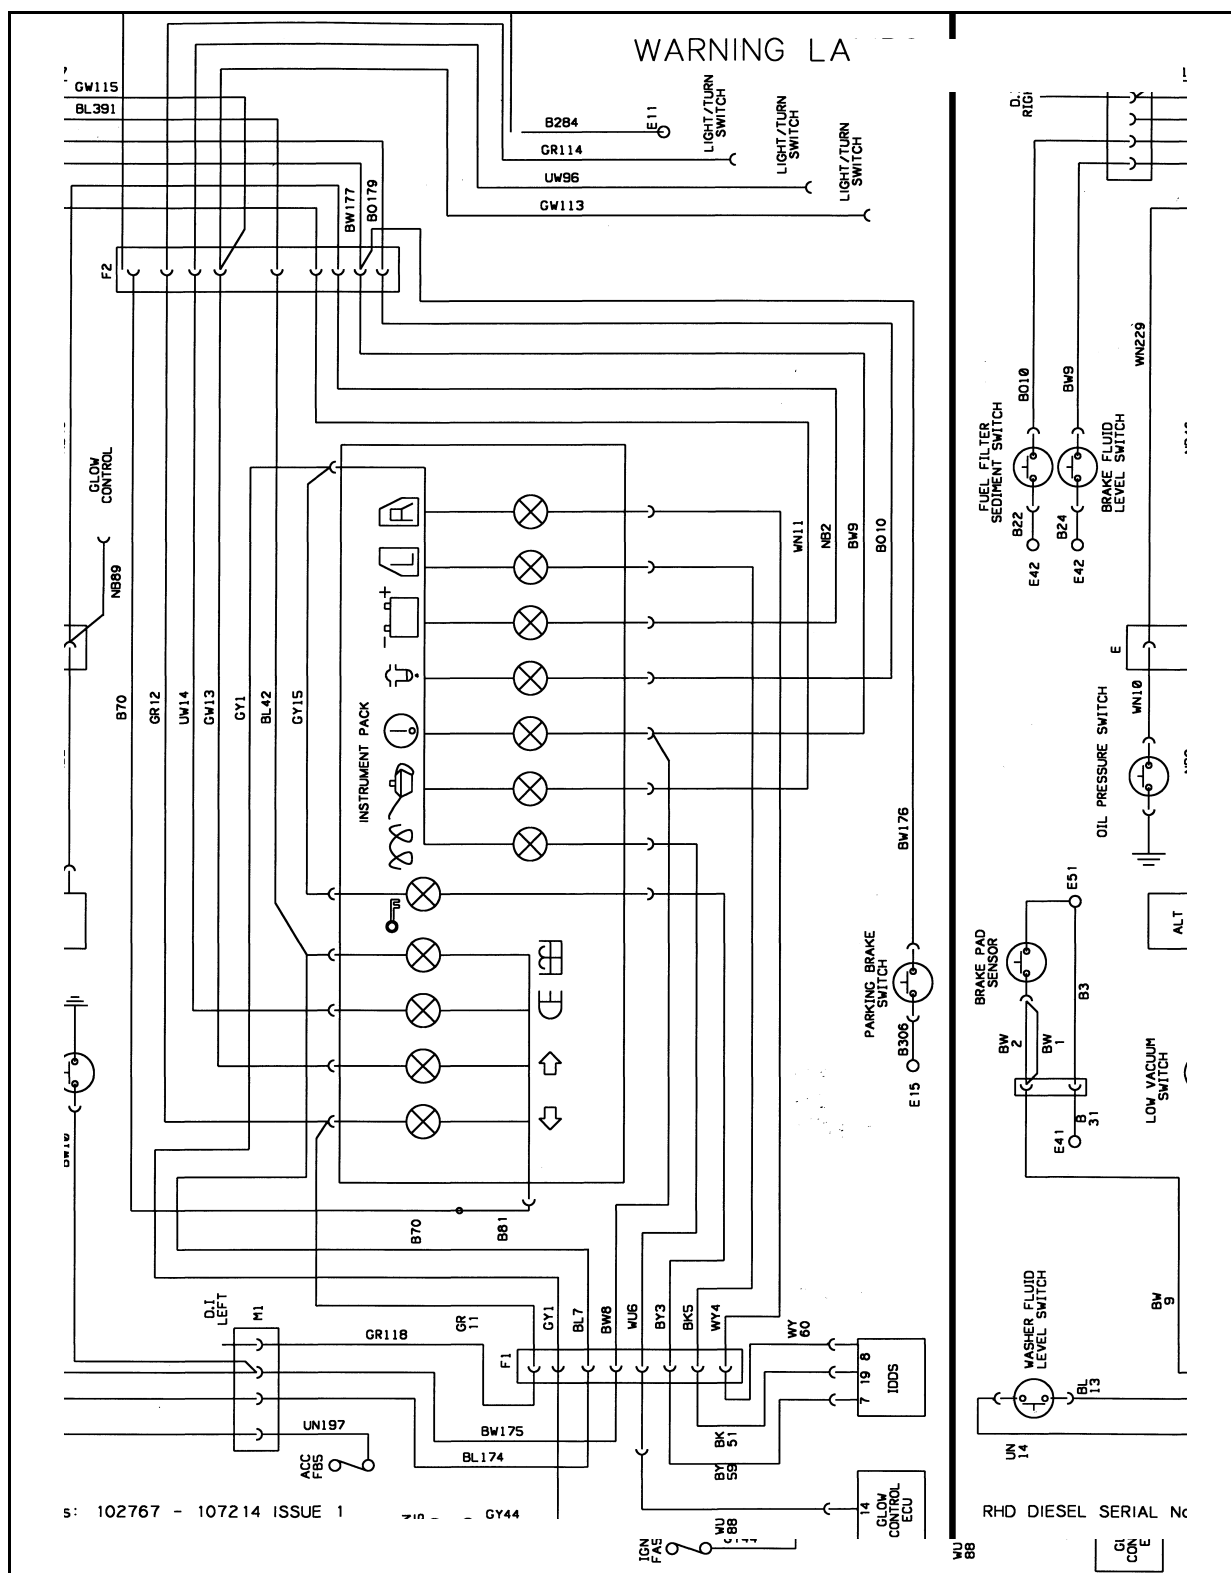


RHD Diesel Serial Nos: 102767-102714 - Issue 1

WARNING LAMPS

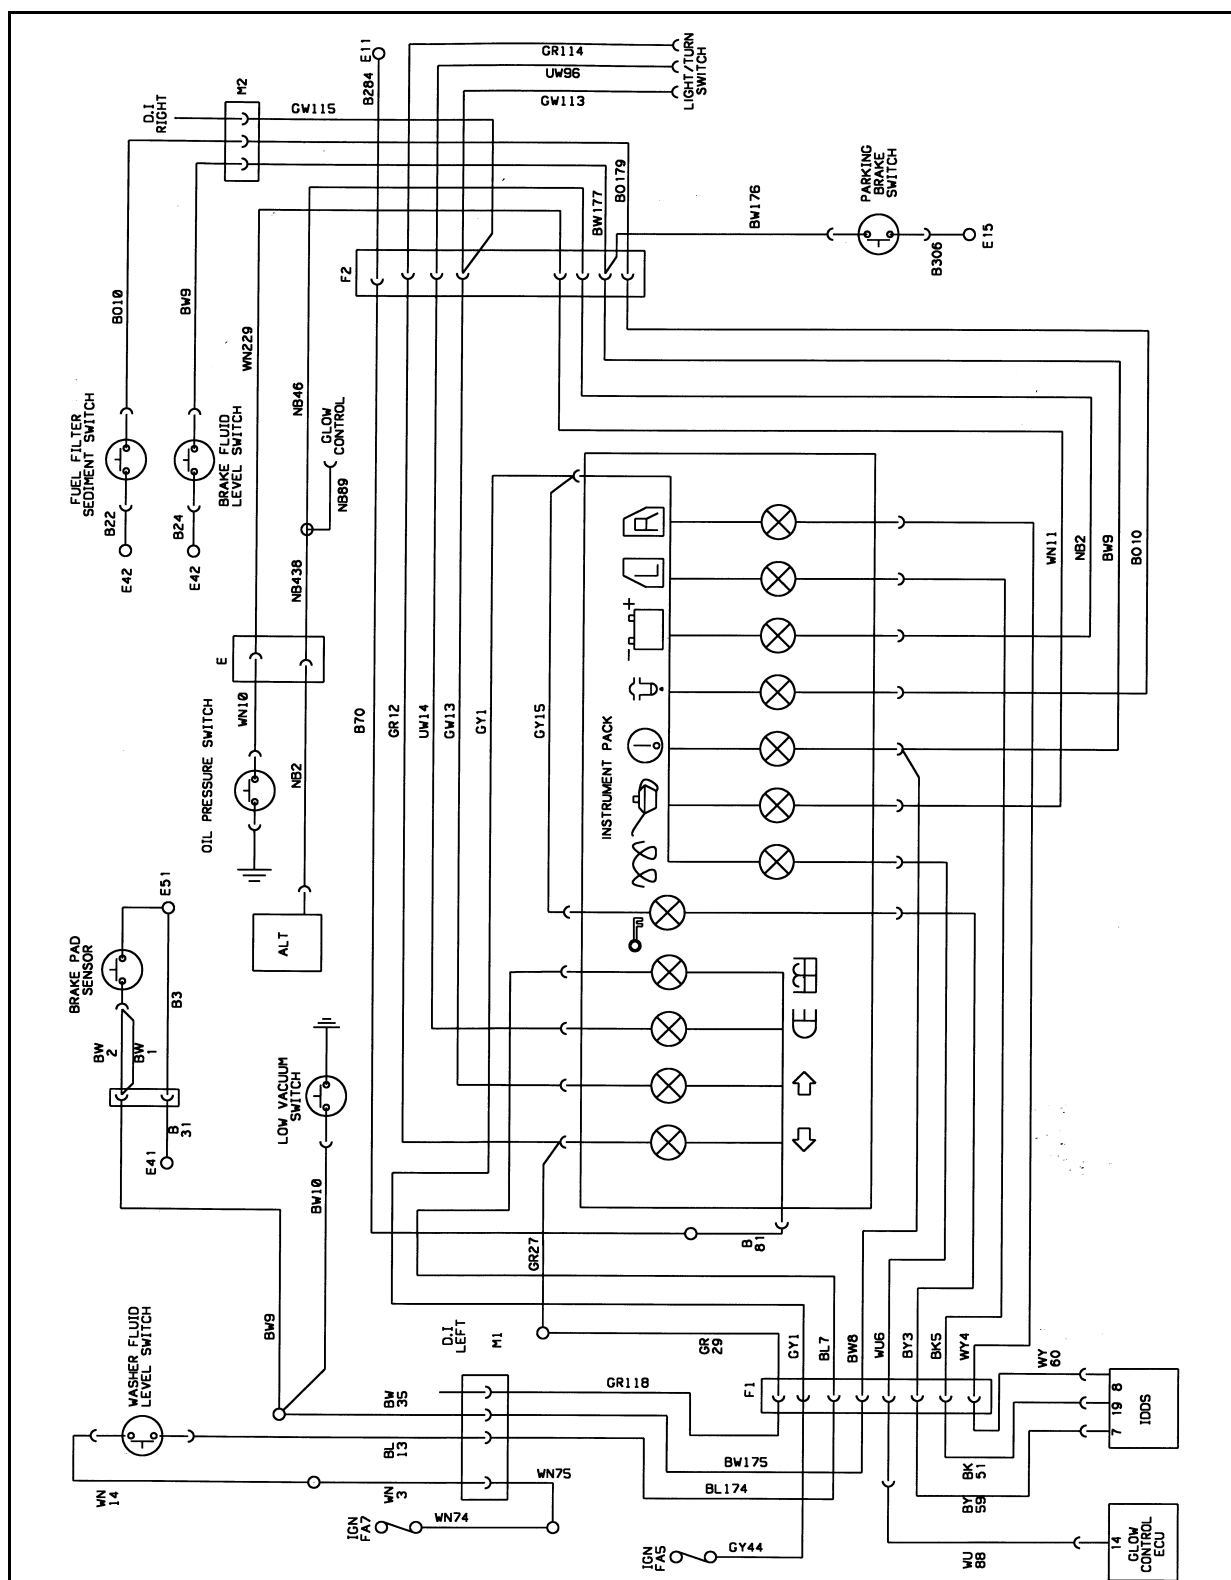


RHD Diesel Serial Nos: 102715 onwards - Issue 1

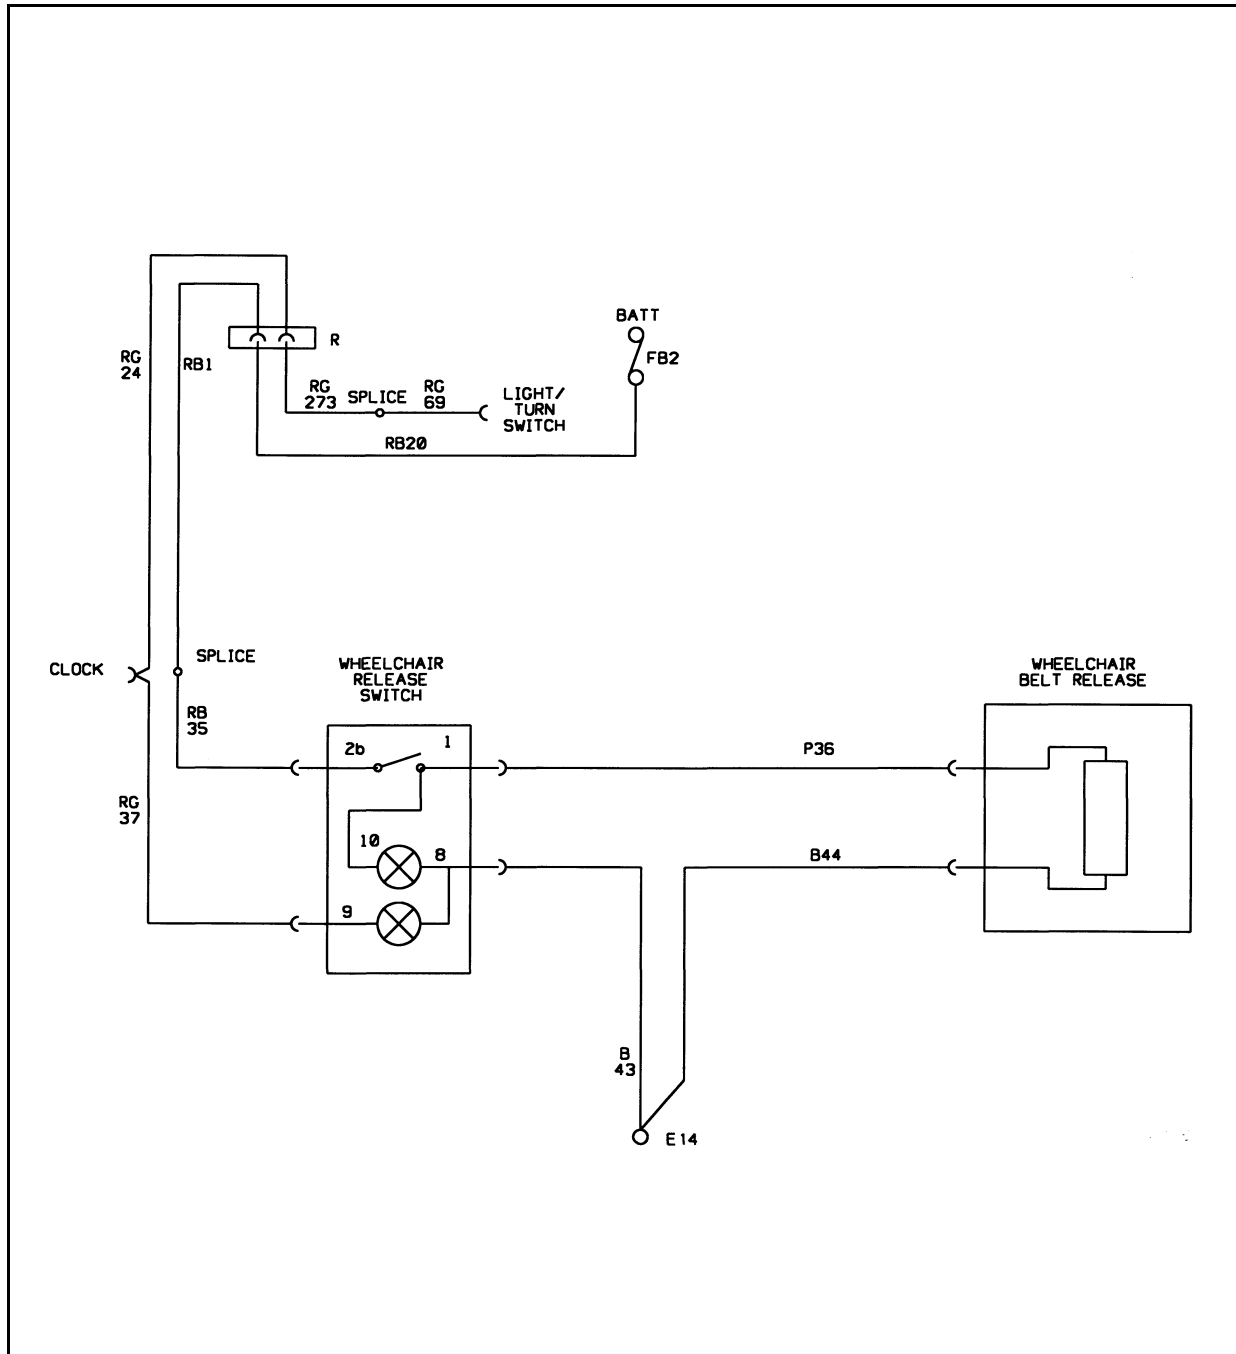WHEELCHAIR RELEASE

RHD Diesel Serial Nos: 100016-102766 - Issue 1


R Roof harness
 E14 Earth point lower left B-C post

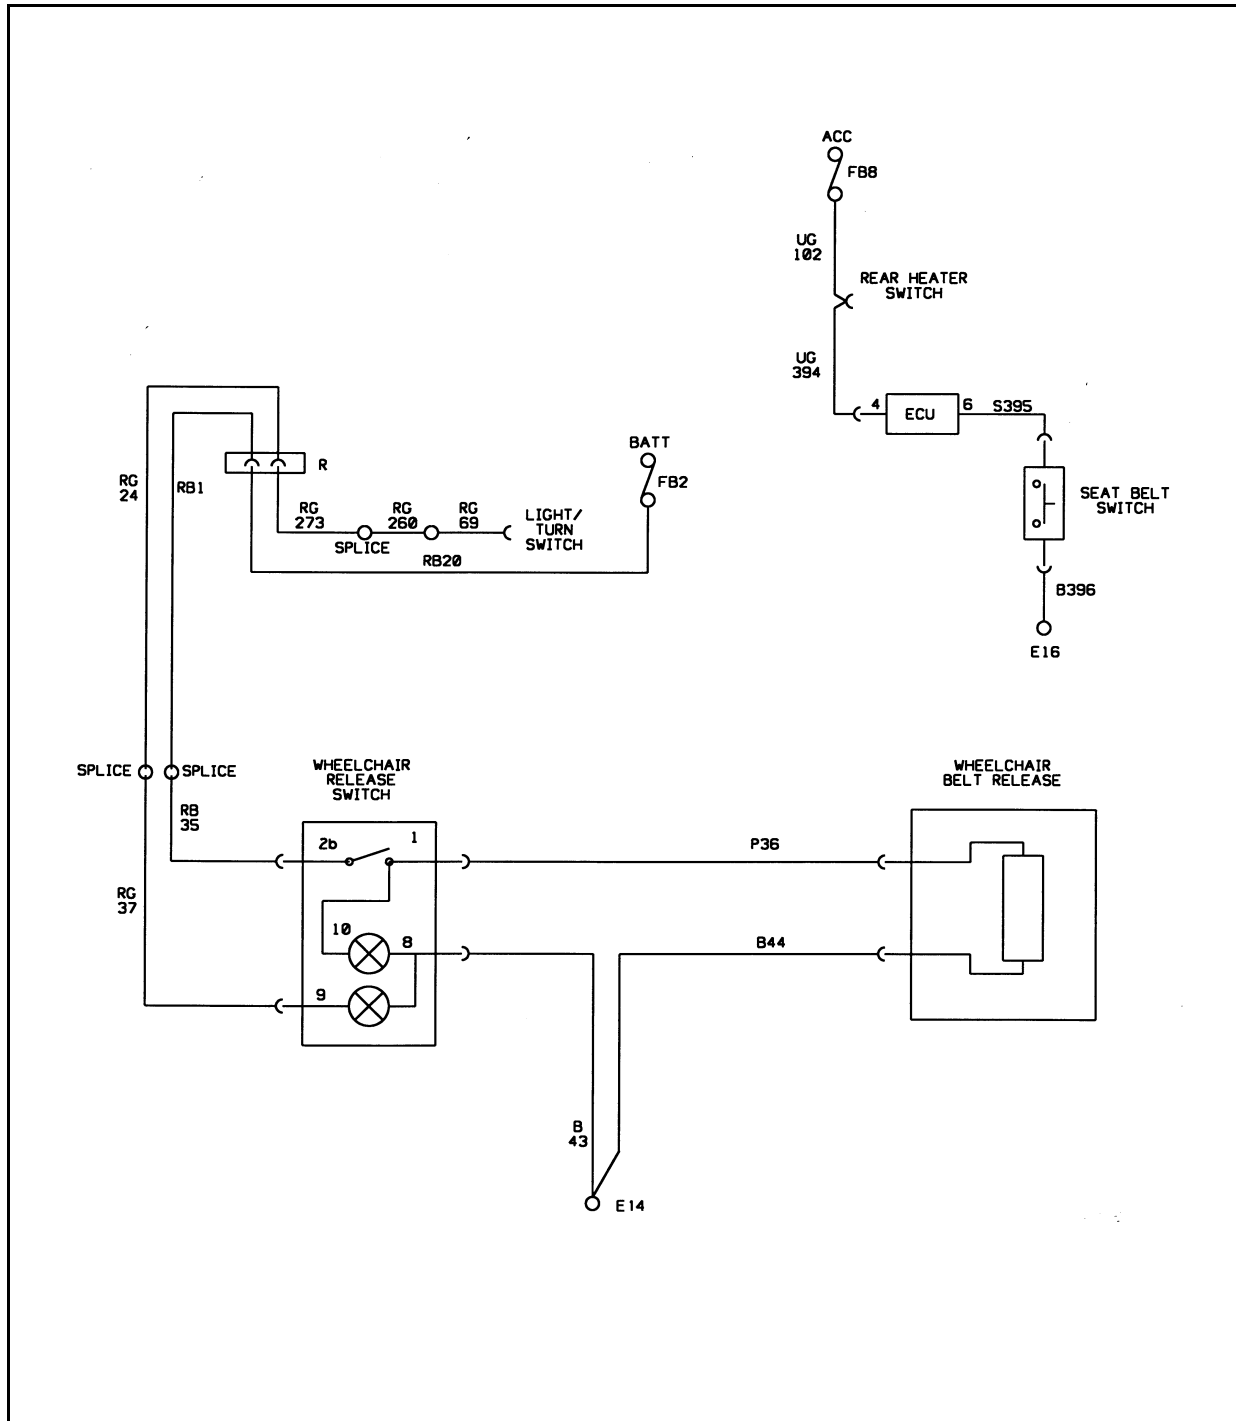WHEELCHAIR RELEASE

RHD Diesel Serial Nos: 102767 onwards - Issue 1

R Roof harness
 E14 Earth point lower left B-C post
 E16 Earth point on left of handbrake


WINDOWS, FRONT

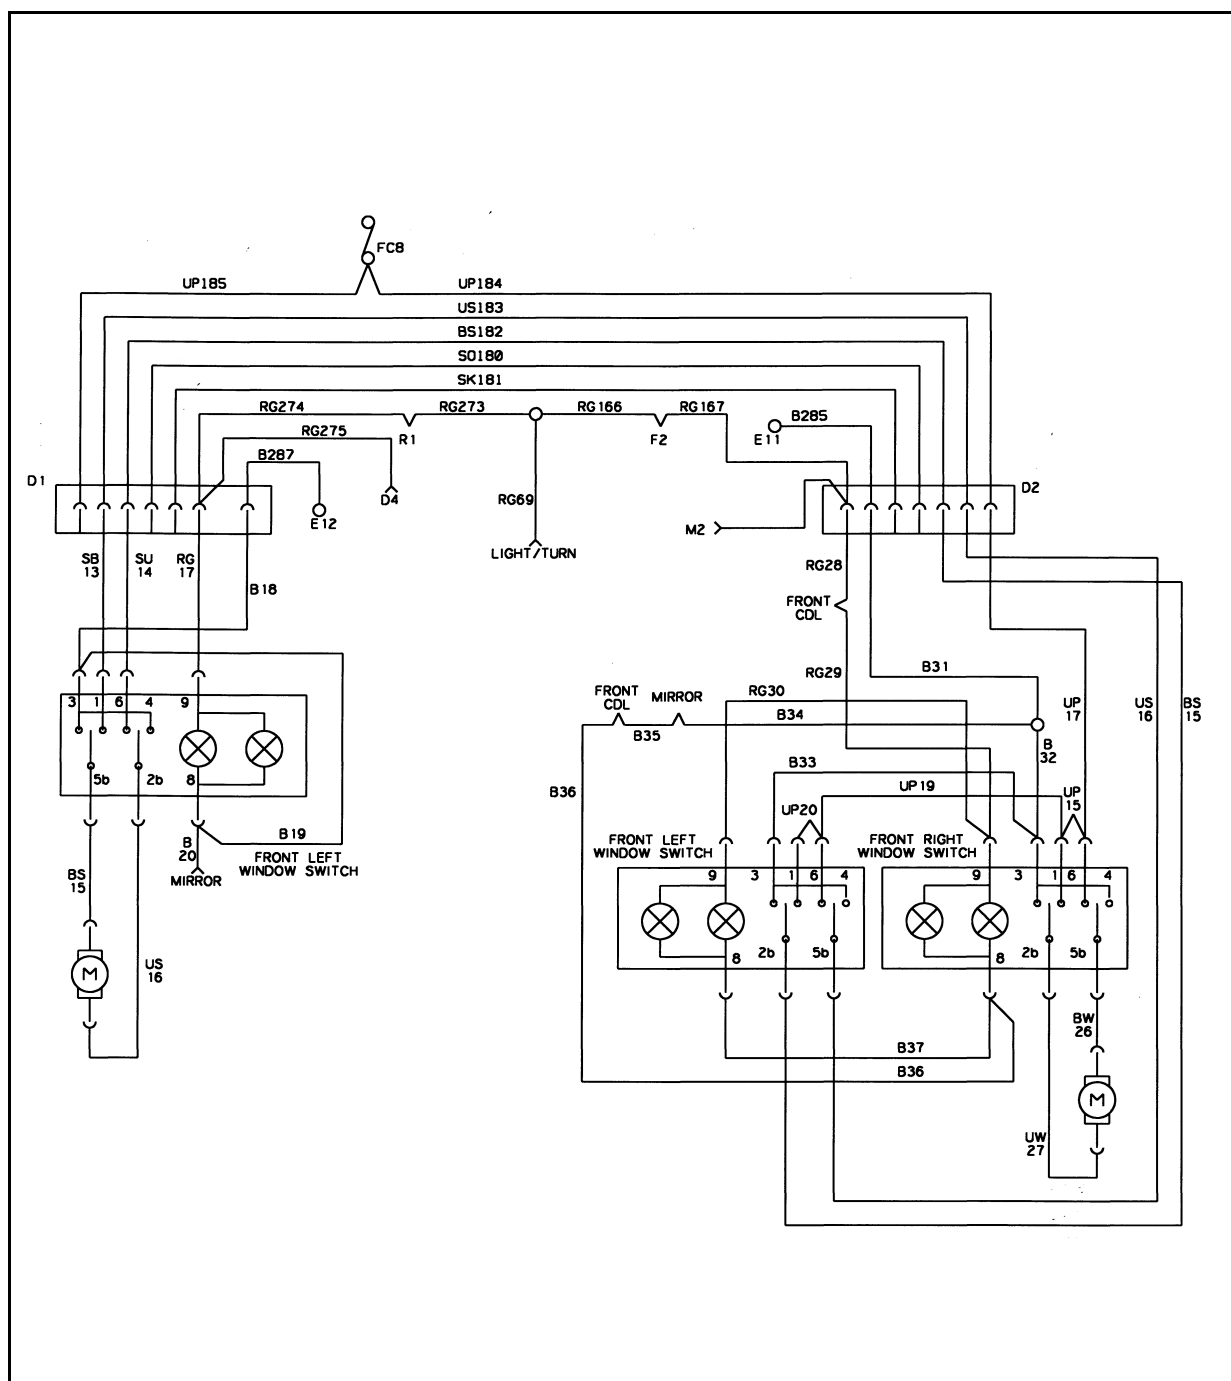

RHD Diesel Serial Nos: 100016-105629 - Issue 1


- D1 Drivers door harness to front harness
- D2 Luggage door harness to front harness
- D4 Left side rear door harness to front harness
- M2 Right side under bonnet harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post

WINDOWS, FRONT

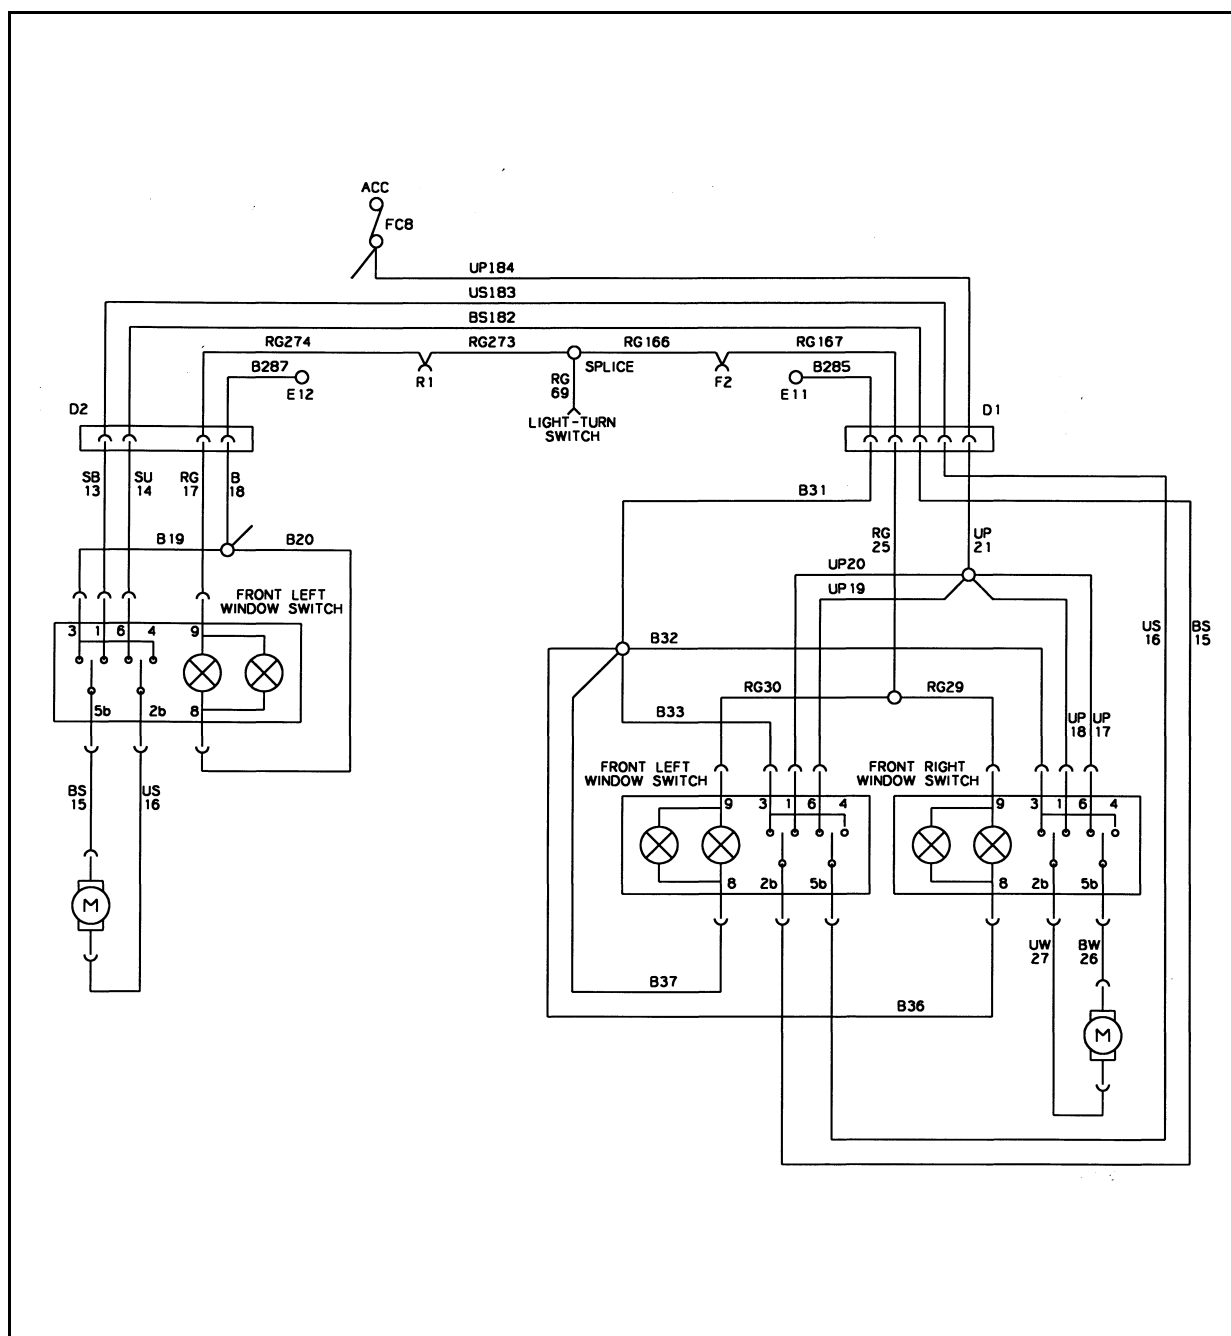


RHD Diesel Serial Nos: 105630-107214 - Issue 1

- D1 Drivers door harness to front harness
- D2 Luggage door harness to front harness
- D4 Left side rear door harness to front harness
- M2 Right side under bonnet harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post

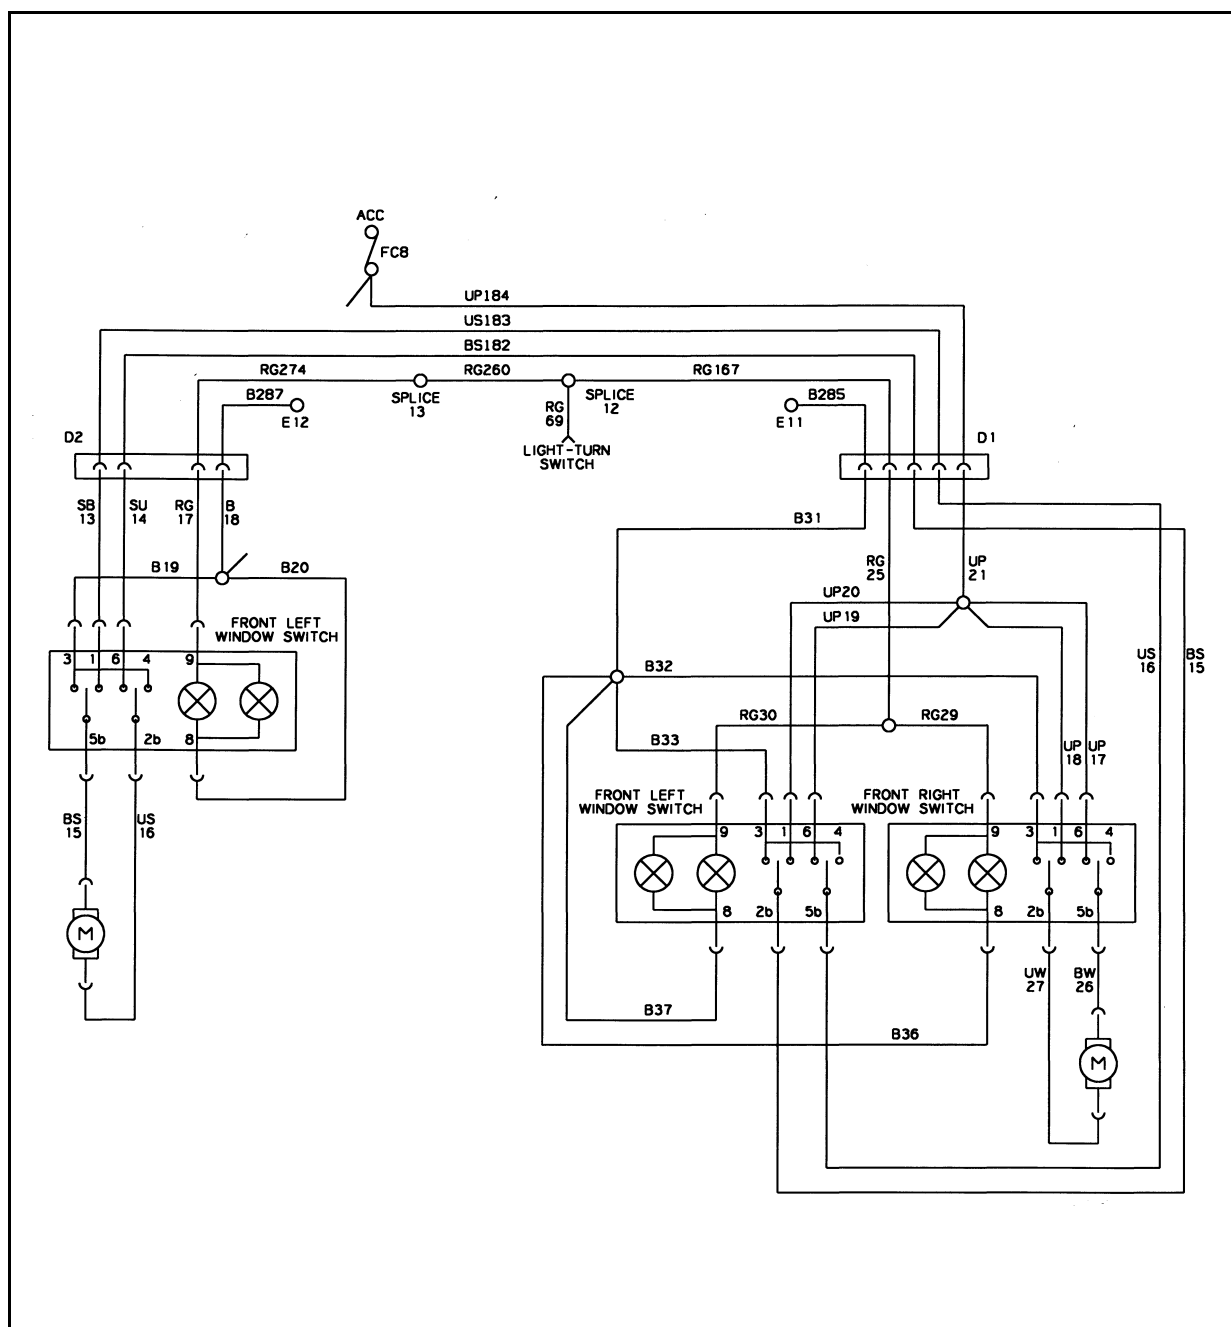WINDOWS, FRONT


RHD Diesel Serial Nos: 107215 onwards - Issue 1

- D1 Drivers door harness to front harness
- D2 Luggage door harness to front harness
- D4 Left side rear door harness to front harness
- M2 Right side under bonnet harness to front harness
- E11 Earth point lower right A post
- E12 Earth point lower left A post

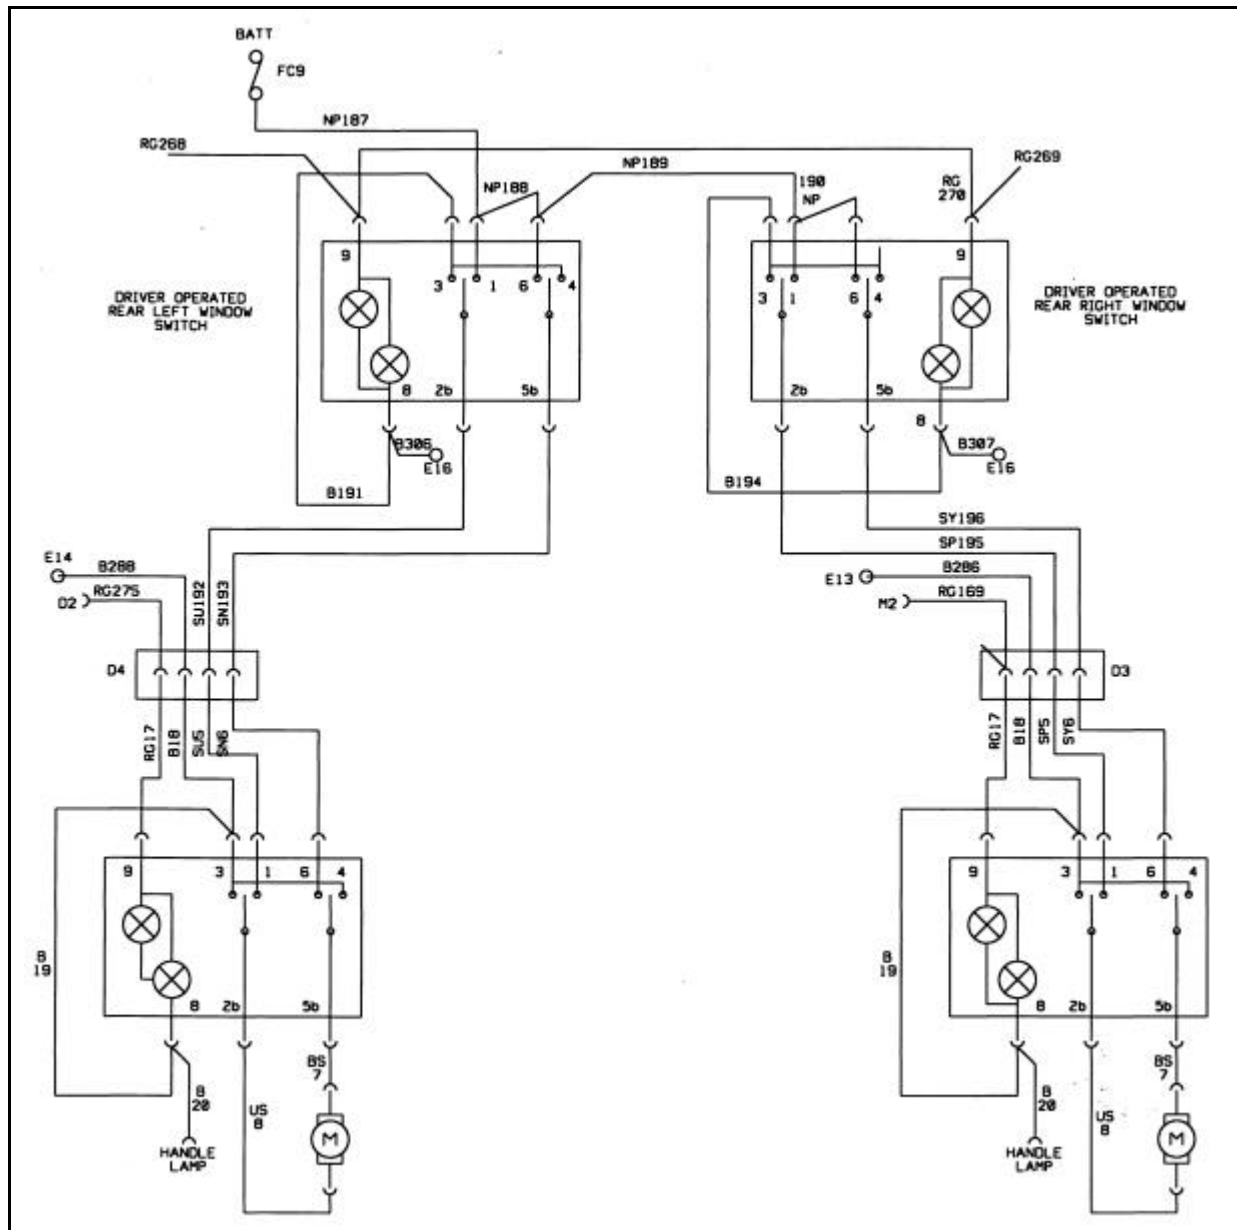WINDOWS, REAR


RHD Diesel Serial Nos: 100016-107214 - Issue 2

- D3 Passenger door right harness to front harness
- D4 Passenger door left harness to front harness
- E13 Earth point on rear of rear heater
- E14 Earth point lower left B-C post
- E16 Earth point on left of handbrake

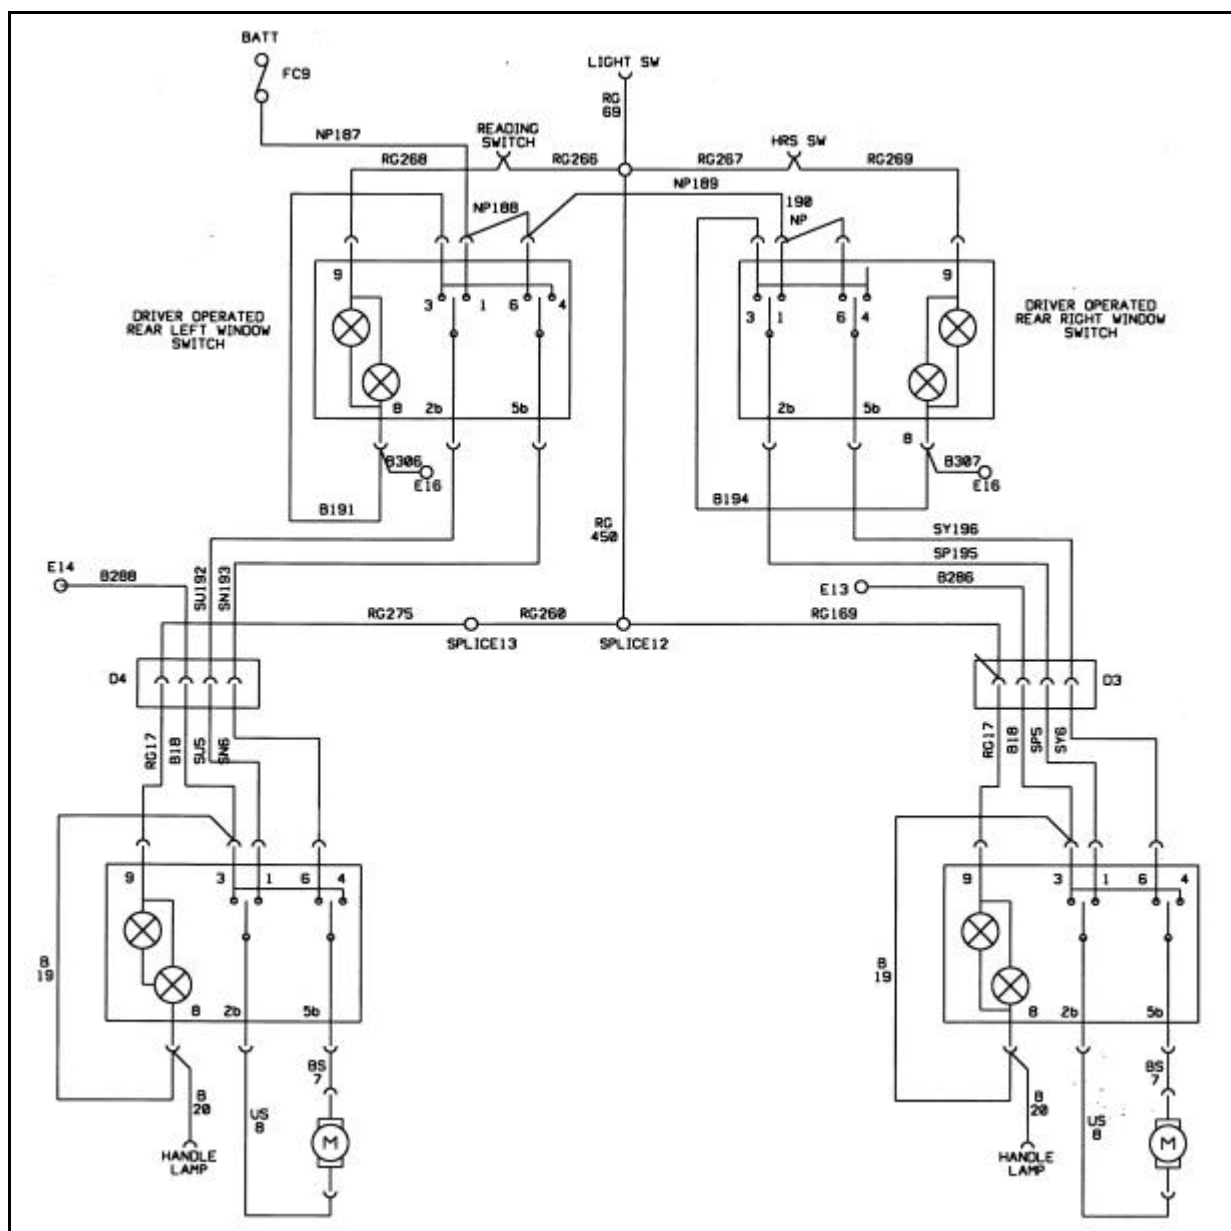WINDOWS, REAR


RHD Diesel Serial Nos: 107215 onwards - Issue 1

- D3 Passenger door right harness to front harness
- D4 Passenger door left harness to front harness
- E13 Earth point on rear of rear heater
- E14 Earth point lower left B-C post
- E16 Earth point on left of handbrake

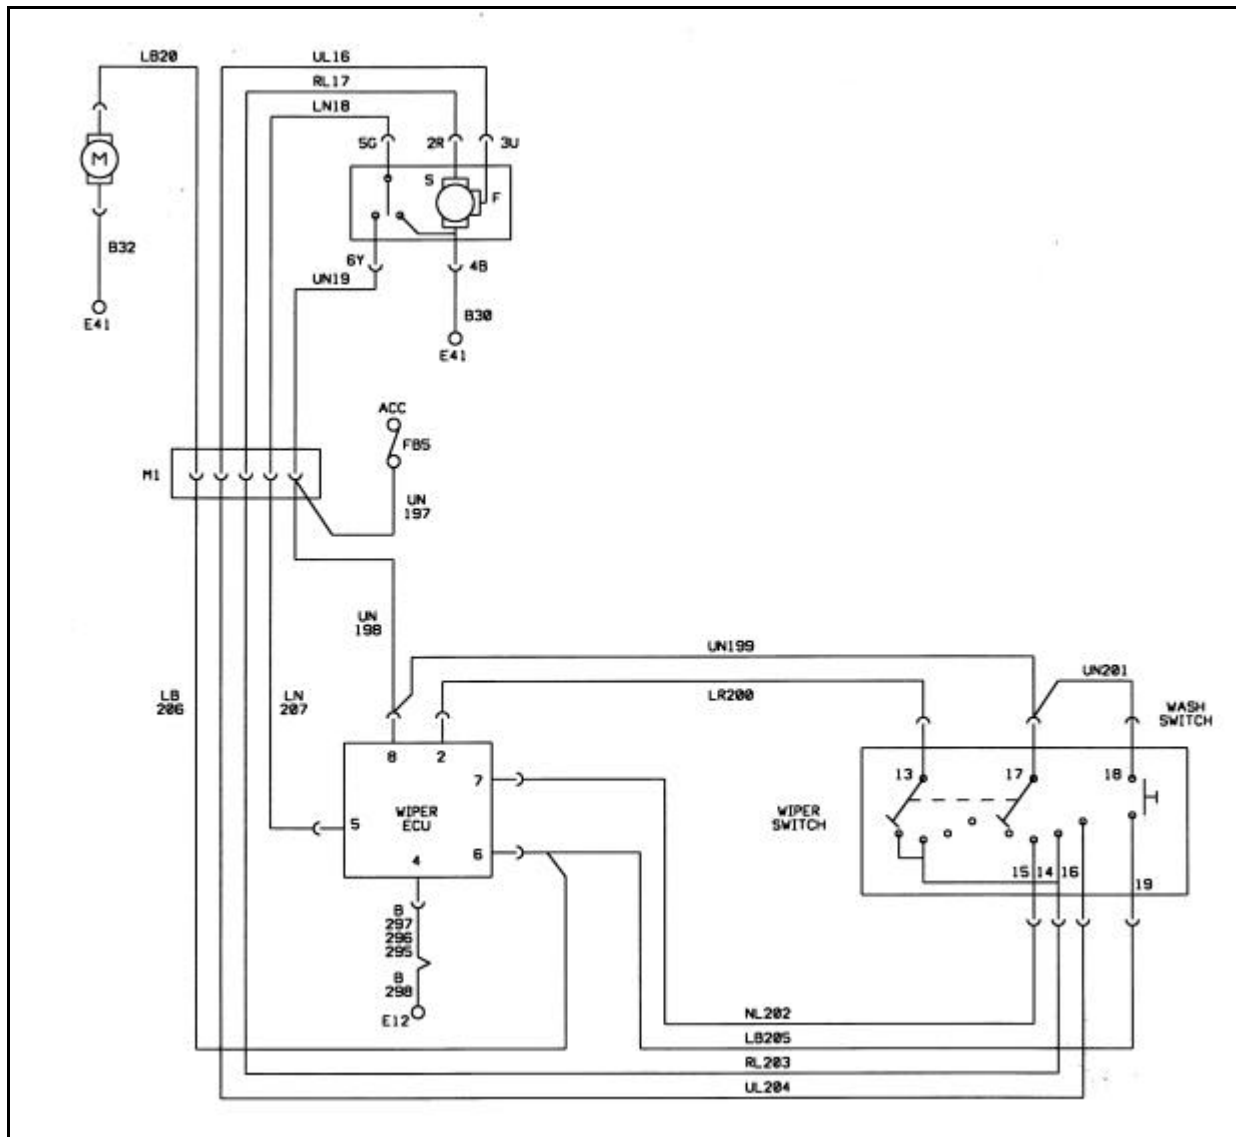WIPE/WASH, FRONT

RHD Diesel Serial Nos: 100016-107214 - Issue 3

- M1 Under bonnet nearside harness to front harness
 E12 Earth point lower left A post
 E41 Earth point near left headlamp

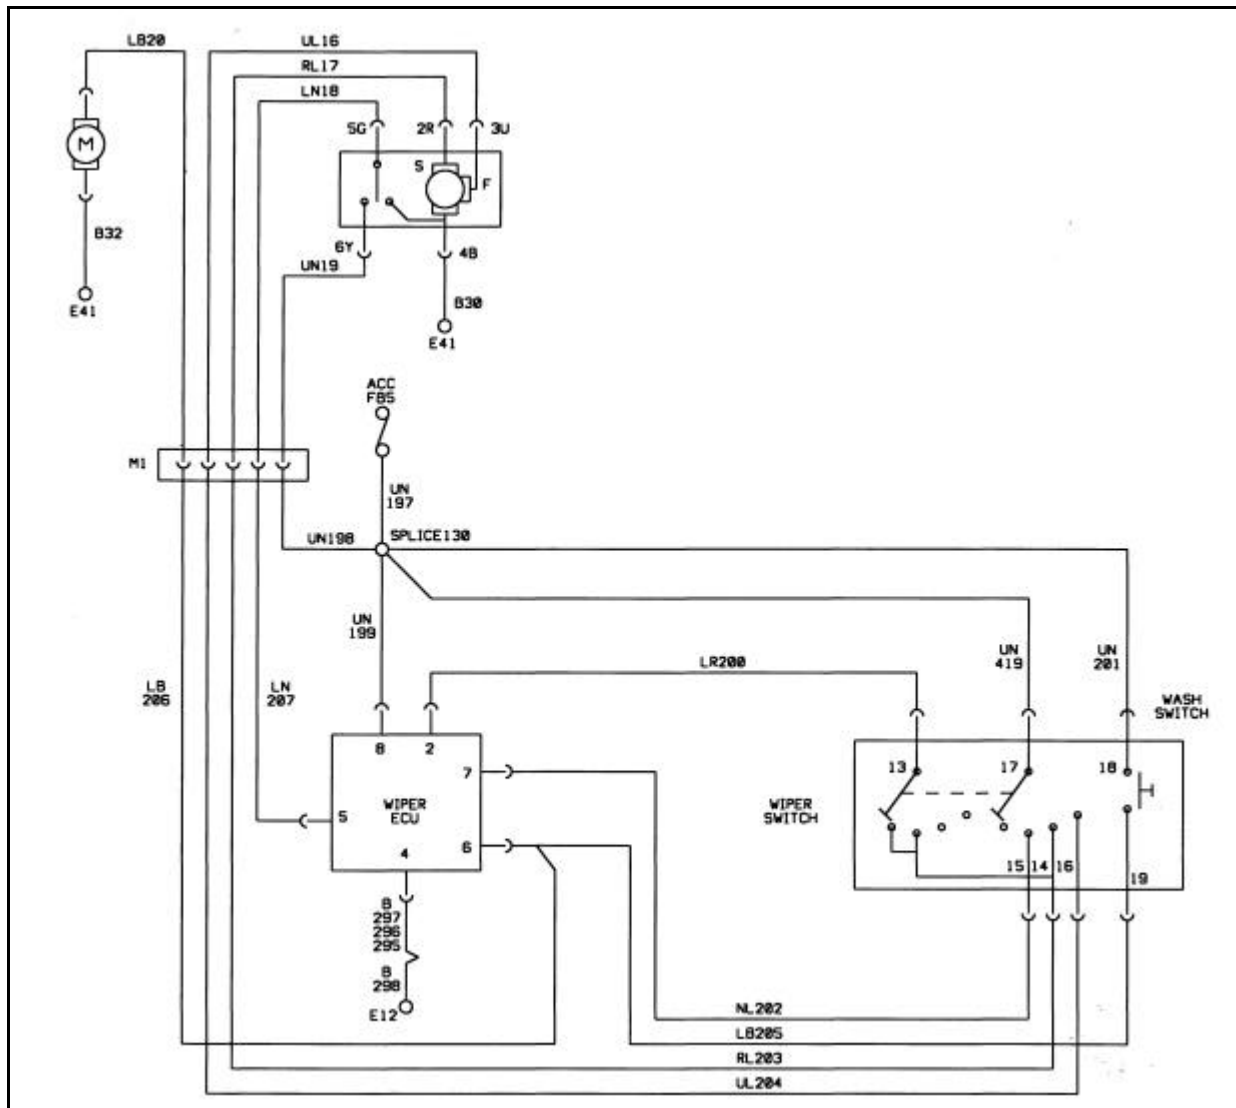
WIPE/WASH, FRONT

RHD Diesel Serial Nos: 107215 onwards - Issue 1

M1 Under bonnet nearside harness to front harness


E12 Earth point lower left A post

E41 Earth point near left headlamp

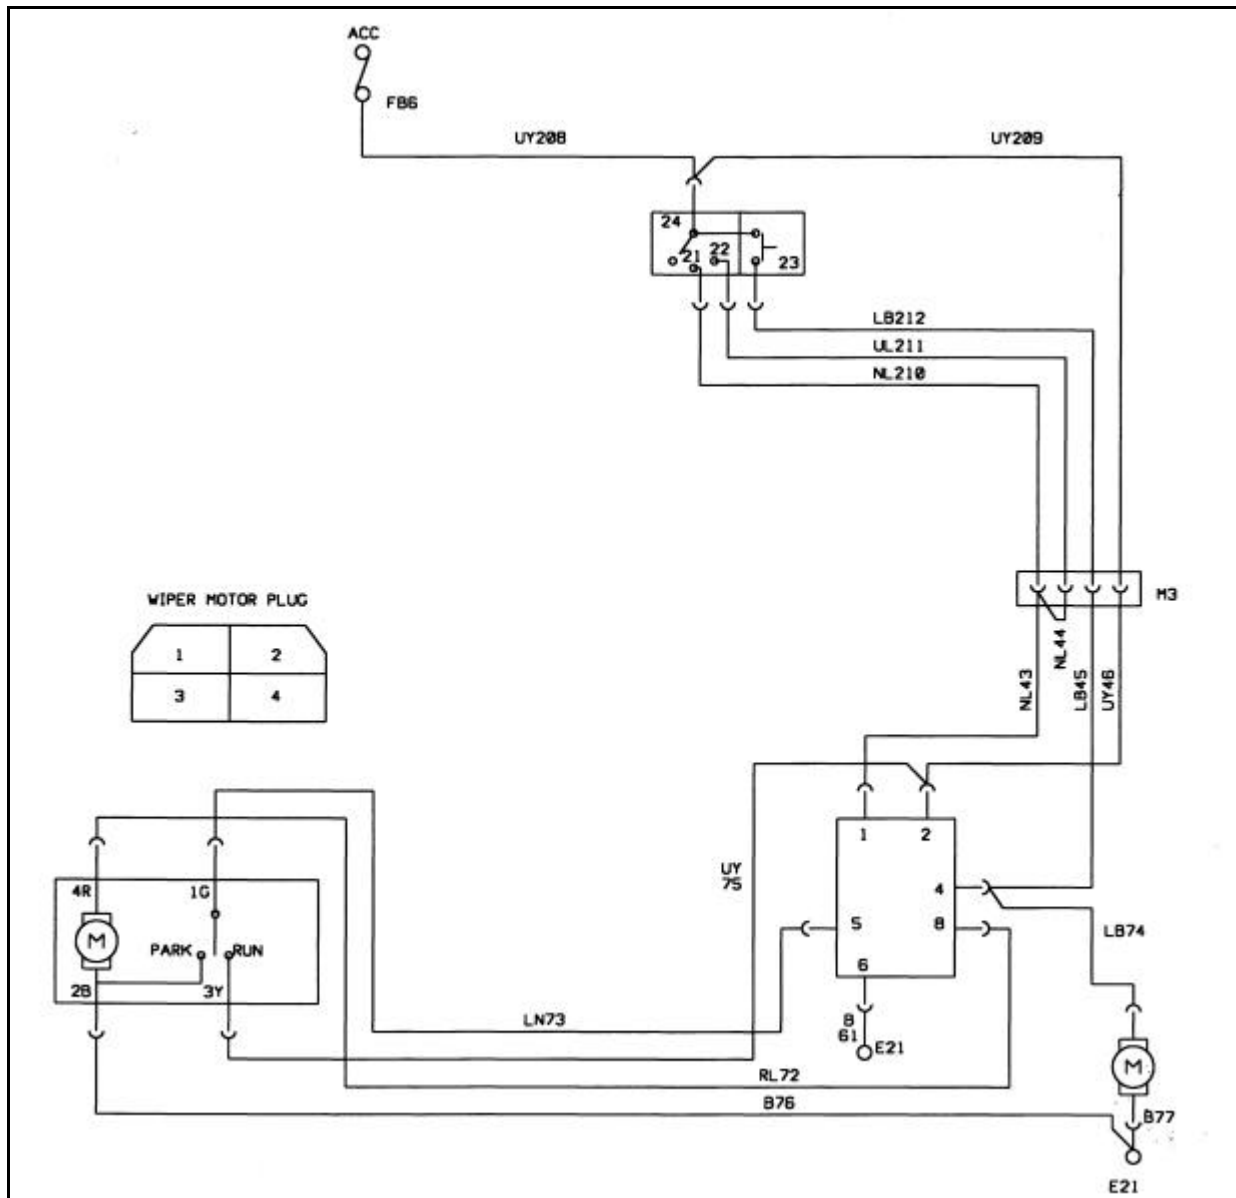WIPE/WASH, REAR

RHD Diesel Serial Nos: 100016-102766 - Issue 2

M3 Rear harness to front-harness
 E21 Earth point rear right lamp cluster

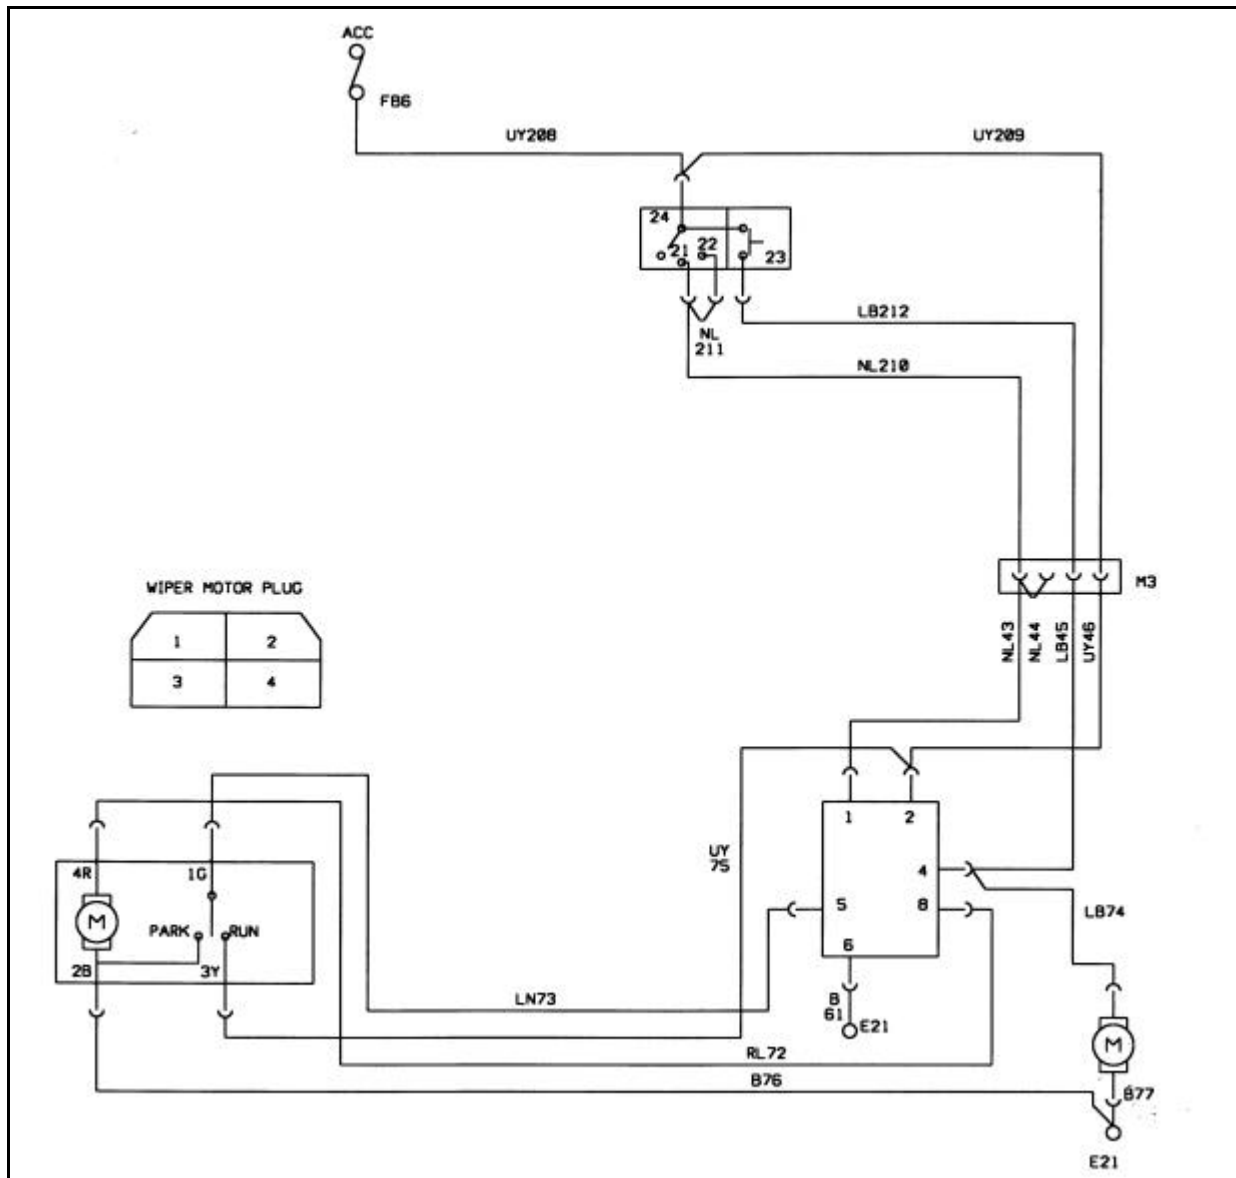WIPE/WASH, REAR

RHD Diesel Serial Nos: 102767 onwards - Issue 1

M3 Rear harness to front-harness

E21 Earth point rear right lamp cluster